



EN	Cordless Ground Trimmer	INSTRUCTION MANUAL	13
ZHCN	充电式手推修剪机	使用说明书	27
ID	Pemangkas Rumput Tanpa Kabel	PETUNJUK PENGGUNAAN	41
MS	Pemangkas Rumput Tanpa Kord	MANUAL ARAHAN	57
VI	Máy tĩa cỏ sát đất dùng pin	TÀI LIỆU HƯỚNG DẪN	73
TH	เครื่องเล็มกิ่งไม้แบบไร้สาย	คู่มือการใช้งาน	87

UG001G



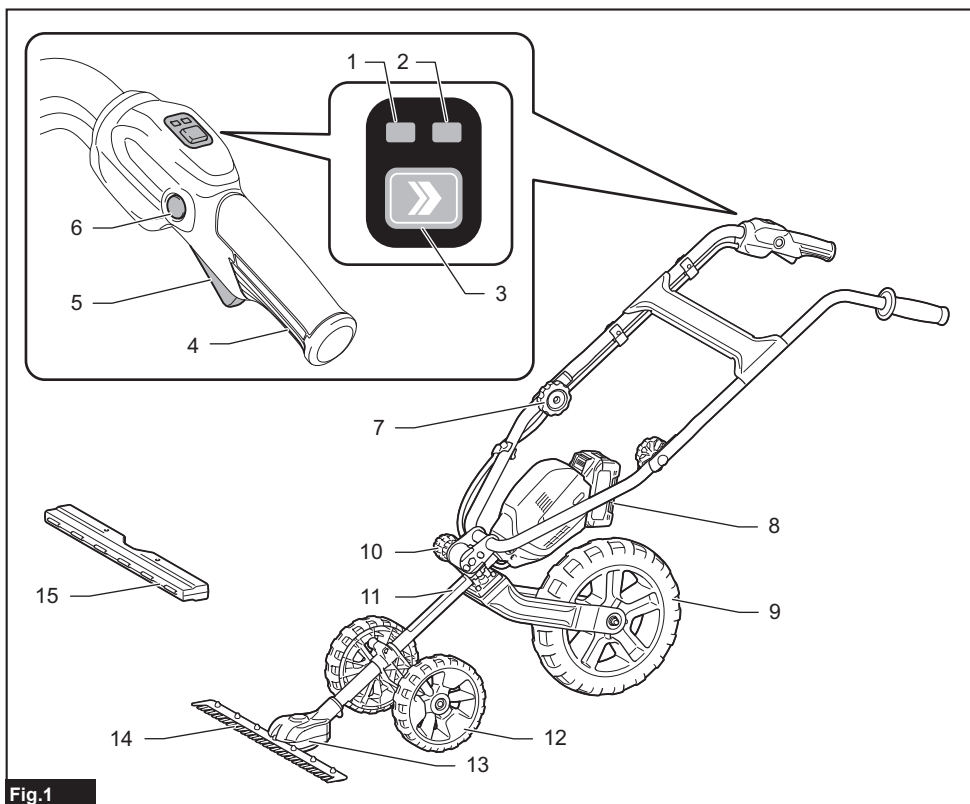 


Fig.1

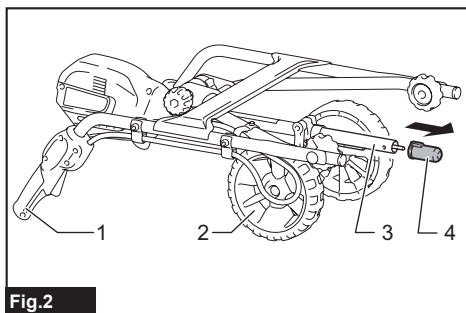 


Fig.2

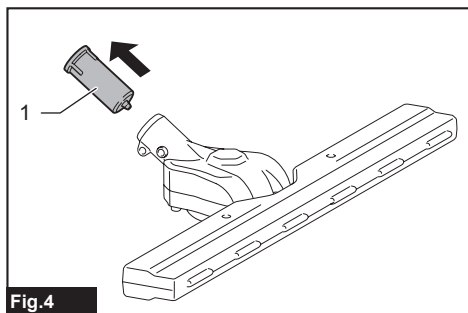 


Fig.4

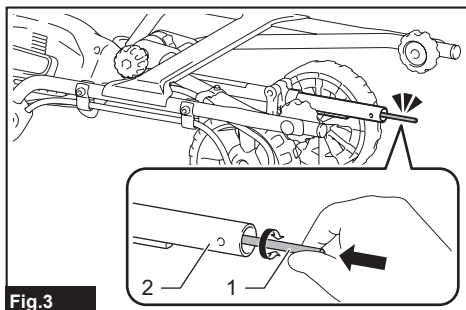 
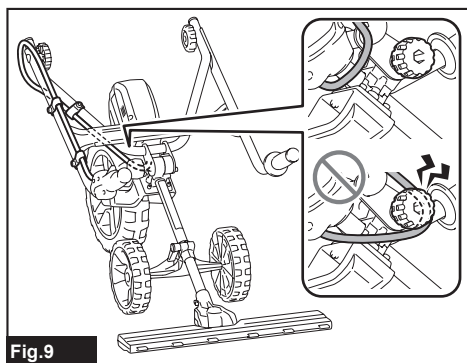 
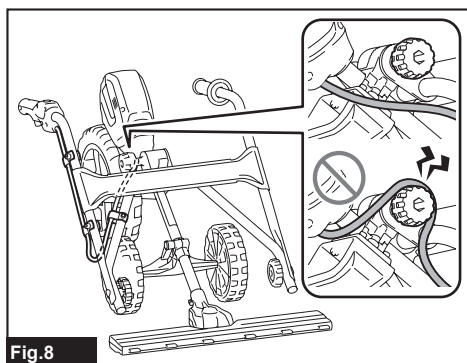 
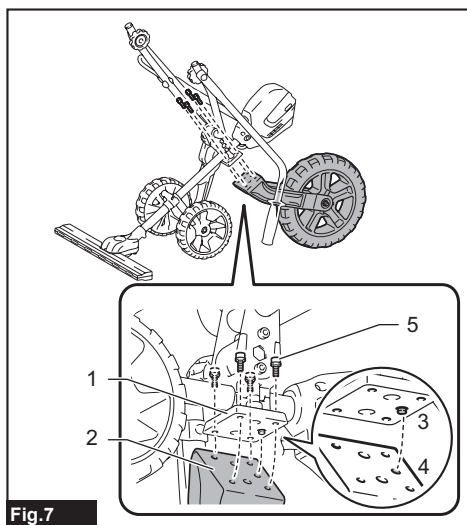 
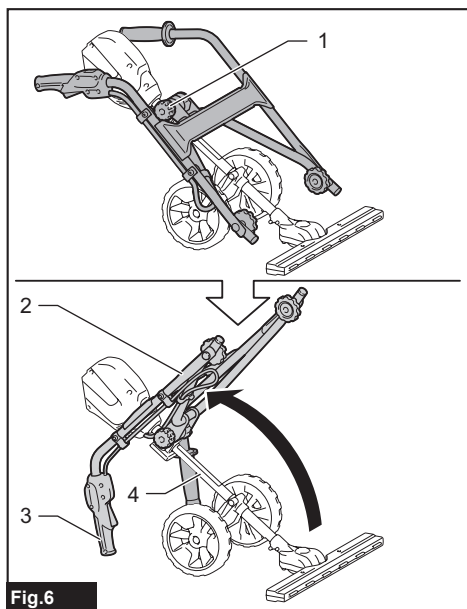 
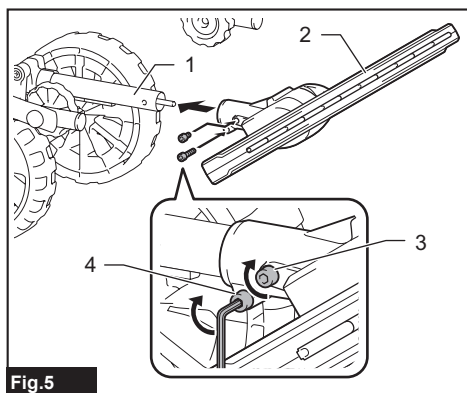 
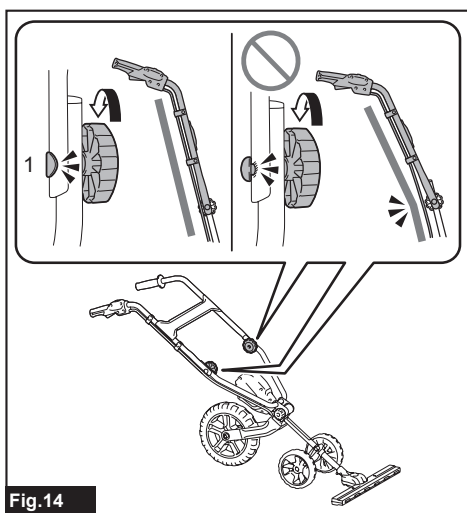 
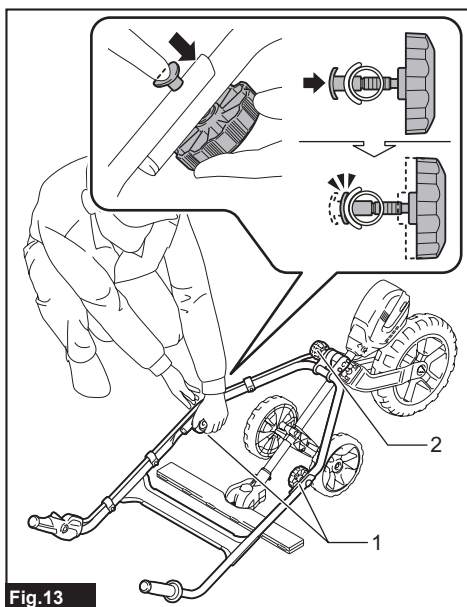 
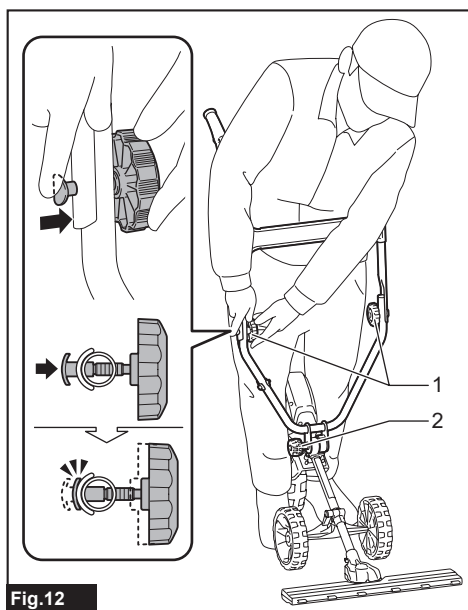 
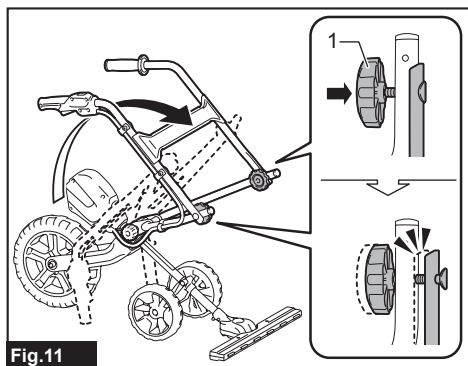 
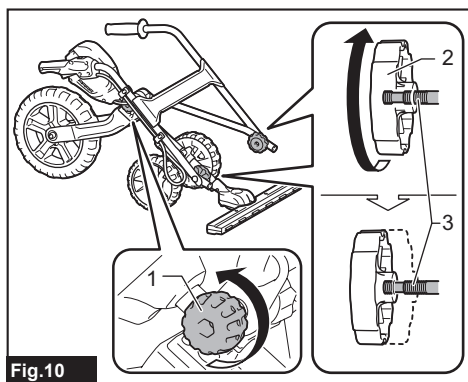 
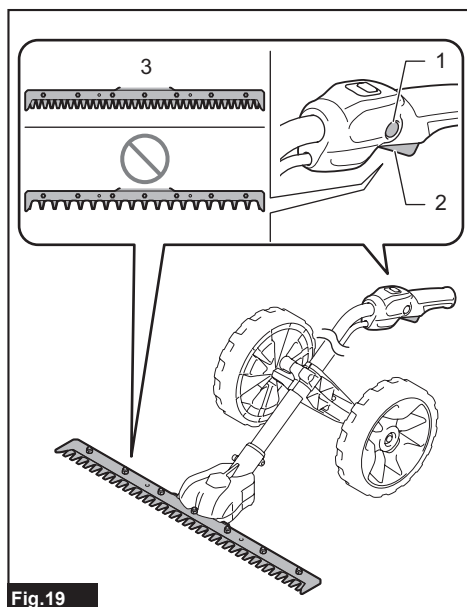 
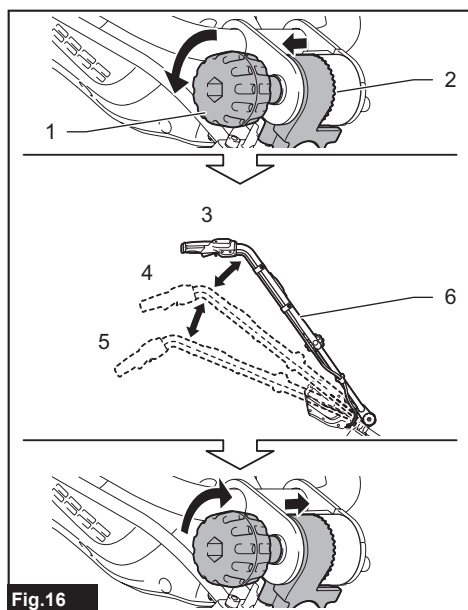 
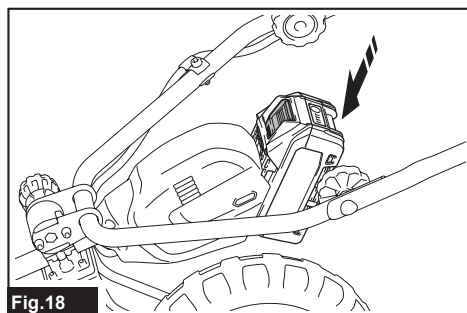 
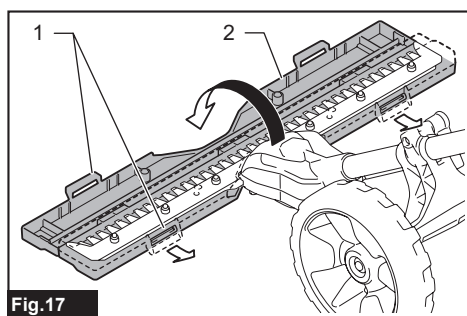 
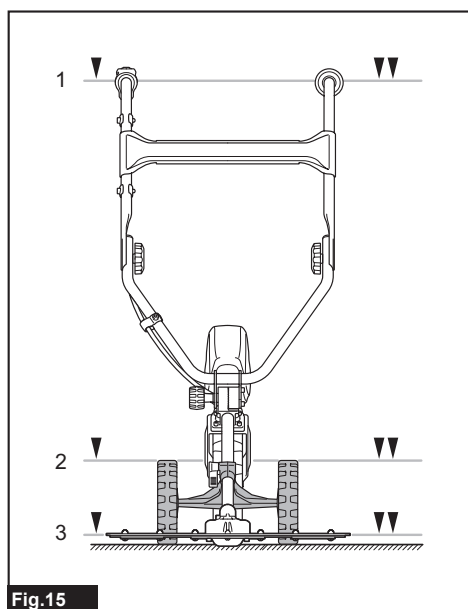 
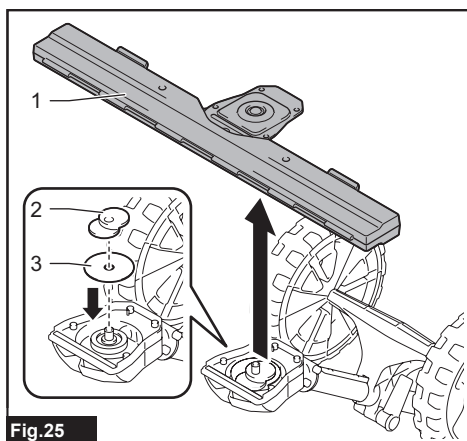 
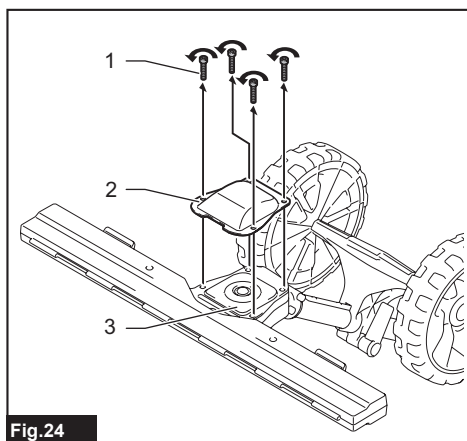 
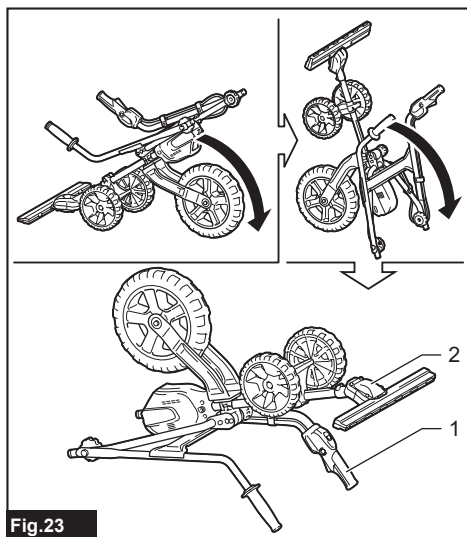 
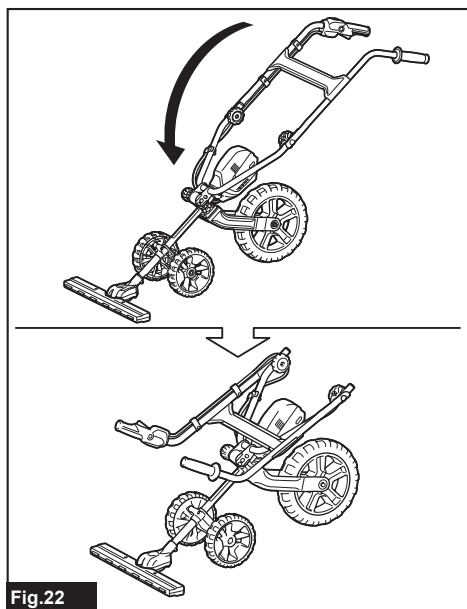 
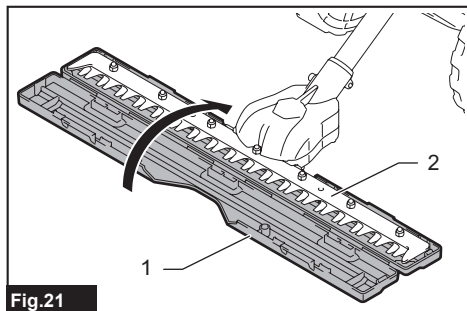 
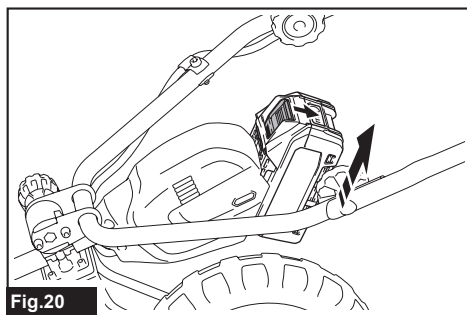 


Fig.3









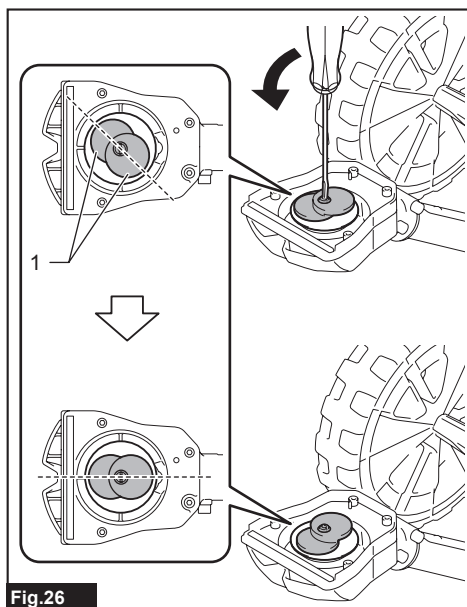 


Fig.26

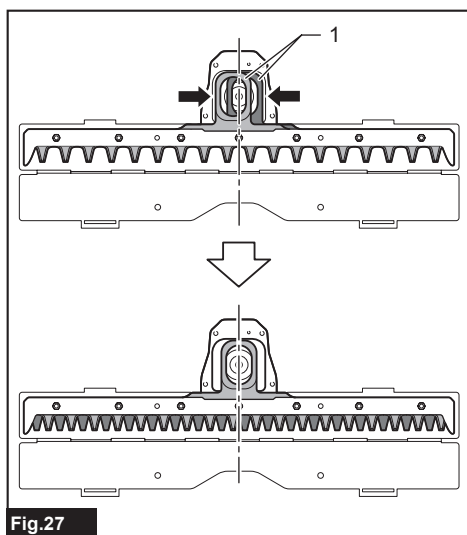 


Fig.27

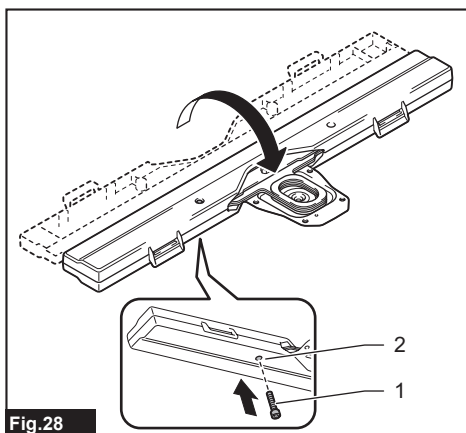 


Fig.28

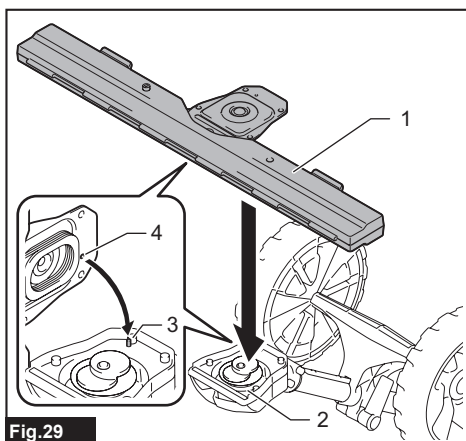 


Fig.29

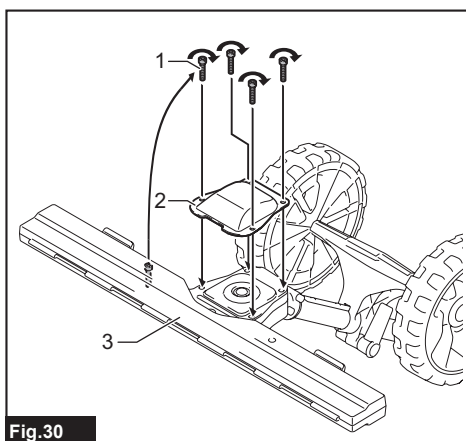 
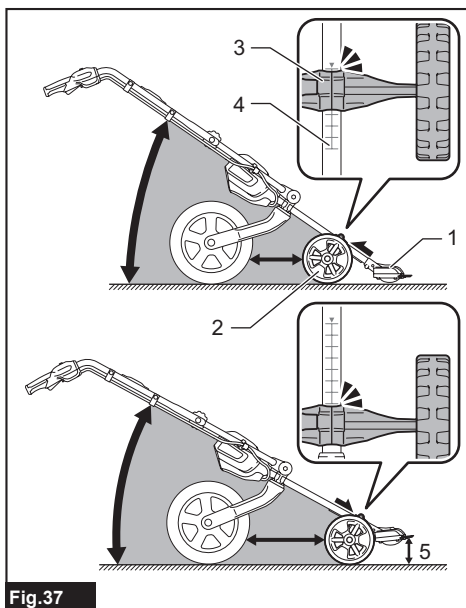 
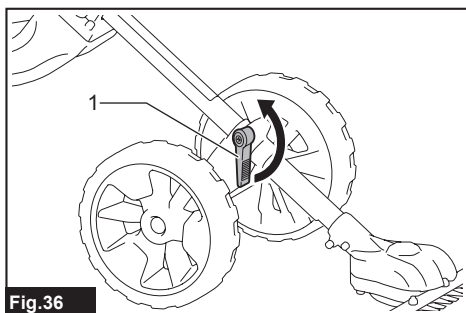 
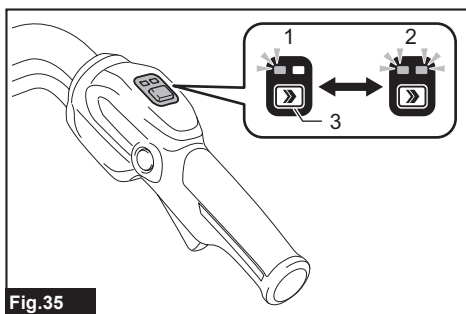 
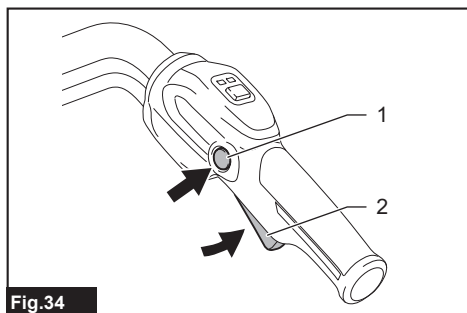 
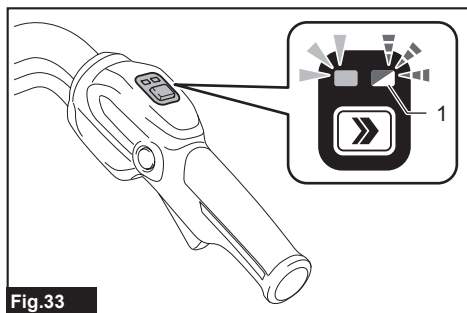 
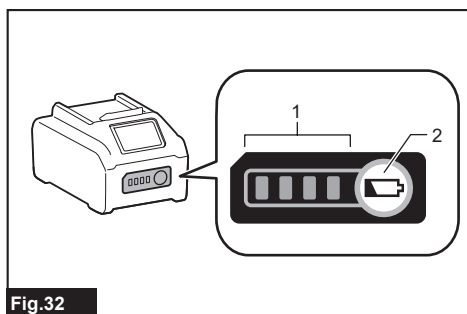 
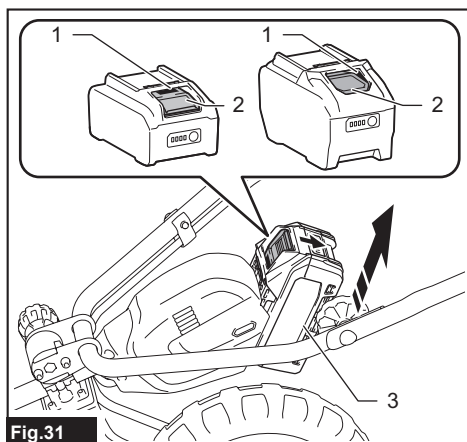 
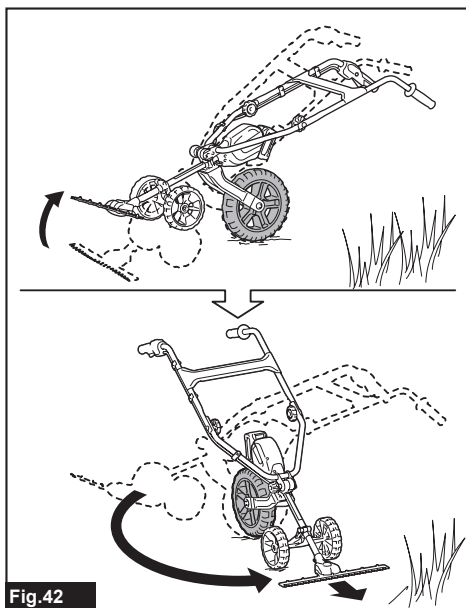 
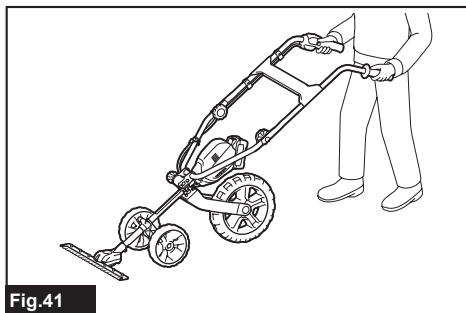 
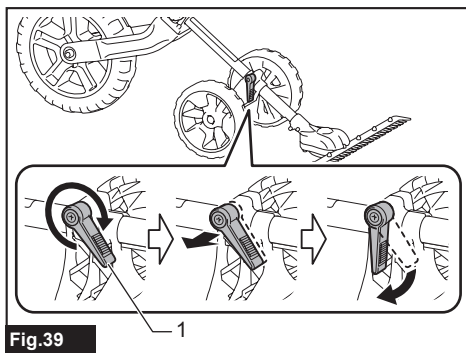 
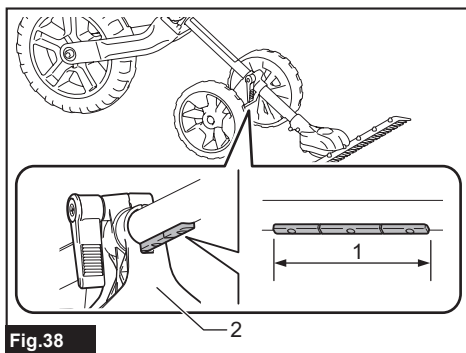 
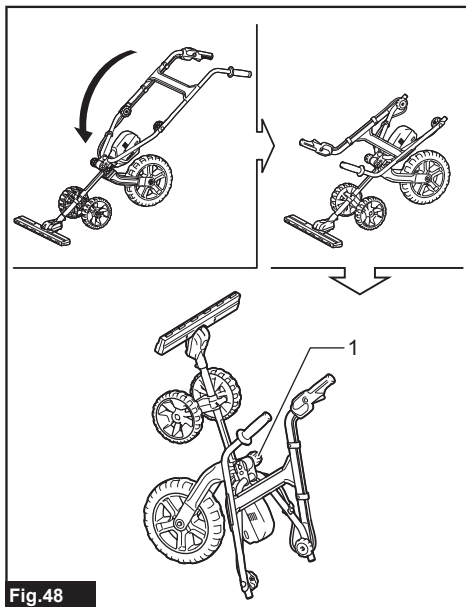 
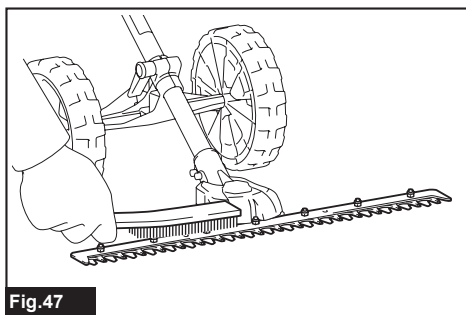 
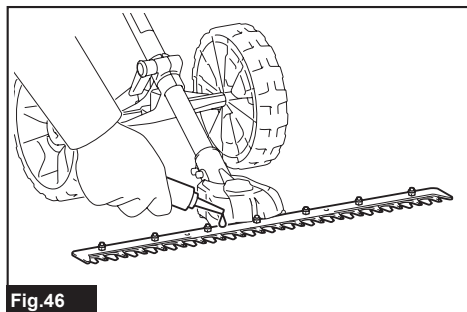 
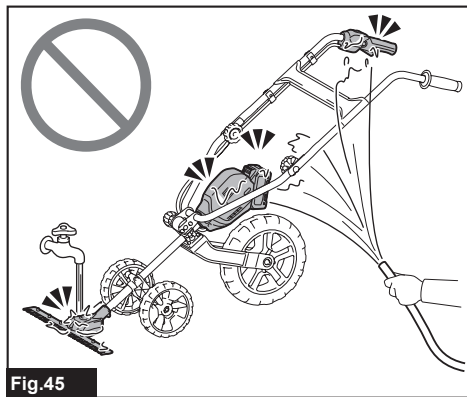 
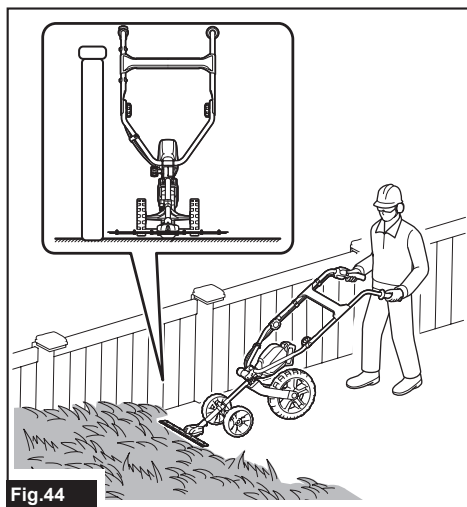 


Fig.30







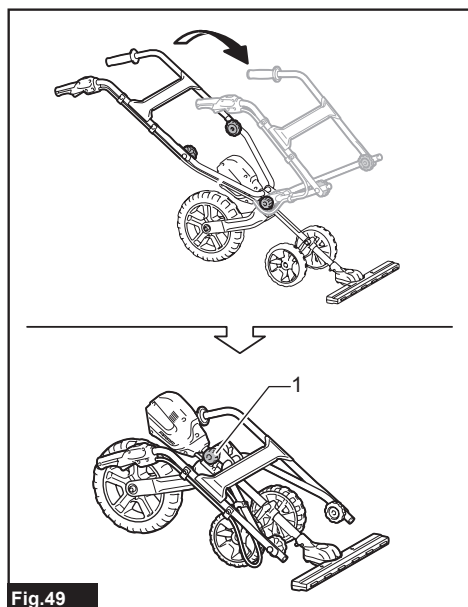 


Fig.49

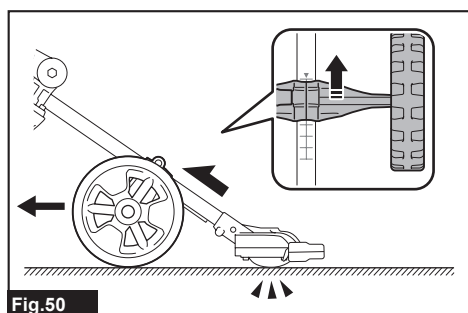 


Fig.50

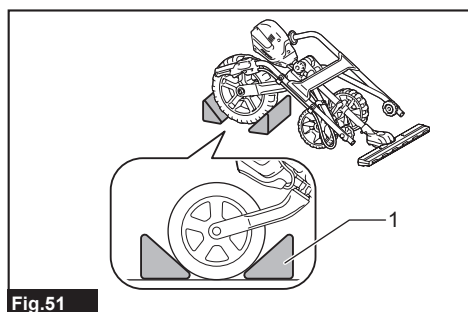 


Fig.51

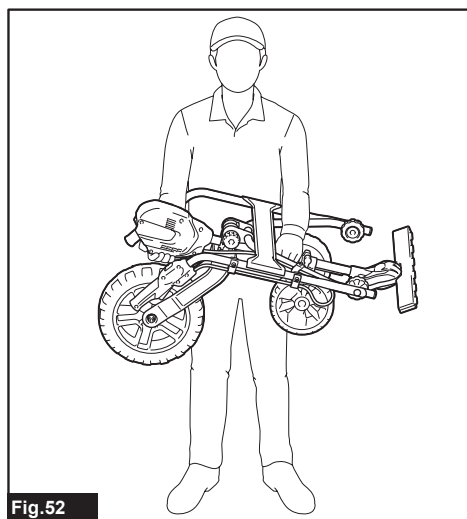 


Fig.52

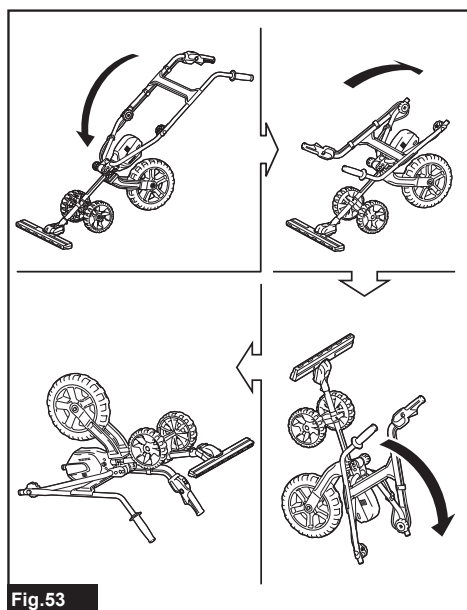 


Fig.53

