



Nothing but **HEAVY DUTY.**[™]



M18 BOS125

User Manual

 
 
 
操作指南

 
 
 
 
 
操作指南

 
사용시 주의사항

คู่มือการใช้

Buku Petunjuk Pengguna

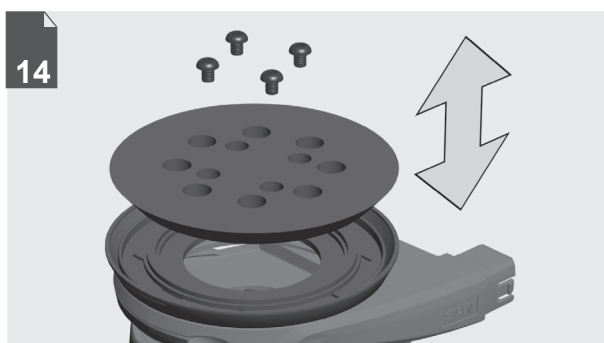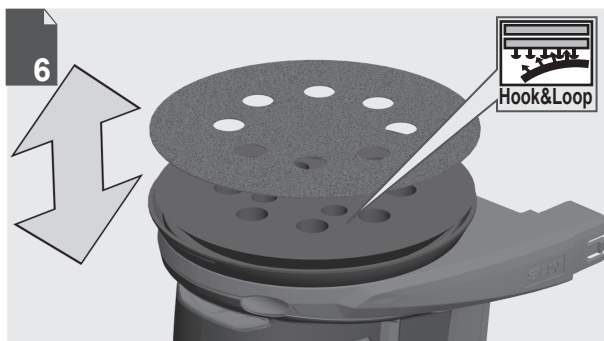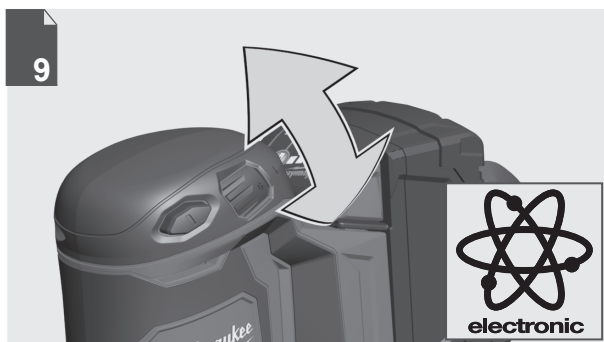

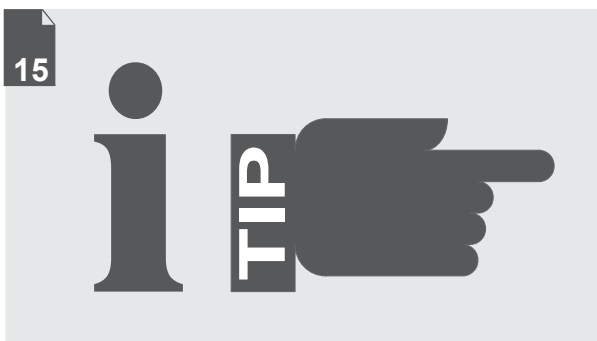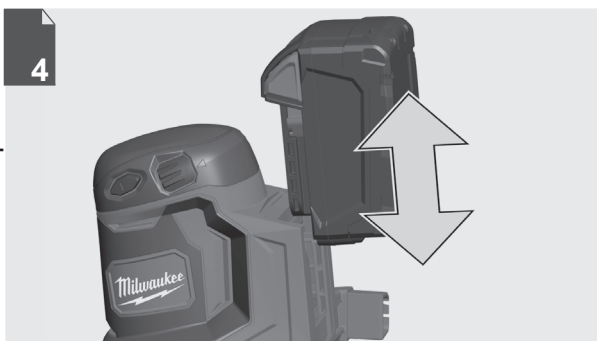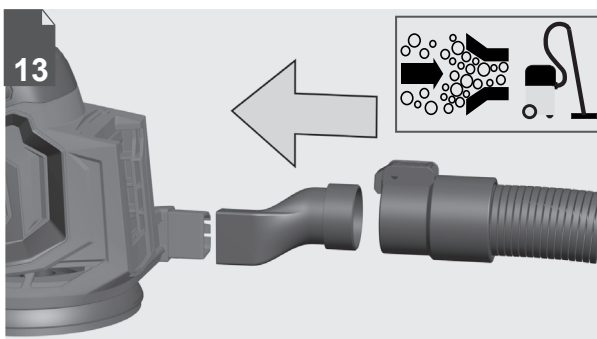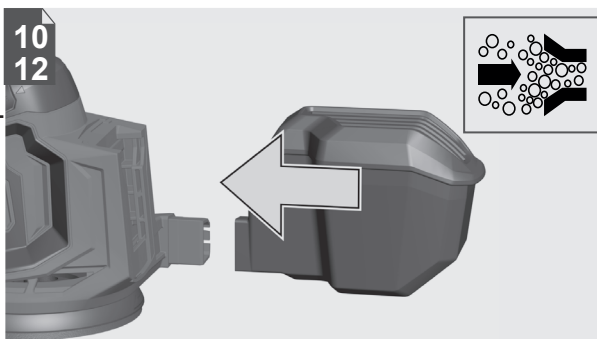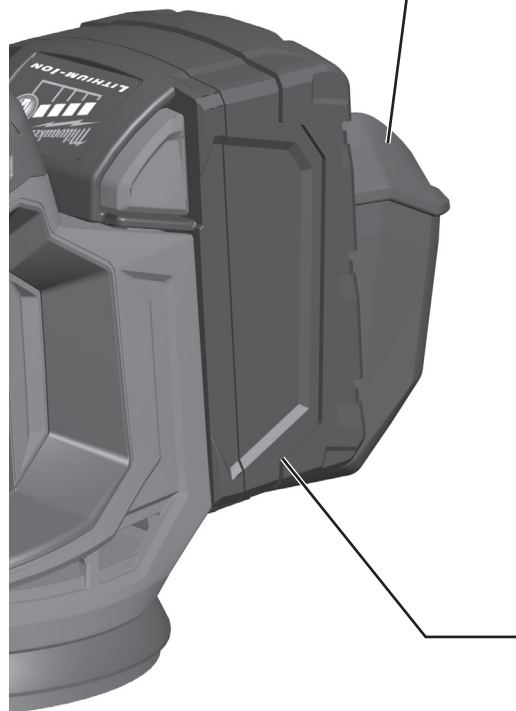

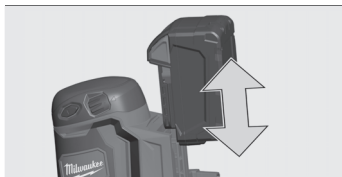

Remove the battery pack before starting any work on the product.

對產品進行任何工作前，先移除電池。

 
对产品进行任何工作前，先移除电池。

제품에서 어떠한 작업을 시작하기 전에 배터리 팩을 제거하십시오.

ถอดชุดแบตเตอรี่ออกก่อนเริ่มการทำงานใด ๆ กับผลิตภัณฑ์

Lepaskan paket baterai sebelum memulai pekerjaan apa pun pada produk.


1

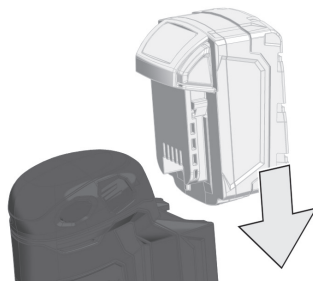


2







 
1

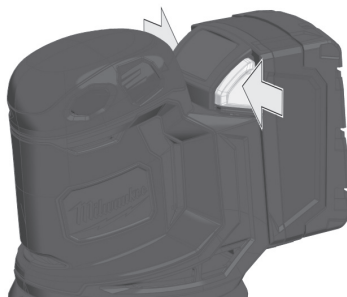


2

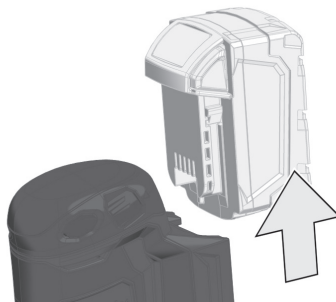 

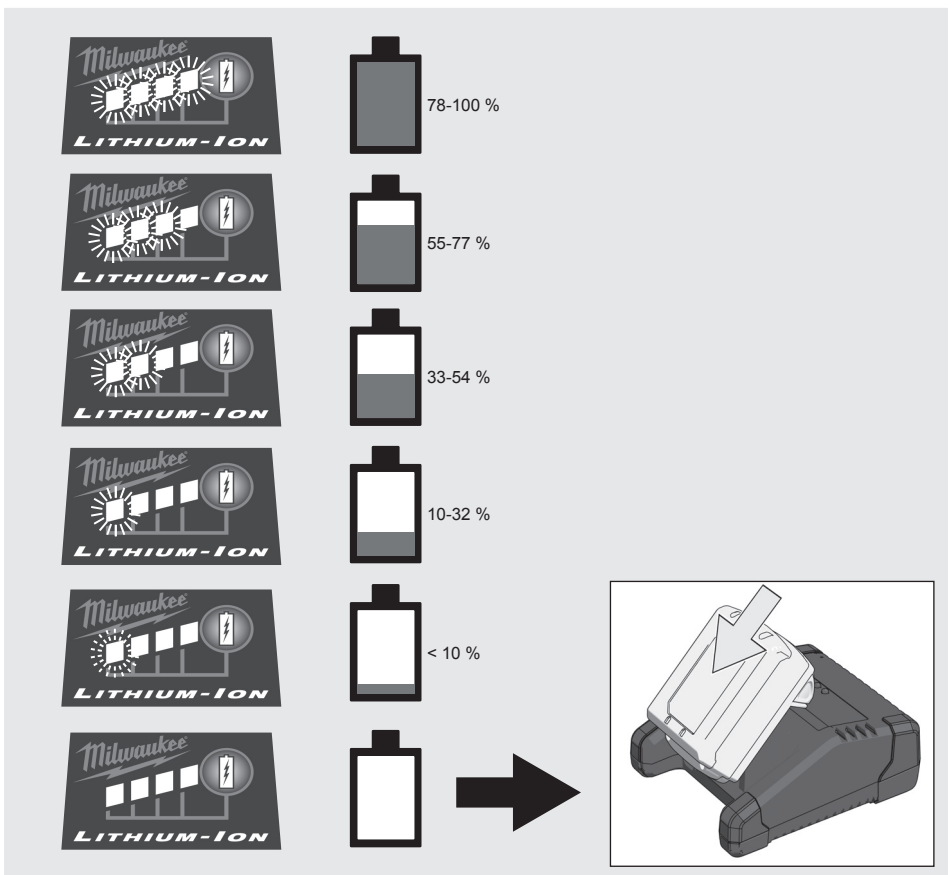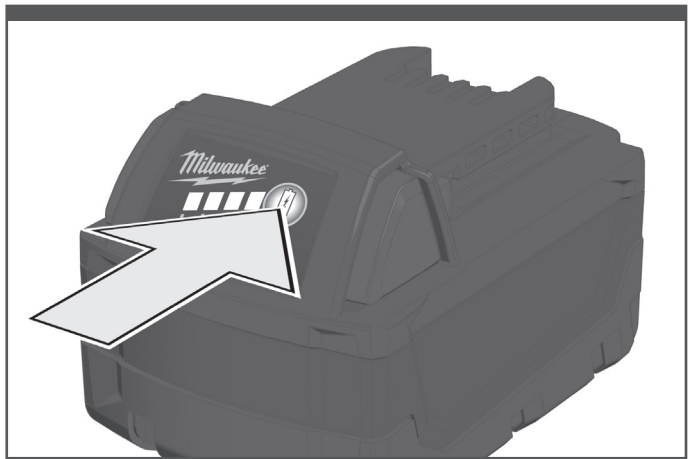  


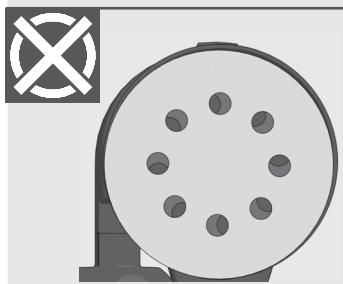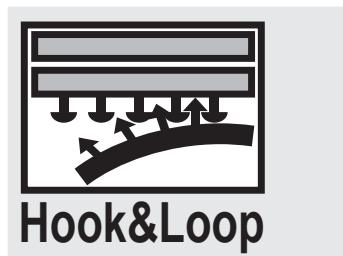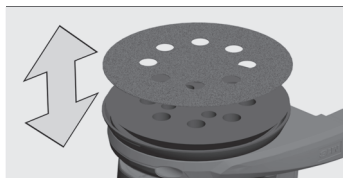   

1

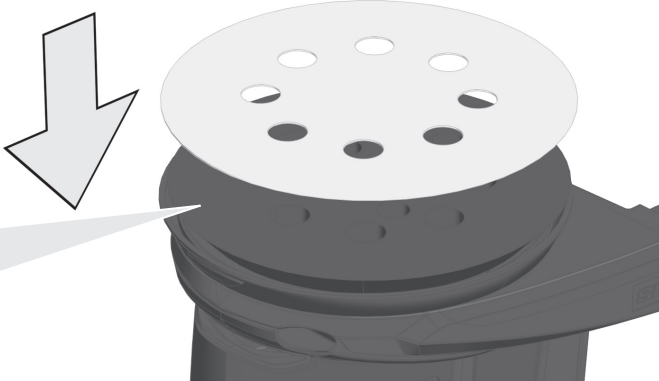 

2

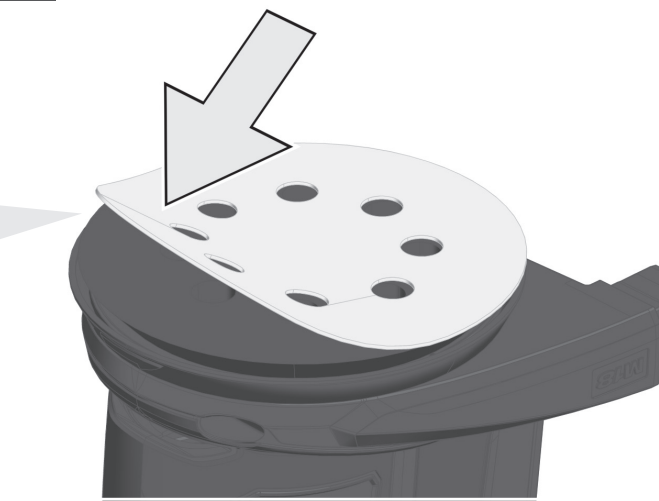 

Carefully and firmly press the appropriate side of the sanding disc against the backing pad.

小心地將打磨盤的毛茸的面壓在包裝墊上，盡可能牢固。

小心地将打磨盘的毛茸的面压在包装垫上，尽可能牢固。

샌딩 디스크의 퍼지 측을 가능한 한 확실히 포장 패드 방향으로 주의하여 밀어넣으십시오.

กดด้านหน้าของกระดาษทรายกลมเข้ากับแผ่นรองให้แน่นที่สุดเท่าที่จะเป็นไปได้

Tekan dengan hati-hati sisi fuzi piringan pengampelasan pada pad kemasan, sekuat mungkin.



Insulated gripping surface

絕緣的夾持表面

 
绝缘夹持表面

절연 그립 표면


พื้นผิวจับกันความร้อน


Permukaan genggam berinsulasi

START

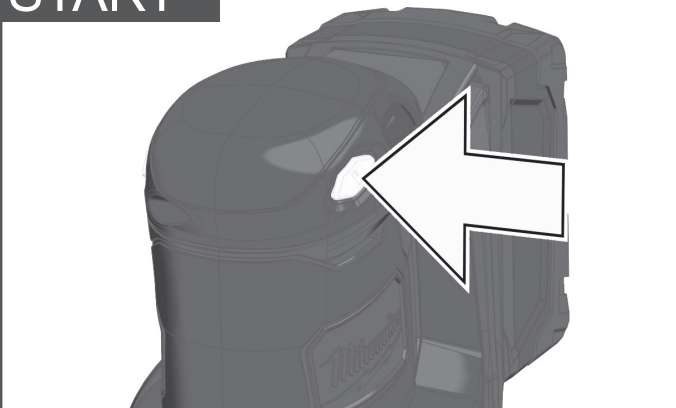

STOP

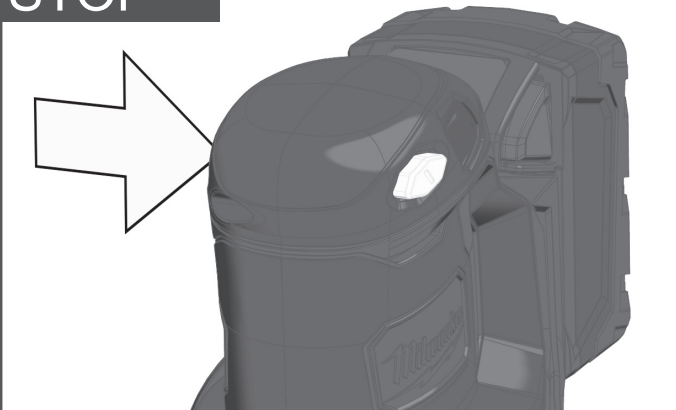 


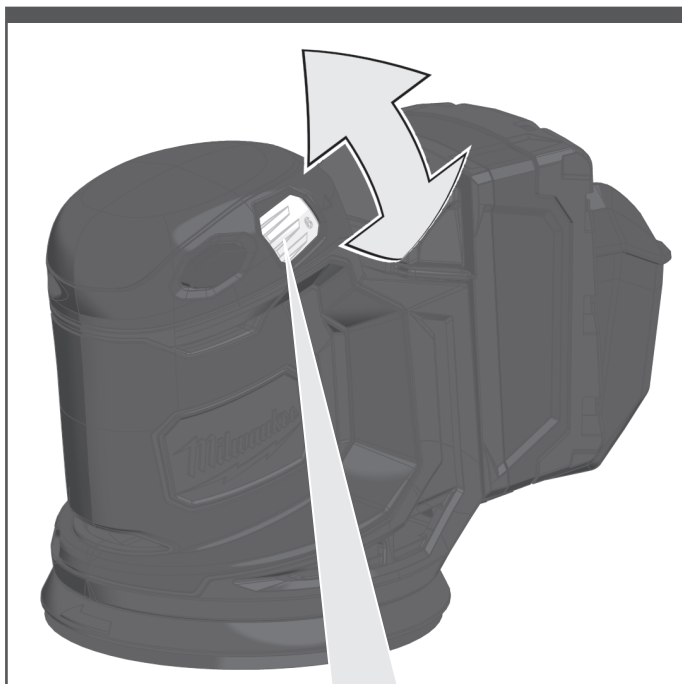 

1...2




 
3...4




METAL




   5...6




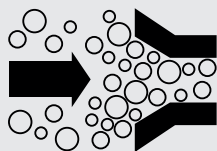


1

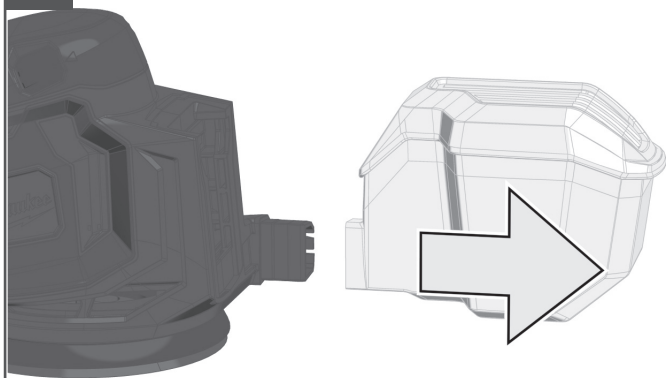 




2

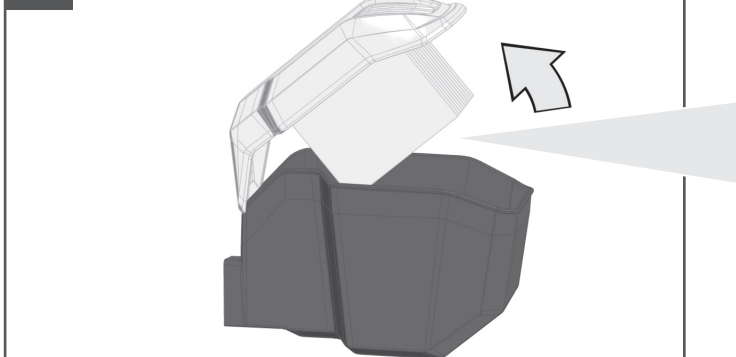 

3

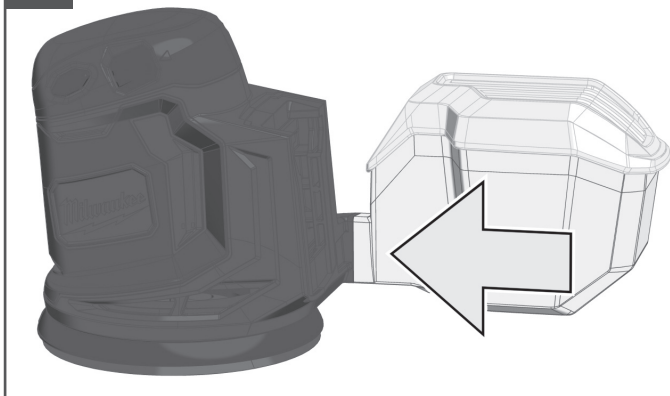 

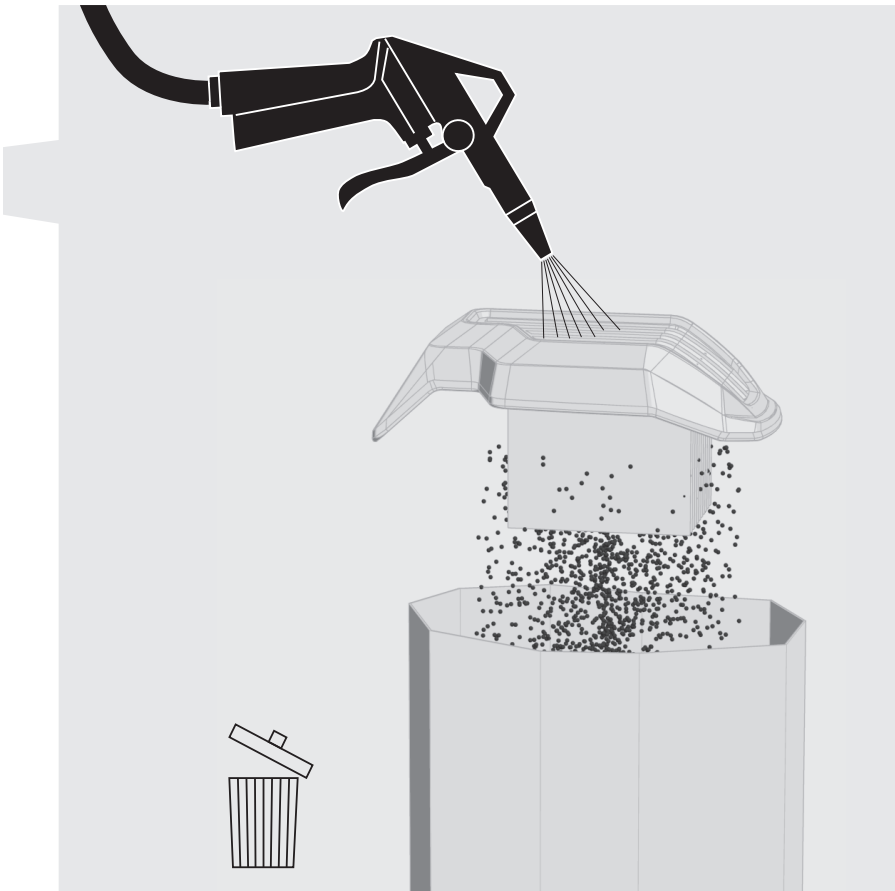 


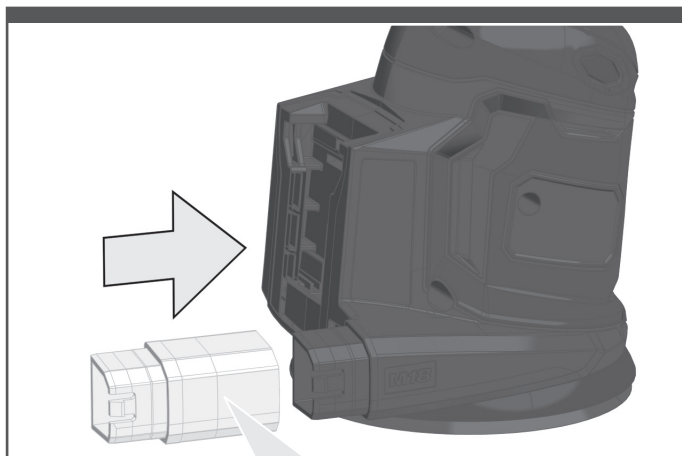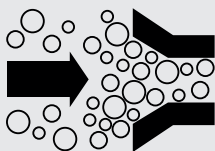  


M18B2
M18B3
M18B4
M18B5
M18B6




  M18B9
M18HB12

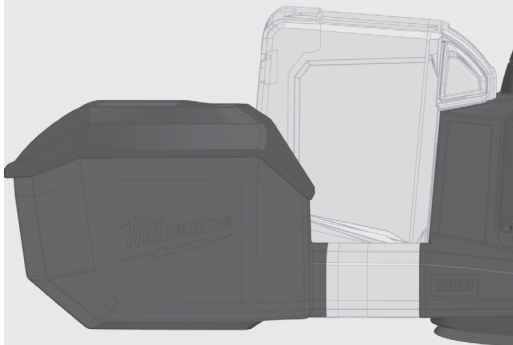


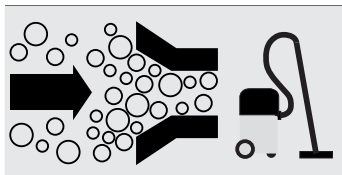


1

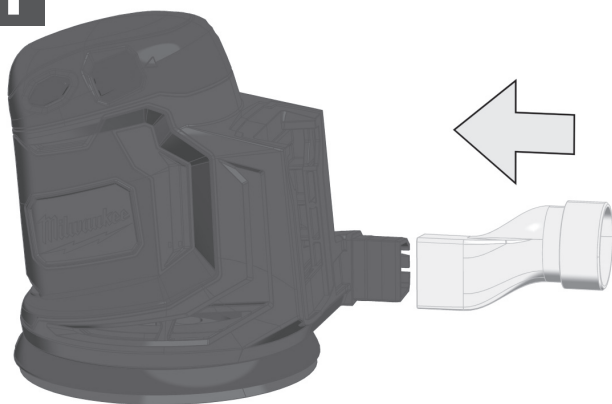 


2

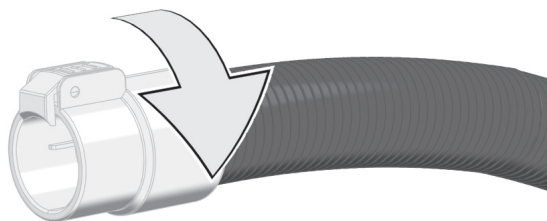 

3

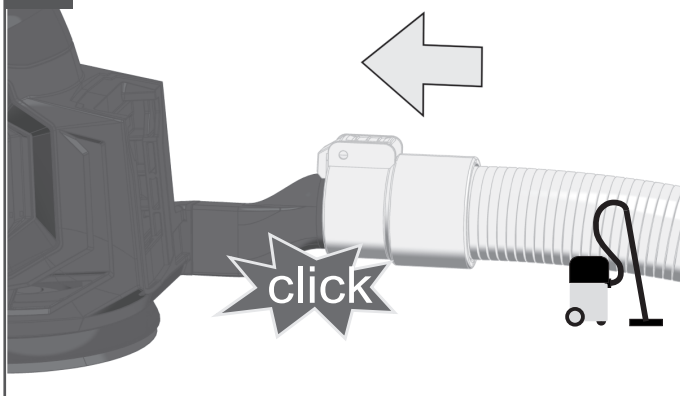 

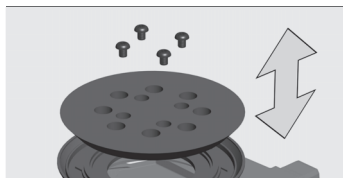 

Replace sanding base if hook & loop material is worn out.

如果鈎環材料磨損，請更換打磨底座。

 
如果钩环材料磨损，请更换打磨底座。

후크 및 루프 소재가 마모된 경우 샌딩 기저부를 교체하십시오.


เปลี่ยนกระดาษทรายหากวัสดุยึดและห่วงสึกหรอ

Ganti alas pengampelasan jika material pengait (hook) & loop sudah aus.

1

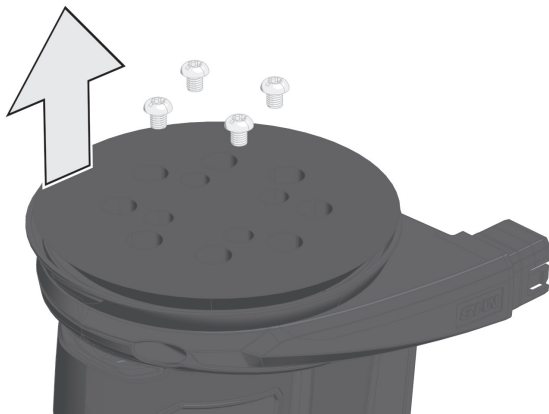

2

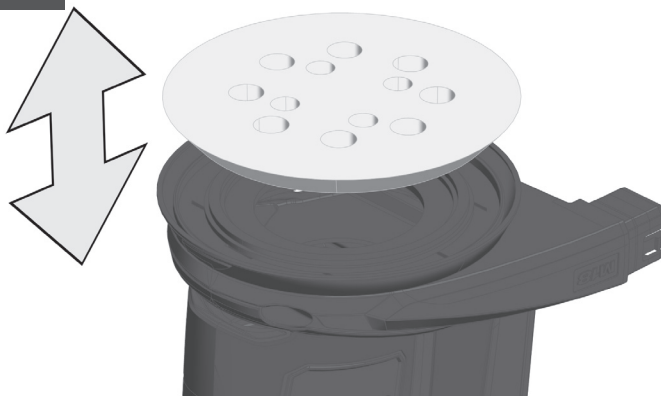 

3

