

 
 
 
 
 
 


 
 
 
 
 
 
 
 
Nothing but **HEAVY DUTY.**



M18 F2GTR


- ⓔⓃ User Manual
- Ⓩⓗ 操作指南
- Ⓩⓗ 操作指南
- Ⓚⓞ 사용시 주의사항
- Ⓣⓗ คู่มือการใช้งาน
- ⓓⓔ Buku Petunjuk Pengguna
- Ⓥⓞ Cẩm nang hướng dẫn sử dụng
- ⓙⓐ 取扱説明書

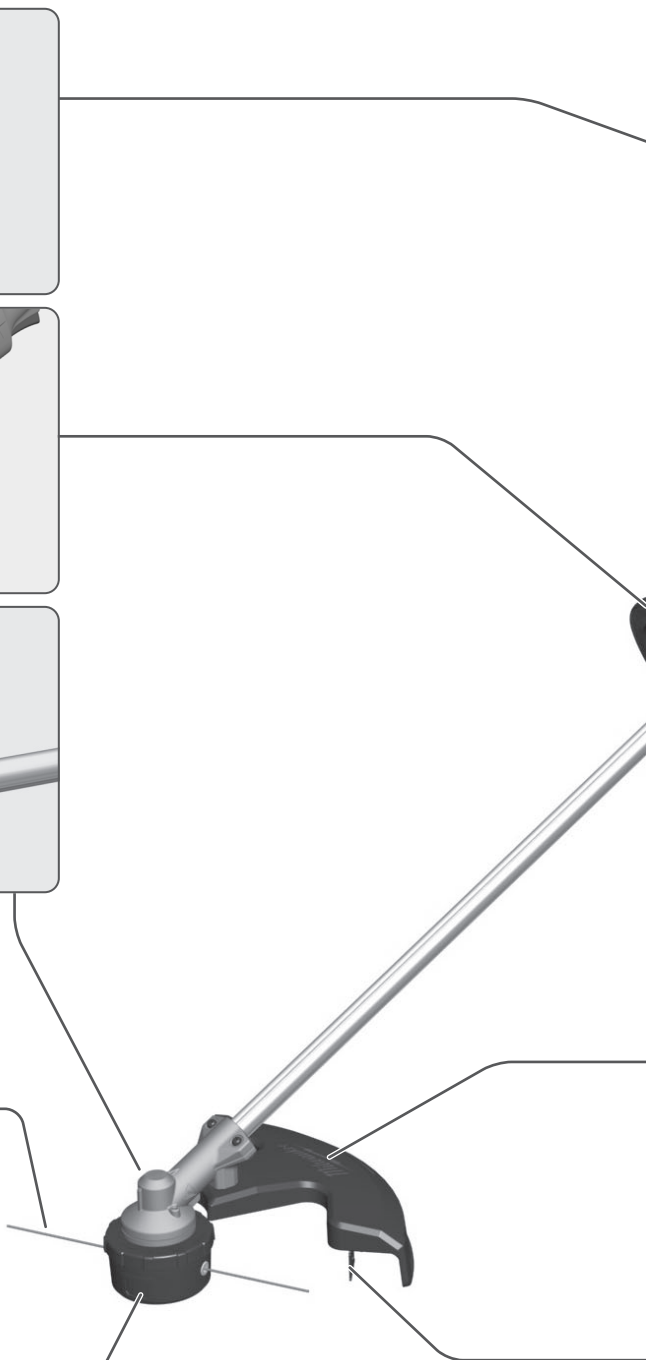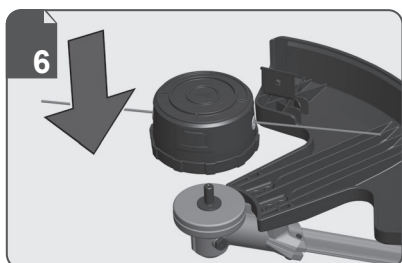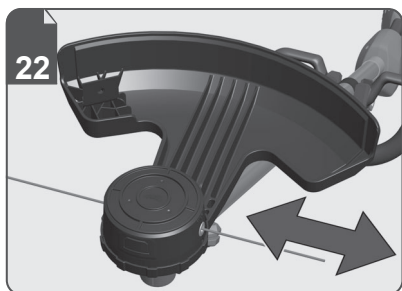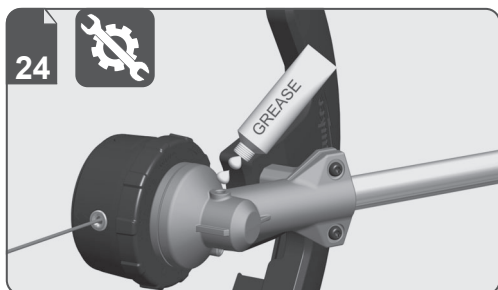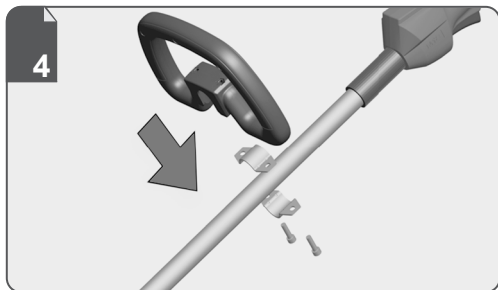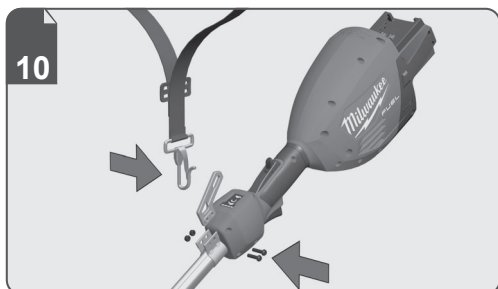

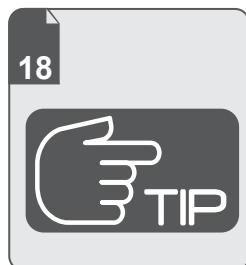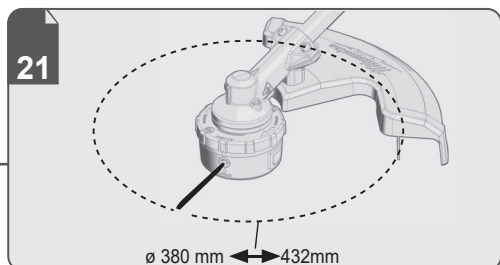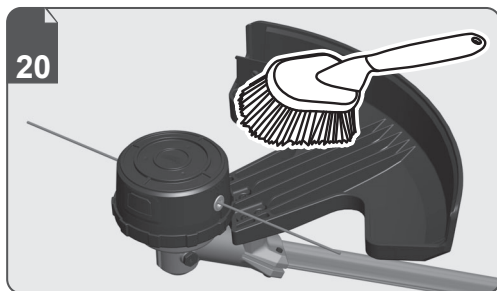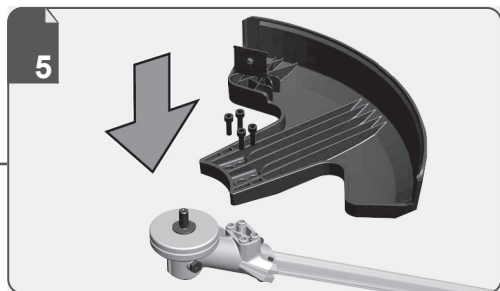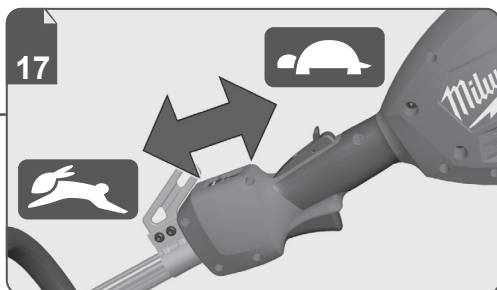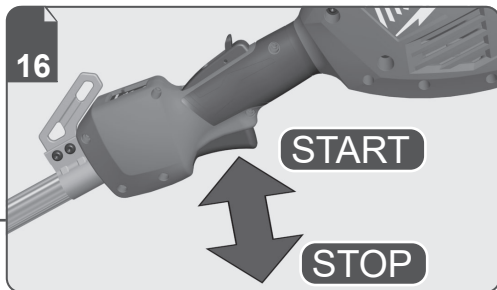
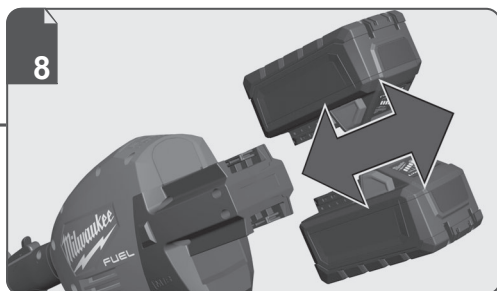
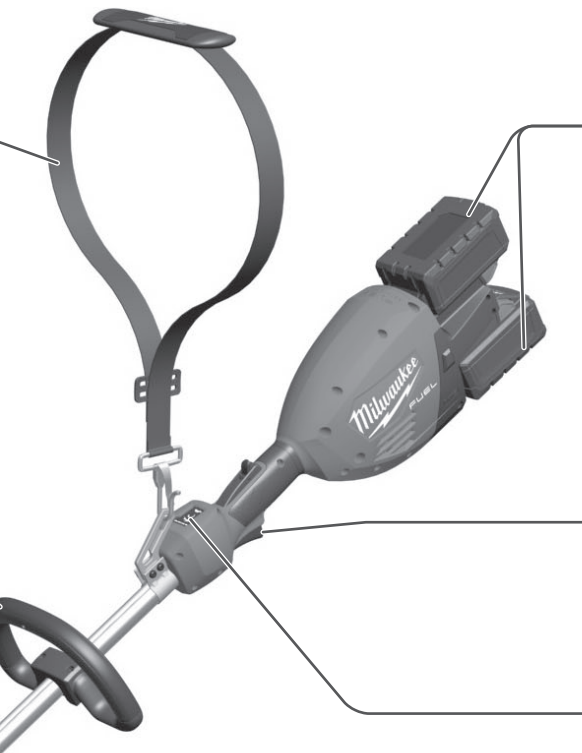





1

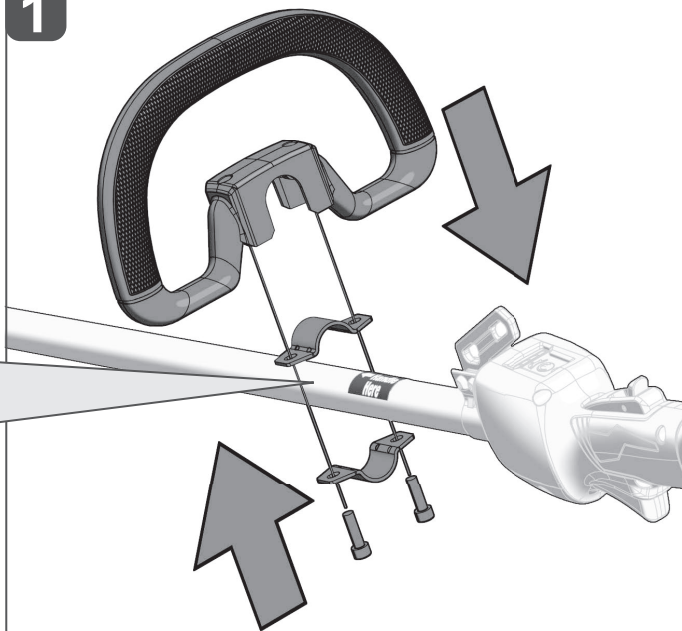 


2

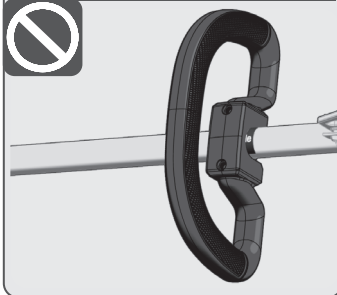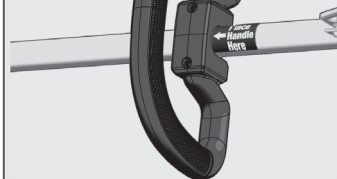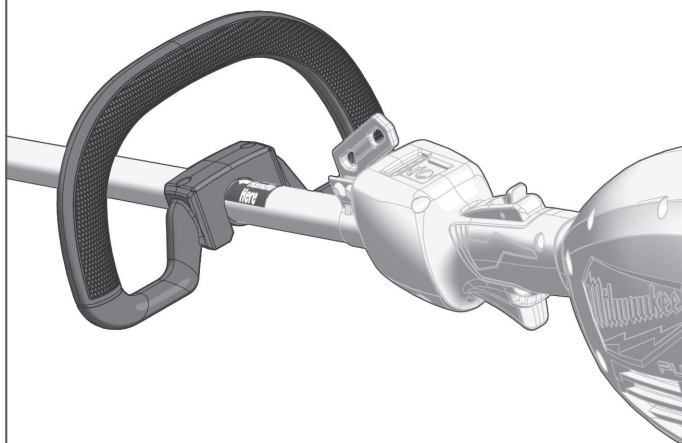   


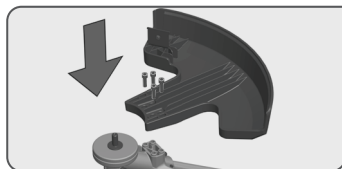 


1

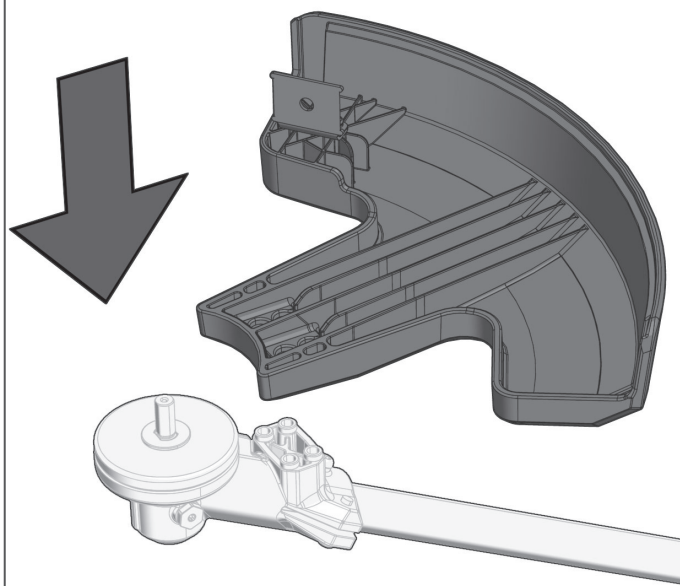 


2


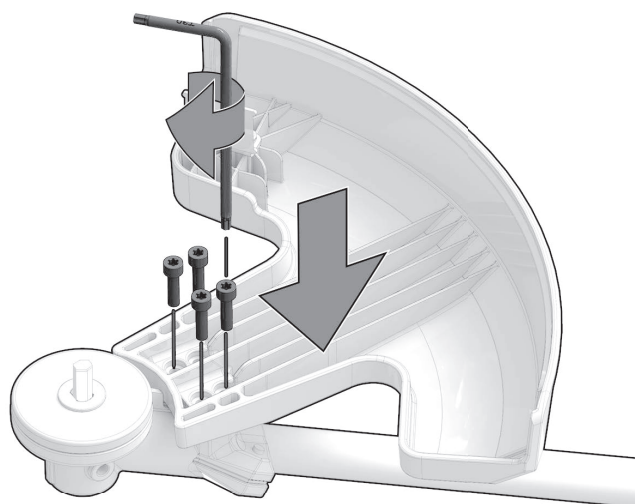 


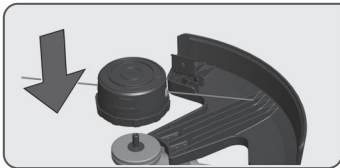 


1

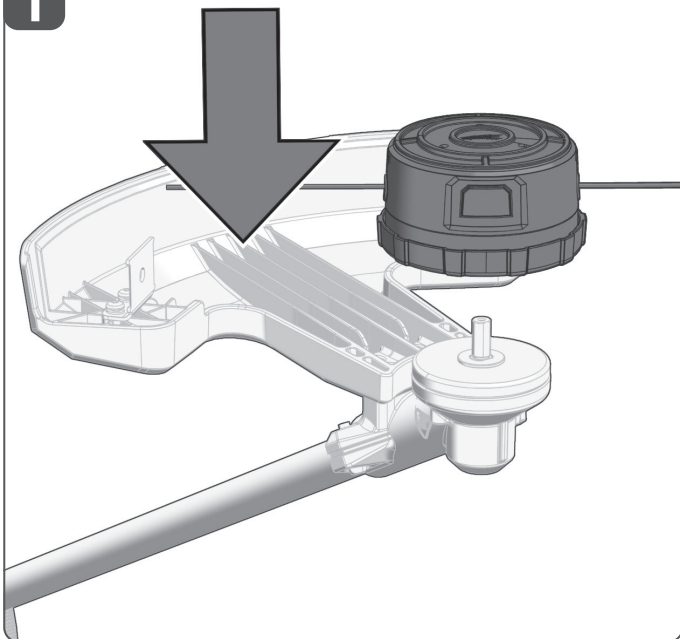 


2

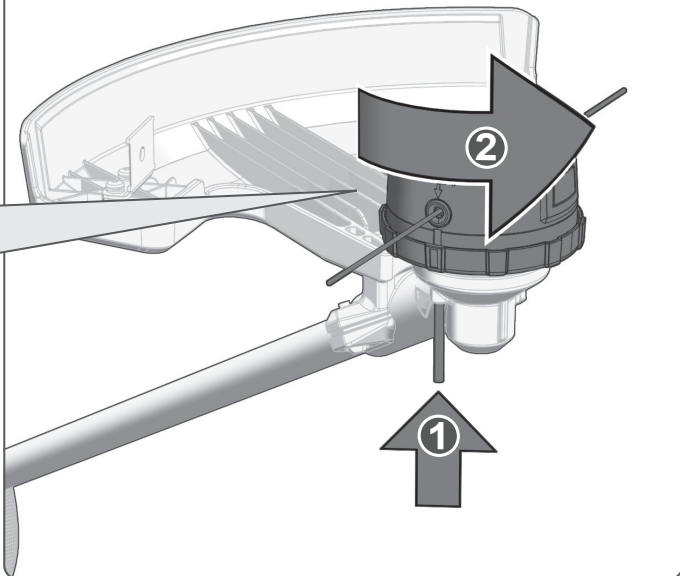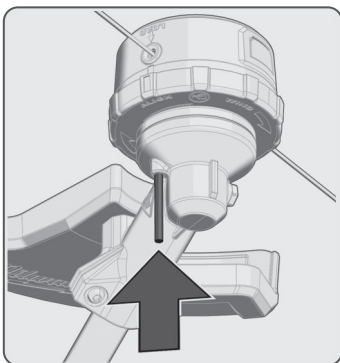  

3

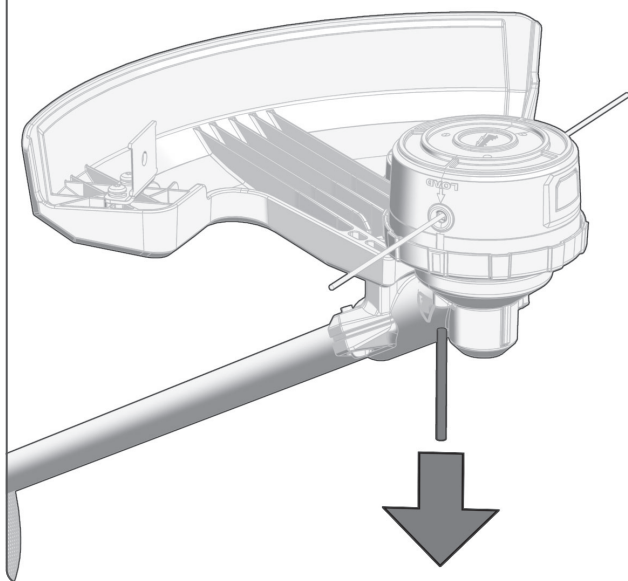 

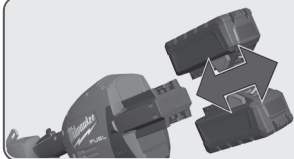 

Remove the battery pack before starting any work on the product.

對產品進行任何工作前，先移除電池組。

在开始任何工作之前，请先取出电池。

제품을 청소하거나 분리하기 전, 배터리 팩을 제거하십시오.

 
ถอดแบตเตอรี่ออกก่อนเริ่มการใช้งาน

Lepaskan paket baterai sebelum memulai pekerjaan apa pun pada produk.


Tháo pin trước khi bắt đầu thao tác với sản phẩm.

作業前の調整時や保守・点検時は、本体からバッテリーを取り外してください。

1

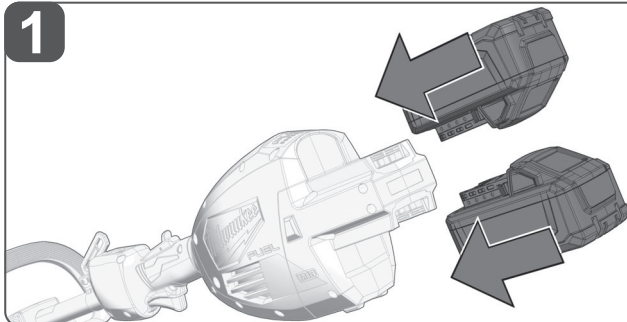

2

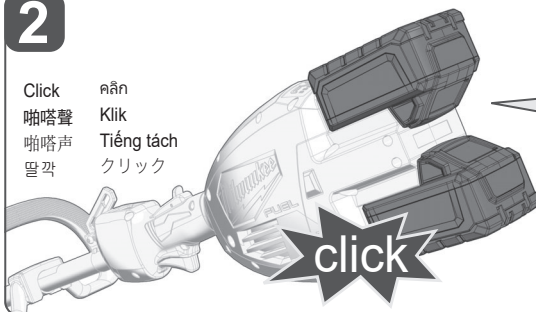 

Click

คลิก

啪嗒聲

Klik

 
啪嗒聲

Tiếng tách


딸깍

클리ッ

1

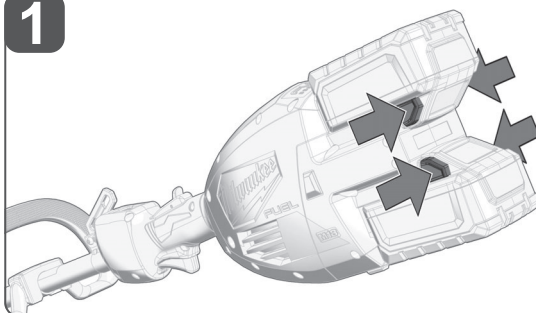

2

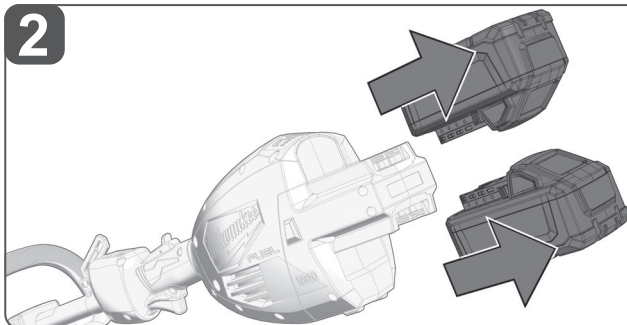 



The product only runs with 2 battery packs.

此工具須使用 2 個電池組運行。

此工具須使用 2 个电池组运行。

 
 
이 제품은 2개의 배터리만으로 작동합니다.

ผลิตภัณฑ์นี้ทำงานด้วยแบตเตอรี่ 2 ก้อนเท่านั้น



Produk ini dijalankan hanya dengan 2 baterai.





Sản phẩm chỉ chạy với 2 pin.

本製品は2個のバッテリーのみで動作します。

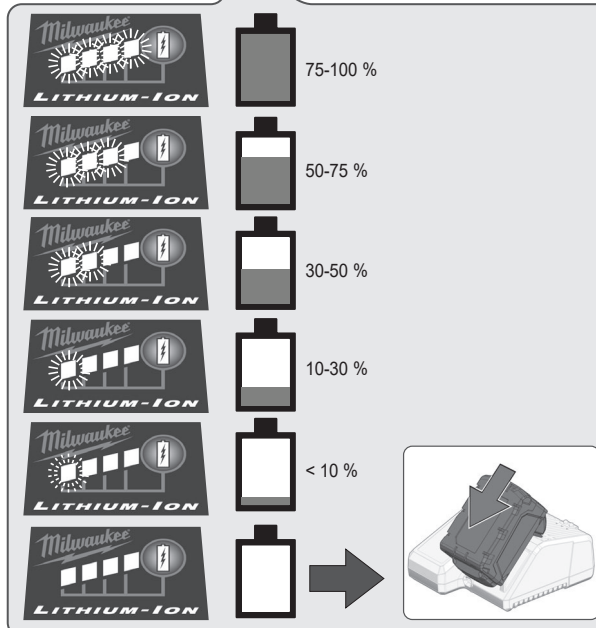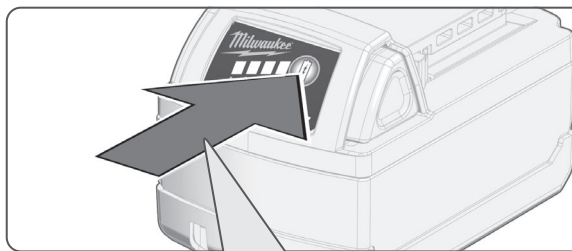



10-30% 30-50% 50-75% 75-100%

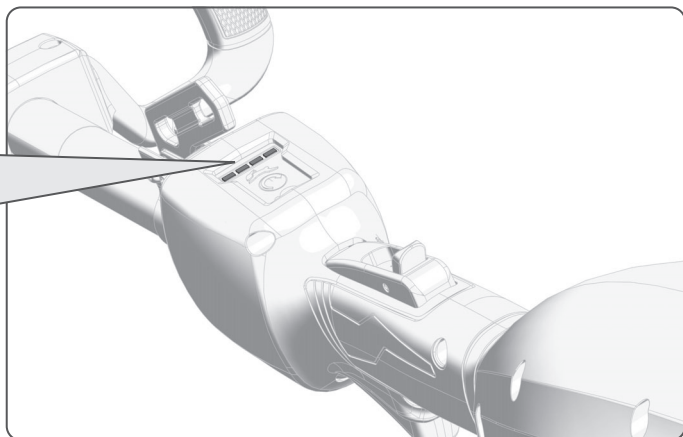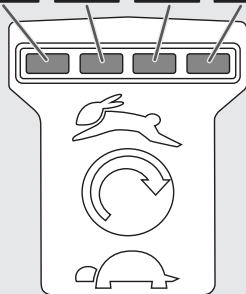  

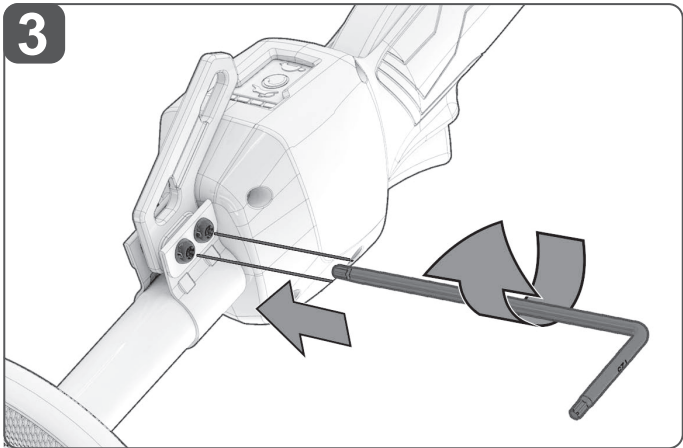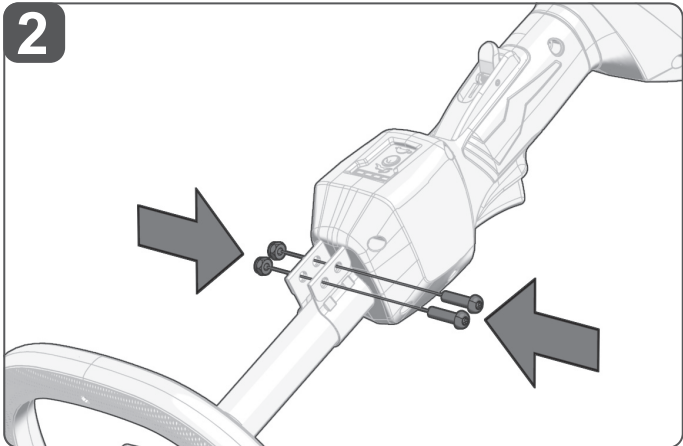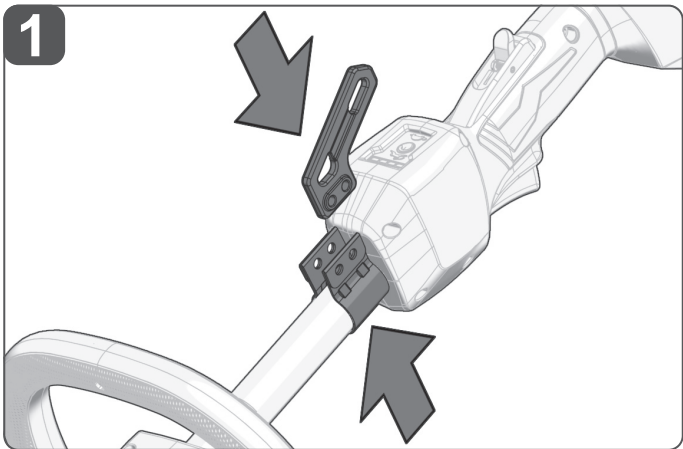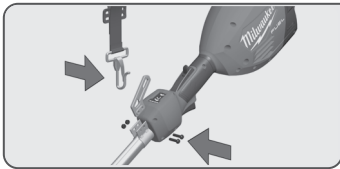    



4

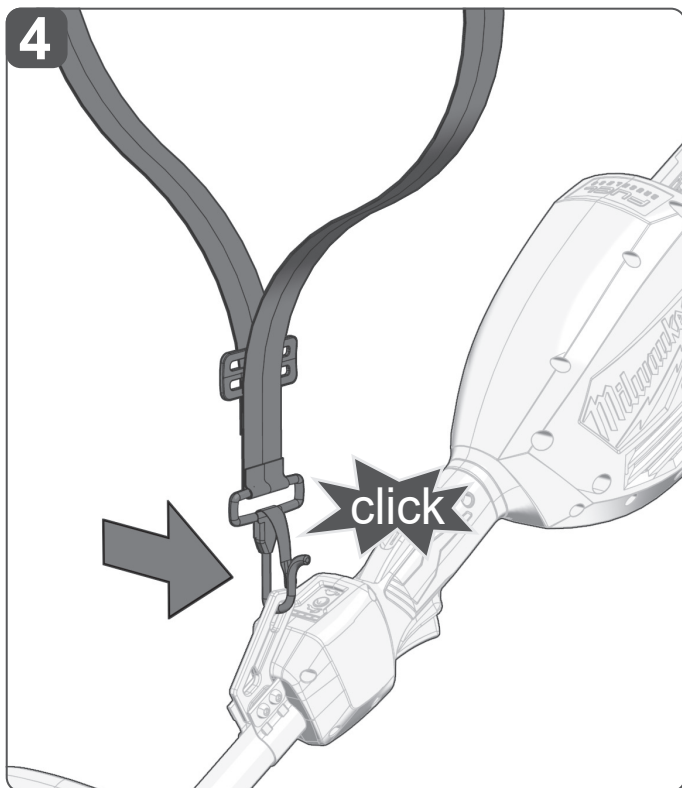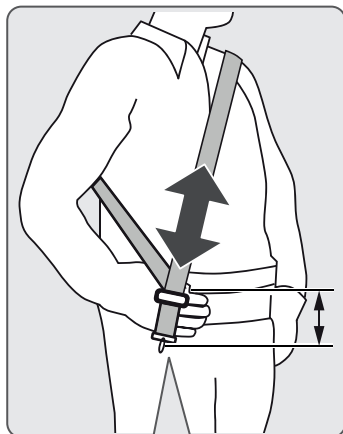  

Adjust the strap. The carabiner should be a hand's width below the hip.

調整肩帶。登山扣應在臀部下方一隻手的寬處。

調整肩帶。登山扣應在臀部下方一只手的寬處。

 
 
 
스트랩을 조정하십시오. 카라비너는 엉덩이 아래 손 너비에 있어야 합니다.

 
ปรับสายรัด ตะขอเกี่ยวควรวางอยู่ระดับมือใต้สะโพก

Atur tali pengikat. Carabiner harus berada satu tangan di bawah pinggul Anda.

Điều chỉnh dây. Móc đa năng phải có độ rộng bằng bàn tay ở dưới hông bạn.

ストラップを調節します。カラピナの位置は、腰から手の幅1つ分下の所にしてください。

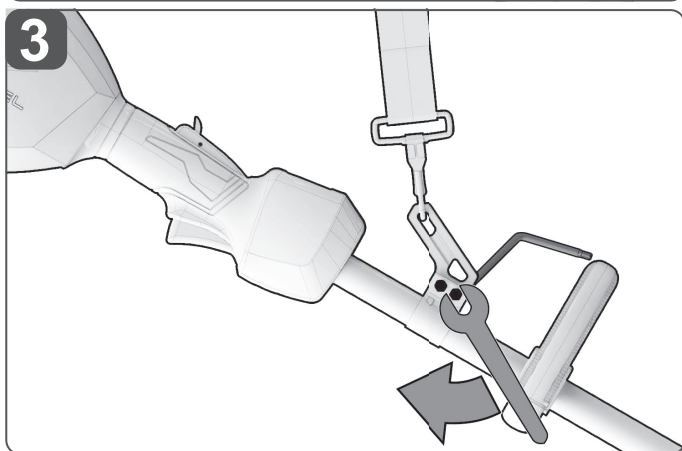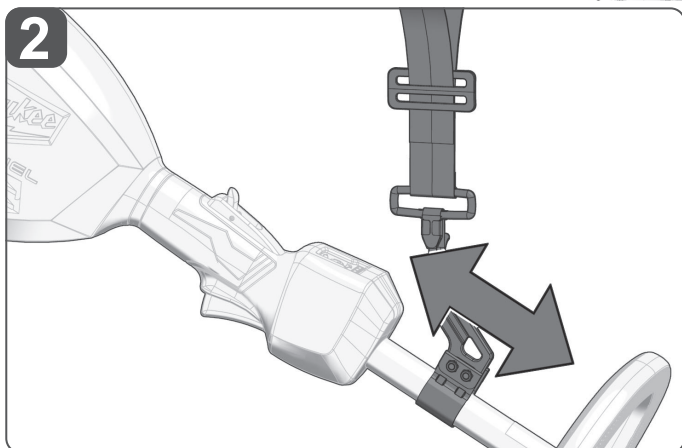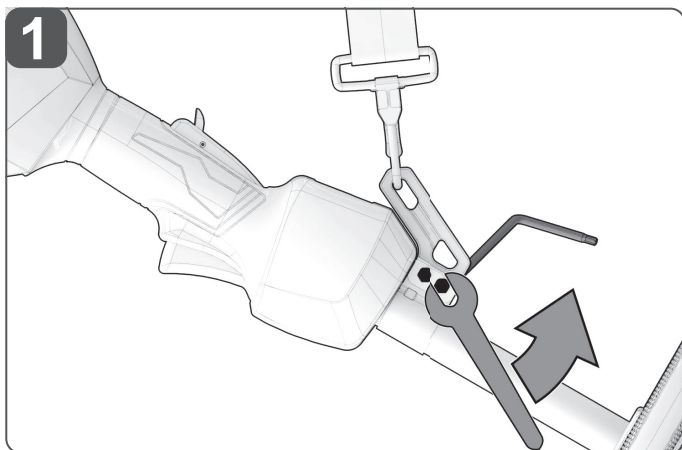

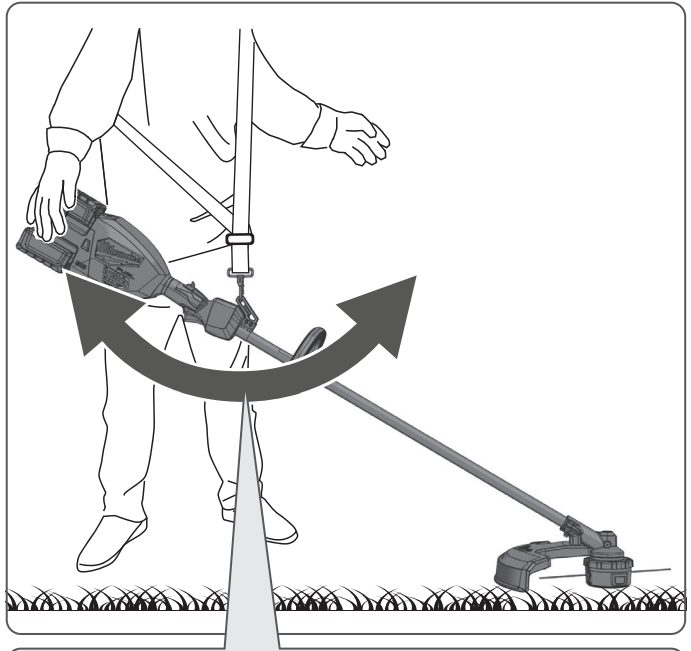

Level the product The trimmer head touch lightly the ground.

平放產品。切割頭應輕輕接觸地面。

平放本工具。割草机机头应轻轻接触地面。

 
 
 
 
제품을 평평하게 놓습니다. 트리머 헤드가 바닥에 가볍게 닿습니다.

จัดตำแหน่งผลิตภัณฑ์ หัวเครื่องเล็มหญ้าสัมผัสกับพื้นดินเล็กน้อย

Sejajarkan produk. Kepala pemangkas rumput sedikit menyentuh tanah.

Để sản phẩm cân bằng. Đầu máy cắt chạm nhẹ vào mặt đất.

本製品を水平にします。トリマーヘッドで地面に軽く触れます。

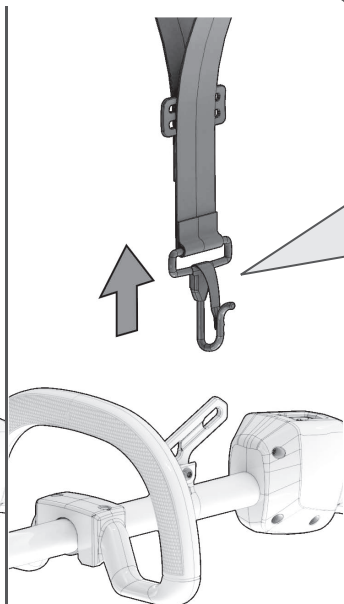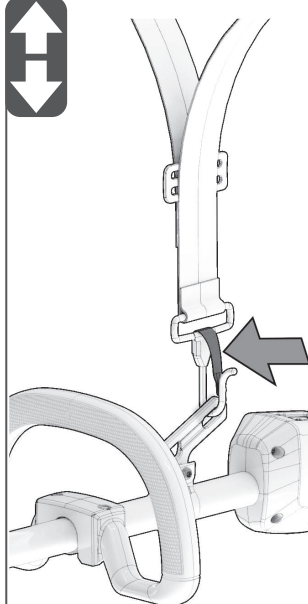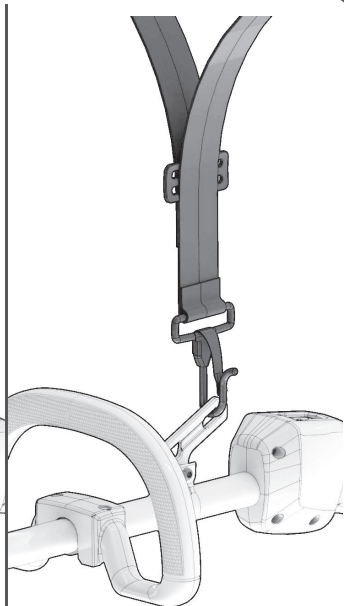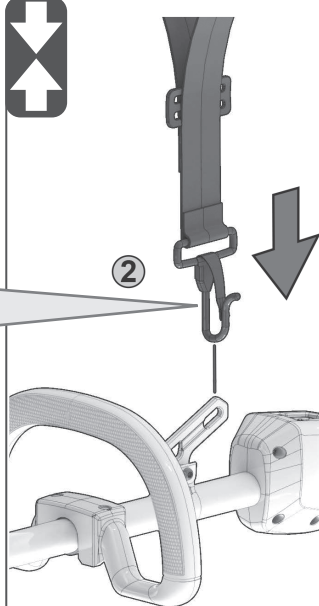

Quick release: In case of imminent danger, the product must be jettisoned quickly. To do this, open the lock and set down the product. Practise quick release. Do not throw the product during practice.

快速釋放：在迫在眉睫的危險情況下，必須迅速拋棄產品。為此，打開鎖並放下產品。按下快速釋放。按下時請勿拋出產品。

快速释放：在迫在眉睫的危險情況下，必須迅速拋棄本工具。为此，請打開并放下本工具。練習快速释放。練習時請勿拋出本工具。

 
신속 해제: 위험이 임박한 경우, 제품을 신속하게 포기해야 합니다. 이를 위해 잠금 장치를 개방하고 제품을 내려 놓습니다. 신속하게 해제합니다. 신속하게 해제하는 동안 제품을 던지지 마십시오.

การปลดอุปกรณ์แบบเร็ว: ในกรณีที่จะเกิดอันตรายรุนแรง ต้องรีบปลดอุปกรณ์ทิ้งอย่างรวดเร็ว ซึ่งทำได้โดยเปิดล็อกแล้ววางอุปกรณ์ลง ให้ฝึกปลดอุปกรณ์แบบเร็ว อย่าโยนผลิตภัณฑ์ขณะฝึก


Pelepasan cepat: Jika terjadi bahaya, produk harus segera dilepaskan. Untuk melakukan ini, buka kunci dan letakkan produk. Latih pelepasan cepat. Jangan melempar produk selama latihan.

Nhà nhanh: Trong trường hợp sắp xảy ra nguy hiểm, phải bỏ sản phẩm ra thật nhanh. Để làm được việc này, hãy mở khóa và đặt sản phẩm xuống. Thực hành nhà nhanh. Không ném sản phẩm trong quá trình thực hành.

クイックリリース: 差し迫った危険がある場合、本製品は即座に放り投げる必要があります。これを行うには、ロックを開き、本製品を下に置きます。クイックリリースを練習してください。練習中に本製品を投げないでください。

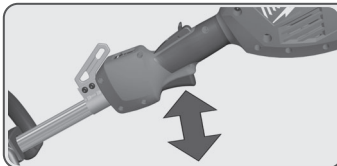


START

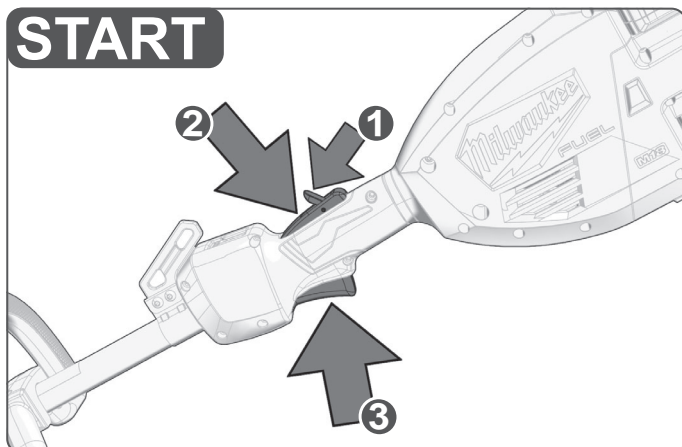 




Start
開始
开始
시작
สตาร์ท
Mulai
Khởi động
スタート



 
Stop
停止
停止
정지
หยุดเครื่อง
Berhenti
Dừng
ストップ

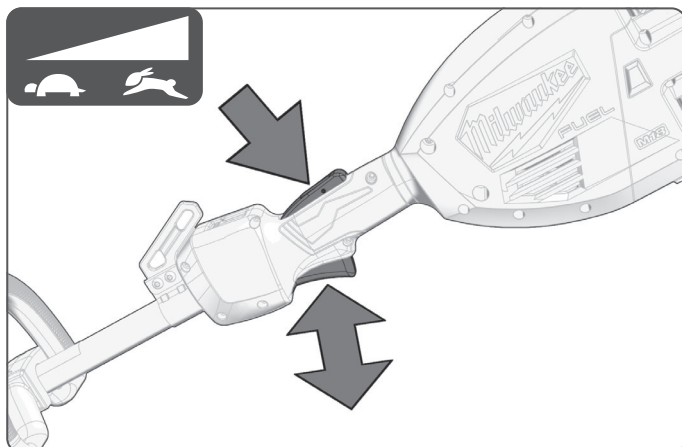

STOP

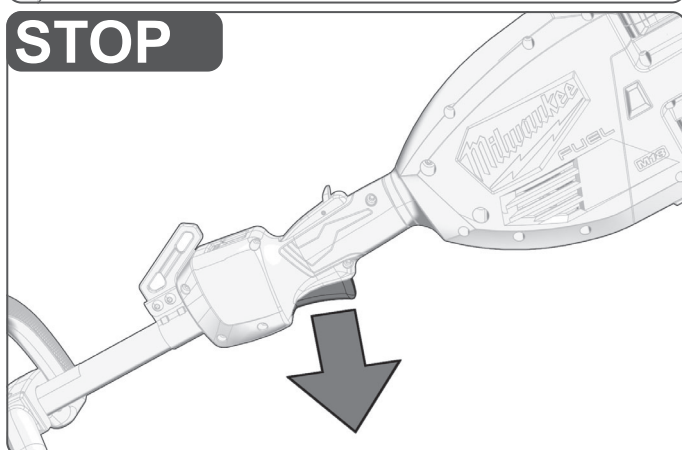 

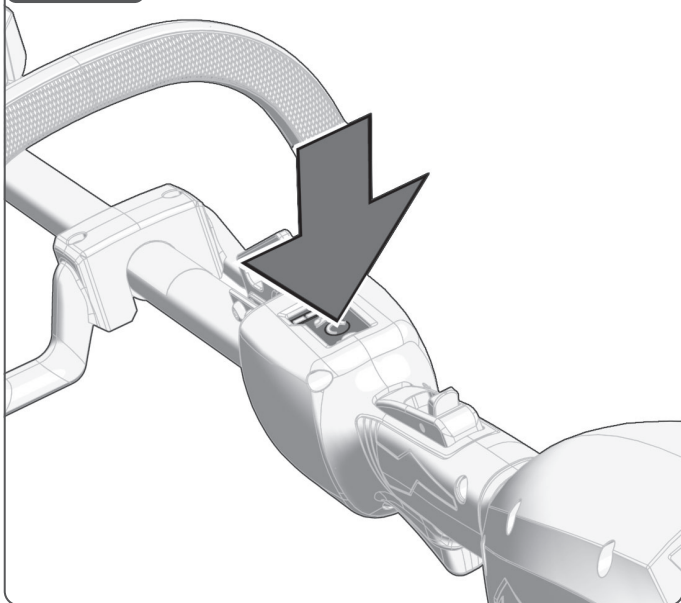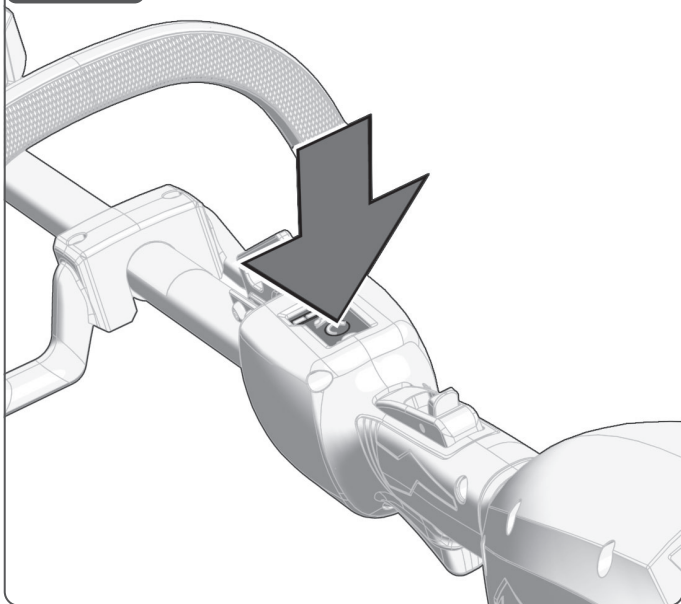  

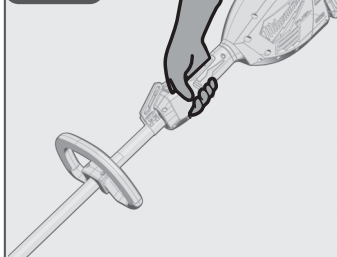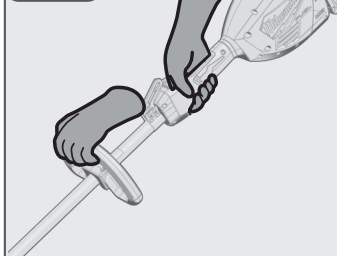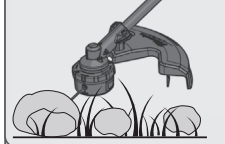   

min. 30 cm

Insulated gripping surface

絶縁の抓握表面

绝缘的抓握表面

 
절연 그립 표면

 
 
 
 
 
 
 
พื้นผิวจับกันความร้อน

 
 
Permukaan genggam berinsulasi

 
Bề mặt tay cầm được cách điện

絶縁グリップ面


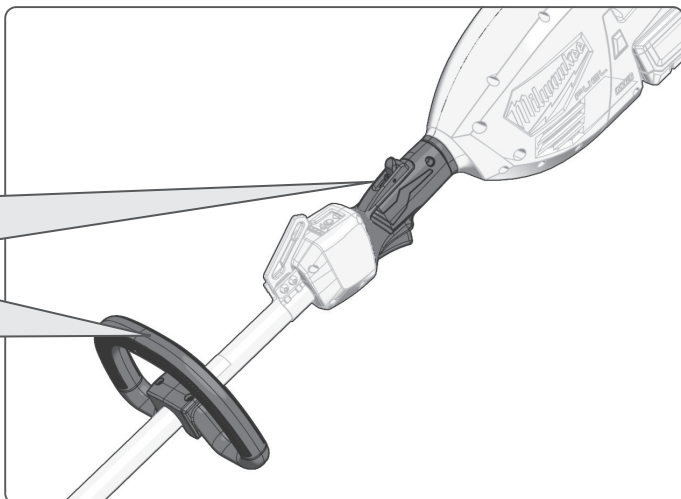


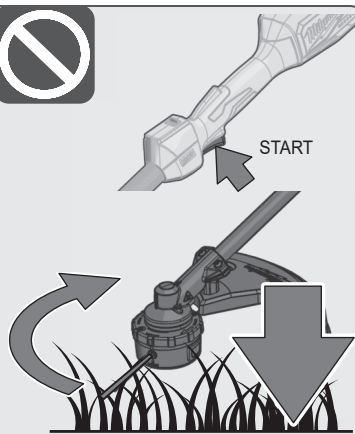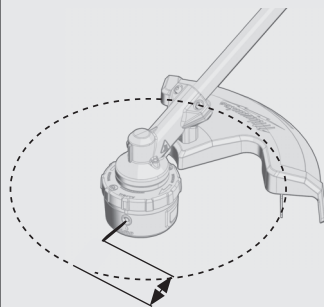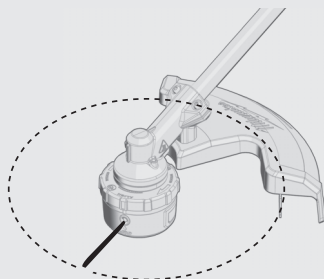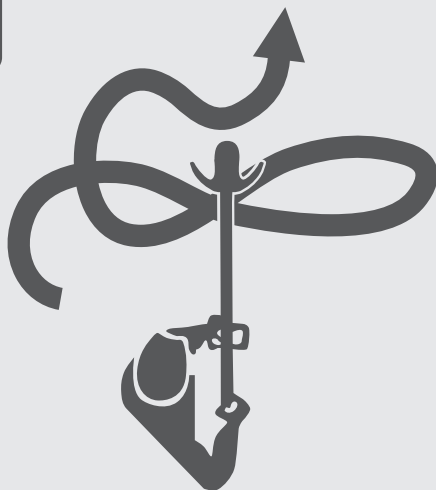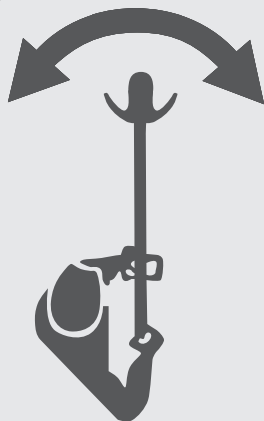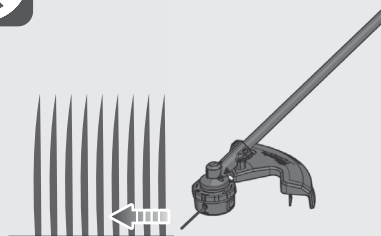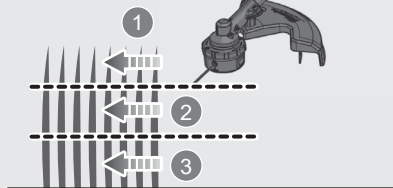

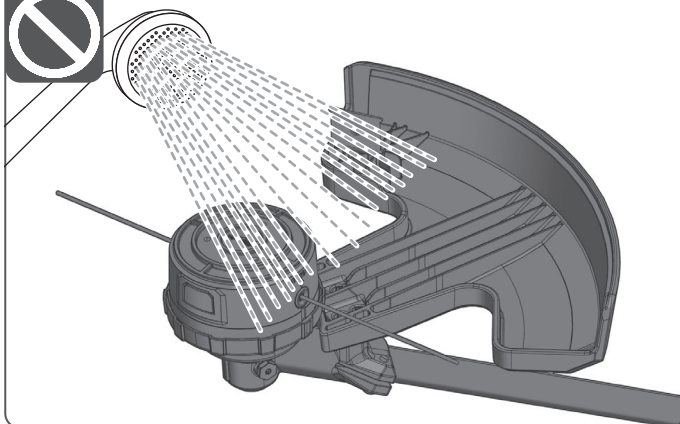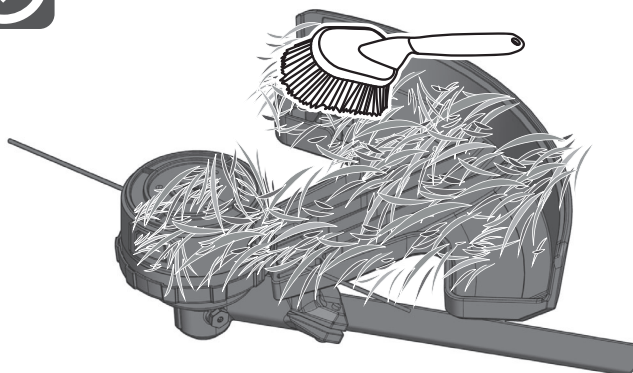


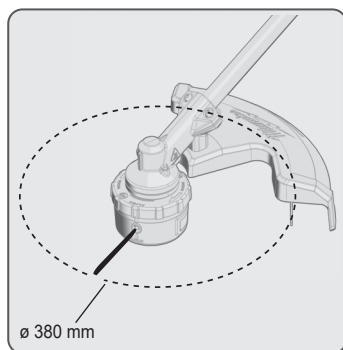


1

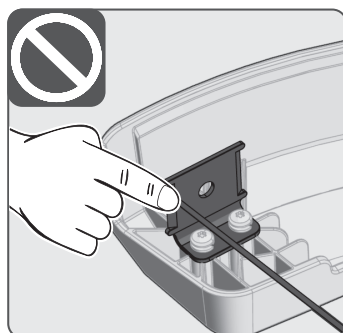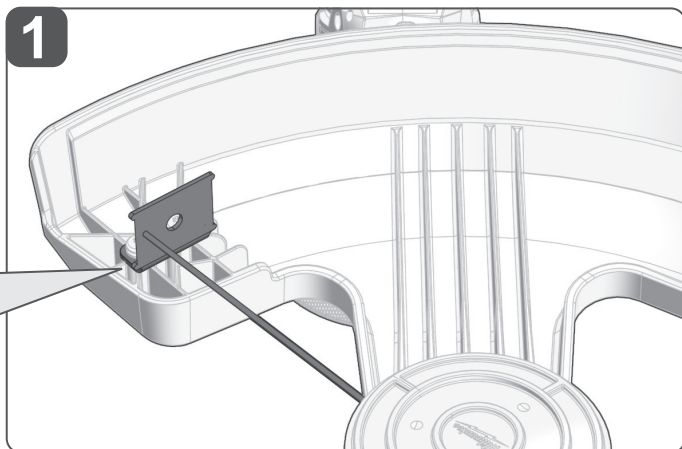  

2

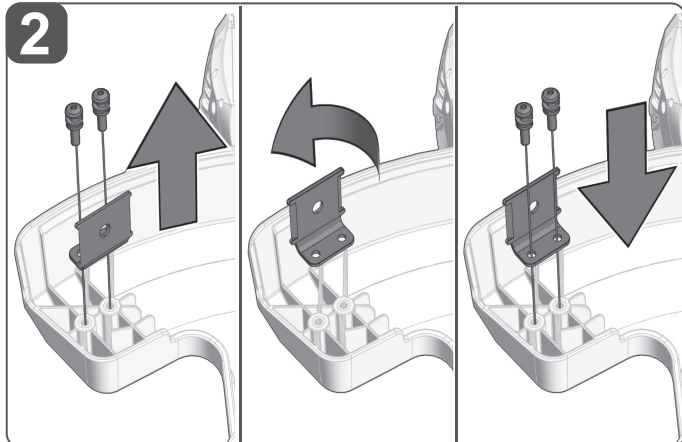 


3

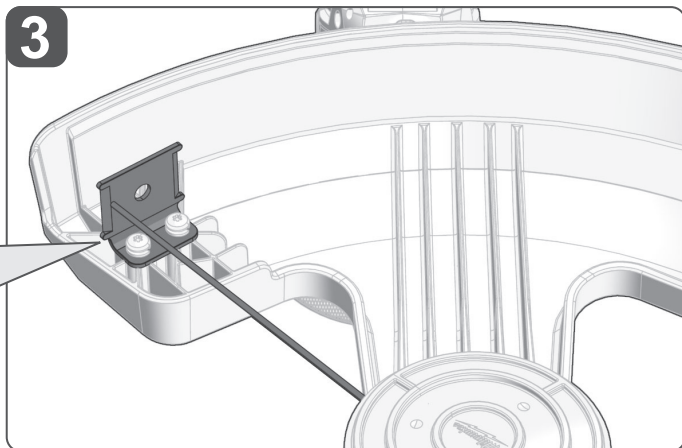 







1



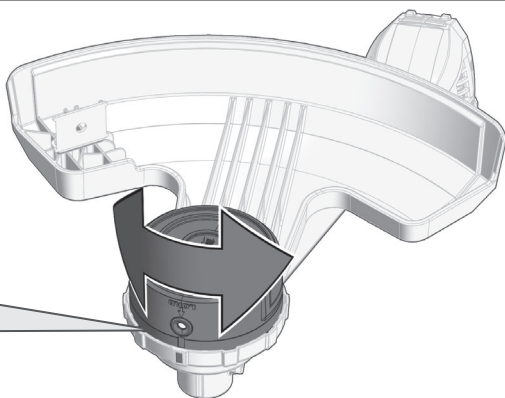 


2

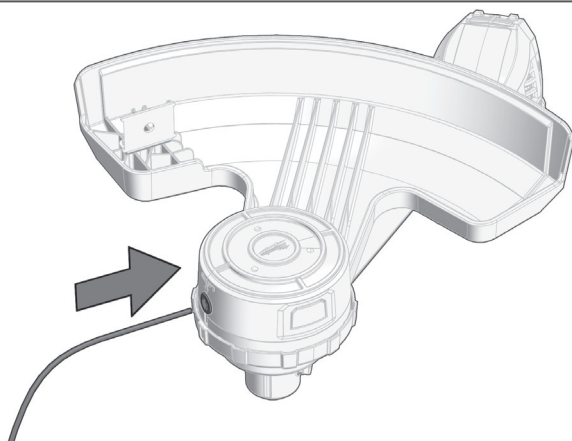 


3

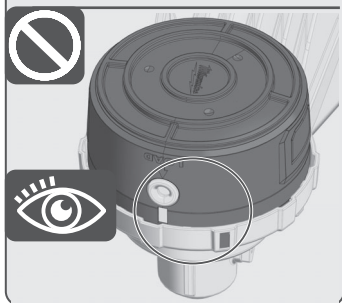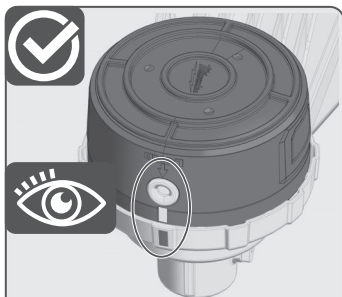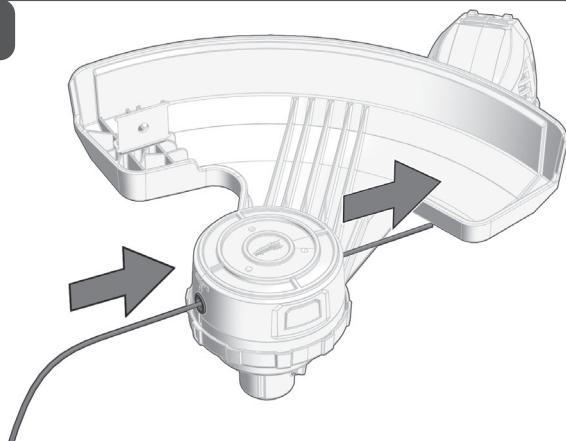   

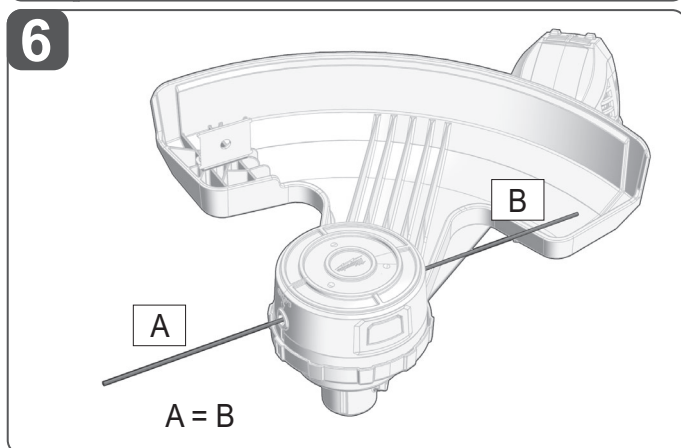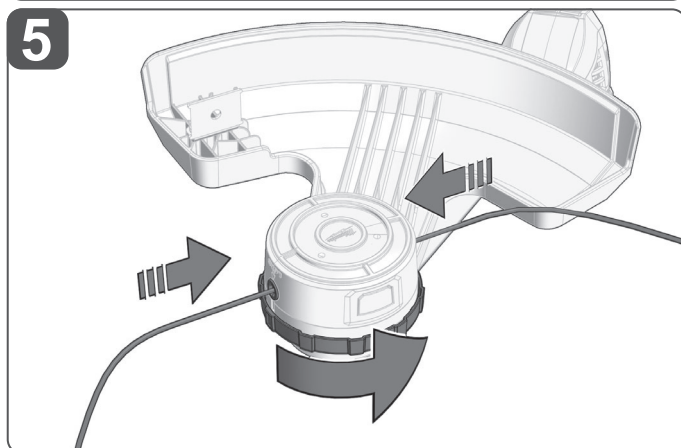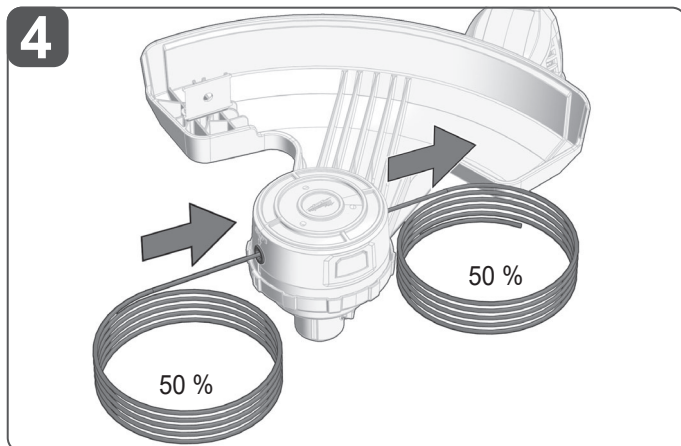   





1

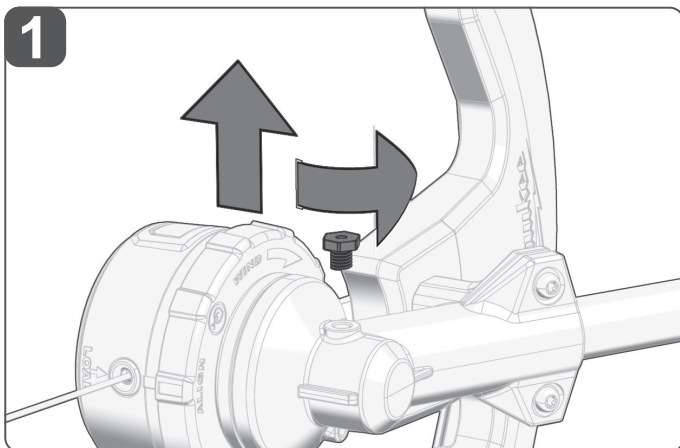 

2

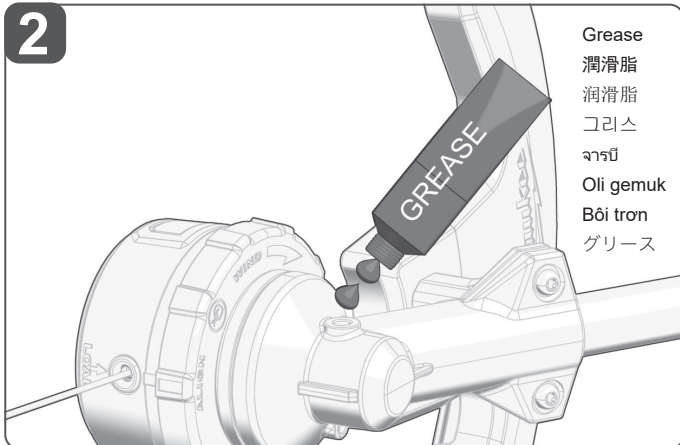 

3

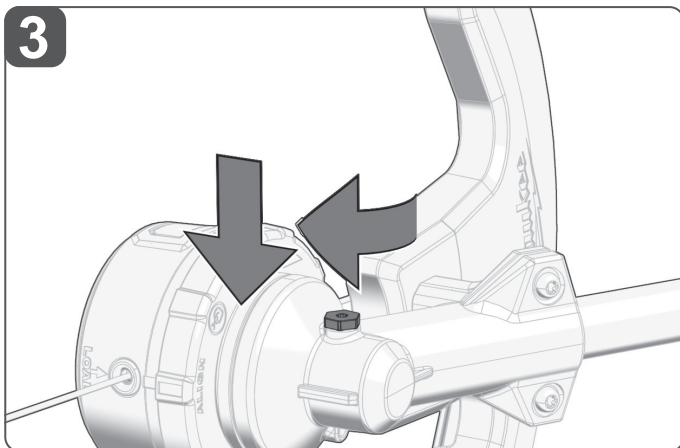 



Accessories / spare parts

配件/備件

附件/配件

액세서리/부속품

 
อุปกรณ์เสริม/อะไหล่

Aksesori/Suku cadang

Phụ kiện / Phụ tùng


付属品・スペアパーツ

001528007

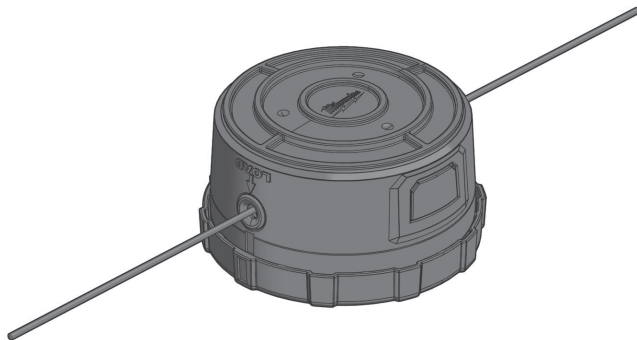


001999973

 2.0 mm

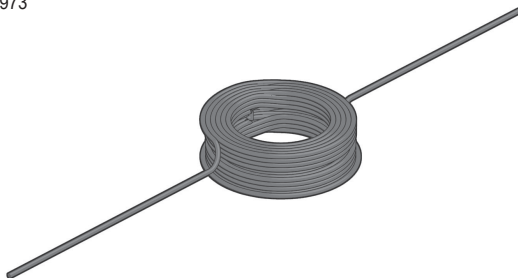


001999974

 2.4 mm

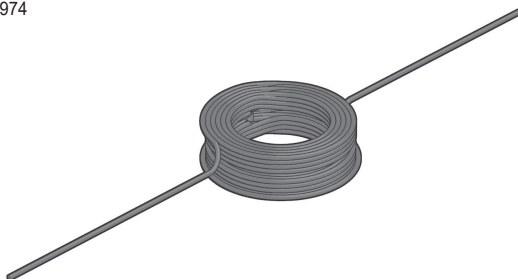

001999314

 2.7 mm

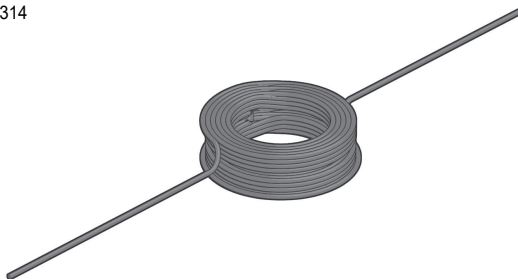

TECHNICAL DATA	M18 F2GTR
Type	Cordless grass trimmer
Voltage	36 V (2 x 18 V) ---
No-load speed, low speed	4900/min
No-load speed, high speed	6200/min
Max cutting line ø	7.6 m x 2 mm / 6.1 m x 2.4 mm / 4.5 m x 2.7 mm
Max cutting capacity	432 mm
Weight according EPTA-Procedure 01/2014	7.5 kg
Weight (product only)	5.4 kg
Battery weight (M18B2 - M18HB12)	0.43 kg - 1.49 kg
Recommended ambient operating temperature	-18 – +50 °C
Recommended battery types	M18B..., M18 HB...
Recommended charger	M12-18..., M18 DFC, M18 PC6

Noise information

Noise emission values determined according to EN 62841

A-weighted sound pressure level	79.0 dB (A)
Uncertainty K	3 dB (A)
A-weighted sound power level	89.7 dB (A)
Uncertainty K	3 dB (A)

Always wear ear protectors.

Vibration information

Total vibration values (vector sum in the three axes) determined according to EN 62841

Vibration emission value a_h (front handle)	4.56 m/s ²
Uncertainty K	1.5 m/s ²
Vibration emission value a_h (rear handle)	2.62 m/s ²
Uncertainty K	1.5 m/s ²

WARNING!

The declared vibration total values and the declared noise emission values given in this instruction manual have been measured in accordance with a standardised test and may be used to compare one tool with another. They may be used for a preliminary assessment of exposure.

The declared vibration and noise emission values represent the main applications of the tool. However, if the tool is used for different applications, used with different accessories, or poorly maintained, the vibration and noise emission may differ. These conditions may significantly increase the exposure levels over the total working period.

An estimation of the level of exposure to vibration and noise should take into account the times when the tool is turned off or when it is running idle. These conditions may significantly reduce the exposure level over the total working period.

Identify additional safety measures to protect the operator from the effects of vibration and noise, such as maintaining the tool and the accessories, keeping the hands warm (in case of vibration), and organising work patterns.

 **WARNING! Read all safety warnings, instructions, illustrations, and specifications provided with this product.** Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury.

Save all warnings and instructions for future reference.

GRASS TRIMMER SAFETY WARNINGS

Do not use the product in bad weather conditions, especially when there is a risk of lightning. This decreases the risk of being struck by lightning.

Thoroughly inspect the area for wildlife where the product is to be used. Wildlife may be injured by the product during operation.

Thoroughly inspect the area where the product is to be used and remove all stones, sticks, wires, bones, and other foreign objects. Thrown objects can cause personal injury.

Before using the product, always visually inspect to see that the cutter or blade and the cutter or blade assembly are not damaged. Damaged parts increase the risk of injury.

Follow instructions for changing accessories. Improperly tightened blade securing nuts or bolts may either damage the blade or result in it becoming detached.

Wear eye, ear, head, and hand protection. Adequate protective equipment will reduce personal injury by flying debris or accidental contact with the cutting line or blade.

While operating the product, always wear non-slip and