






Nothing but **HEAVY DUTY.**[™]



M18 FHZ

- EN User Manual
- ZH 操作指南
- ZH 操作指南
- KO 사용시 주의사항
- TH คู่มือการใช้งาน
- ID Buku Petunjuk Pengguna
- VI Cẩm nang hướng dẫn sử dụng
- JA ユーザーマニュアル

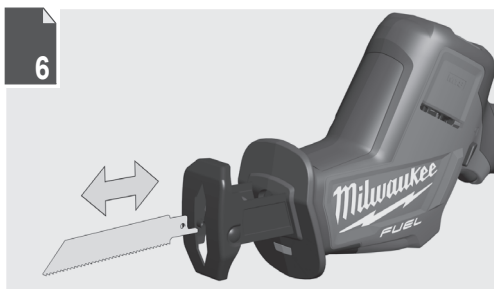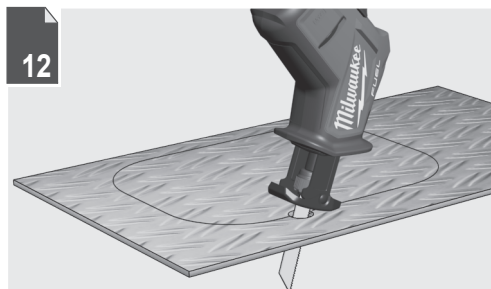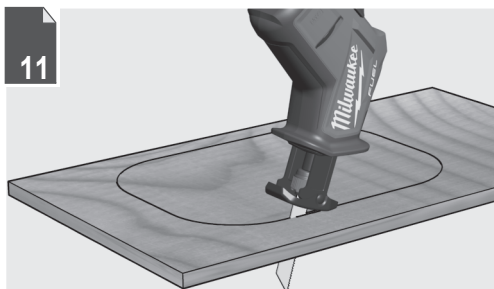





Remove the battery pack before starting any work on the product.

在產品上開始任何工作之前，請先取出電池組。

在产品上开始任何工作之前，请先取出电池组。

제품 사용 전, 배터리 팩을 제거하십시오.


ถอดชุดแบตเตอรี่ออกก่อนเริ่มการทำงานใด ๆ กับผลิตภัณฑ์

Lepaskan paket baterai sebelum memulai pekerjaan apa pun pada produk.


Tháo pin trước khi bắt đầu thao tác với sản phẩm.

製品のメンテナンス、アクセサリを交換する前に、バッテリーパックを取り外してください。

1

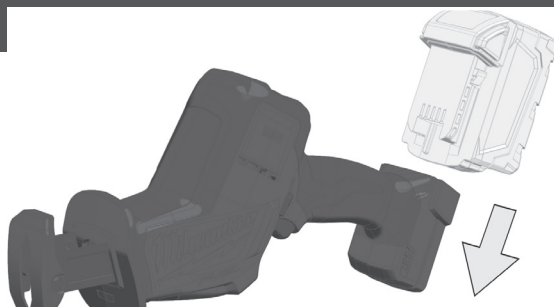


2

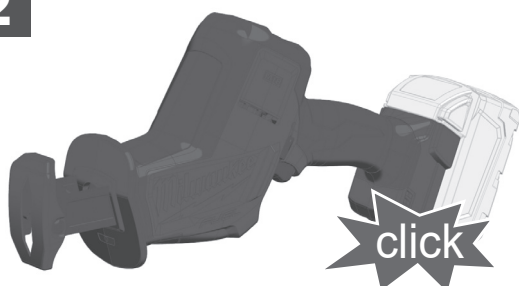




click
拍答聲
拍答聲
클릭
क्लिक
Klik
Tiếng tách
クリック


1

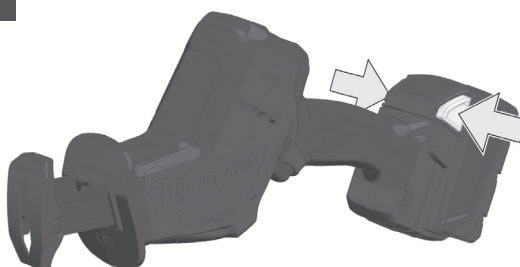


2

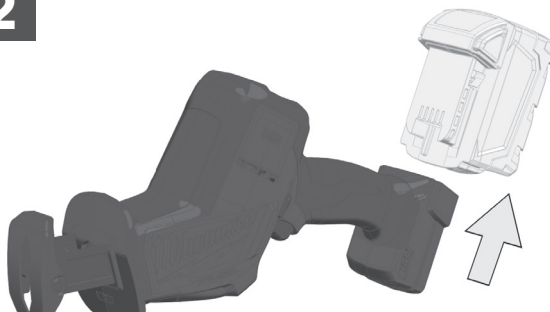

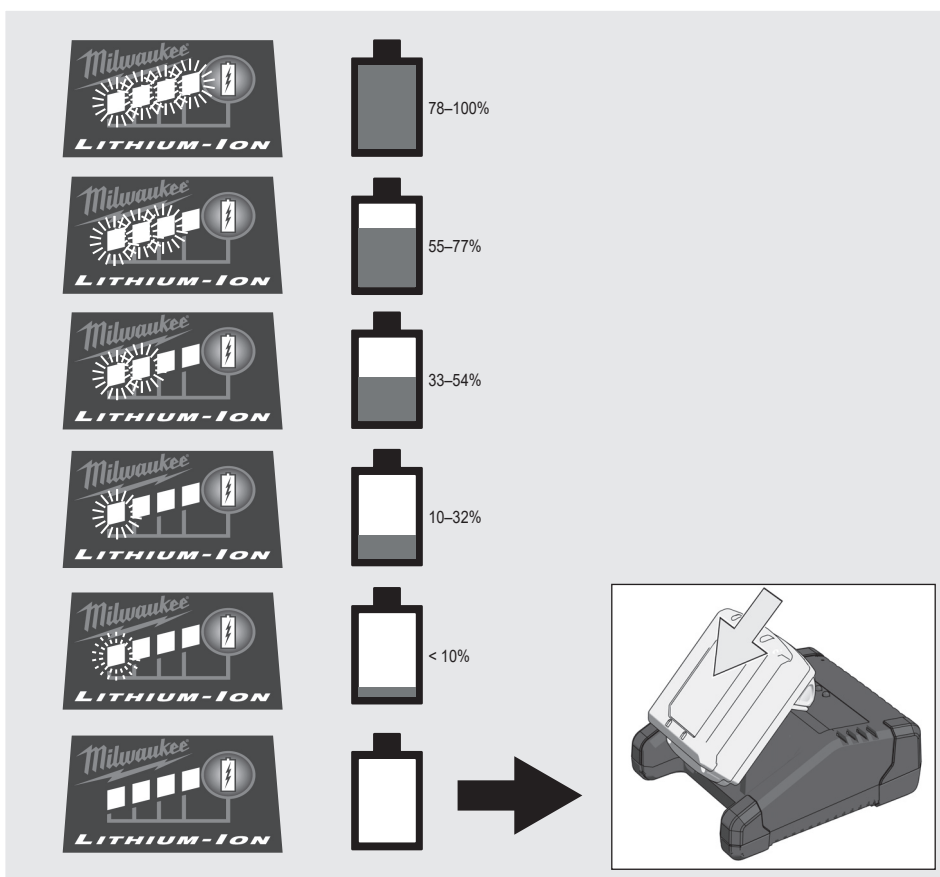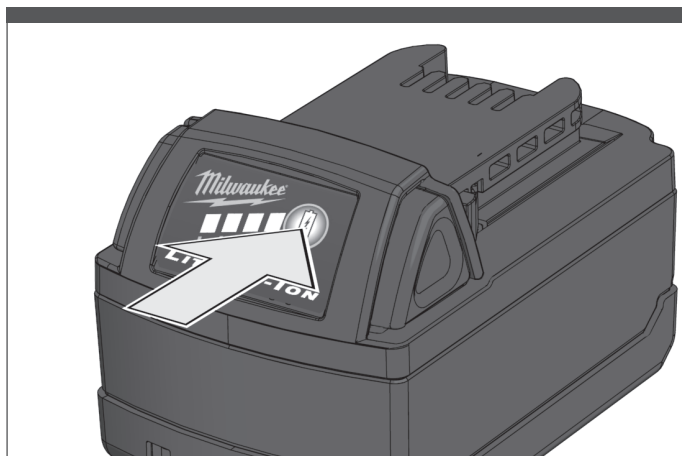


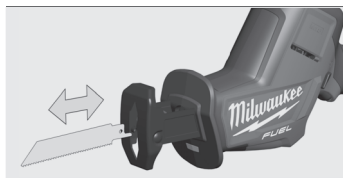






1

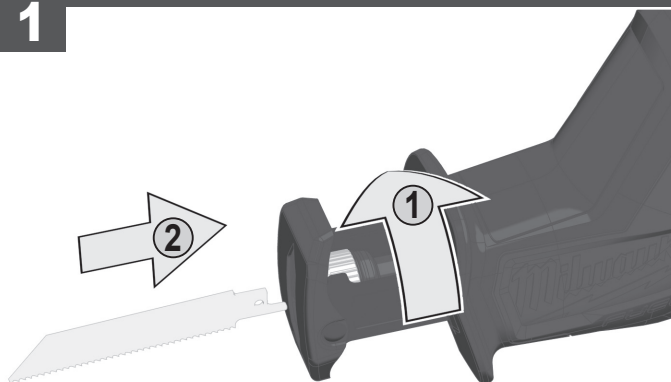

2

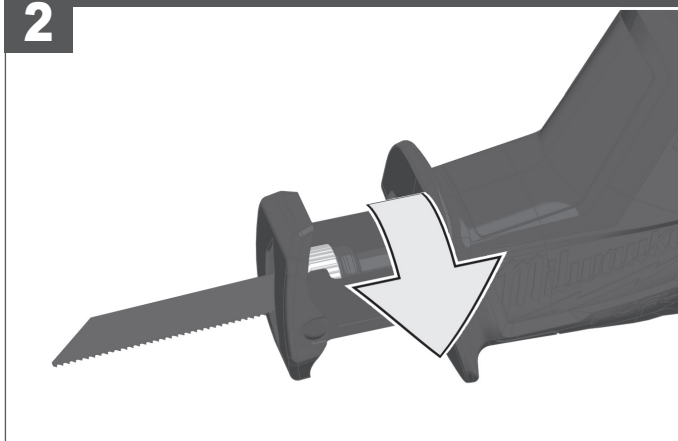

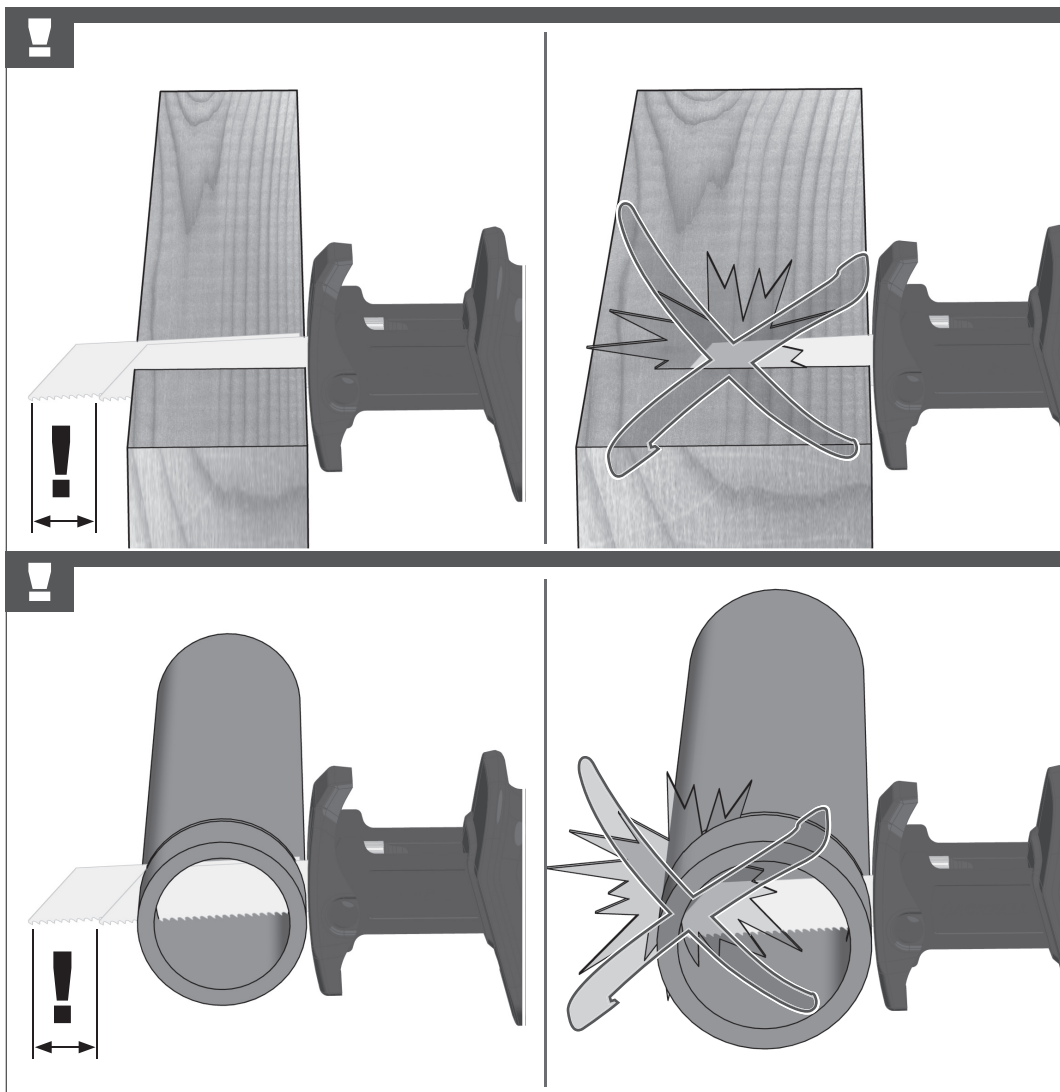

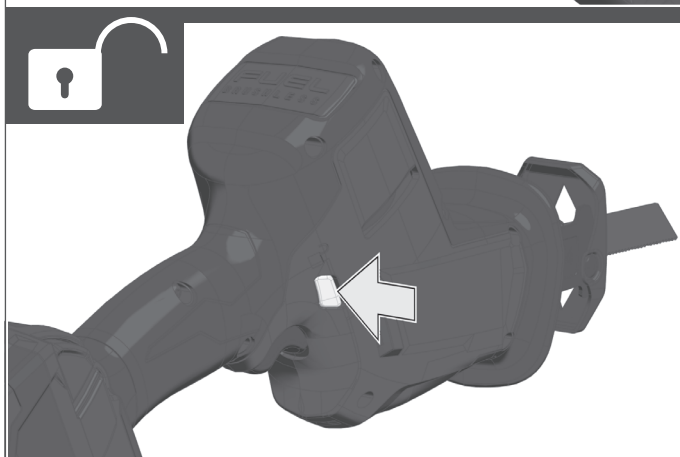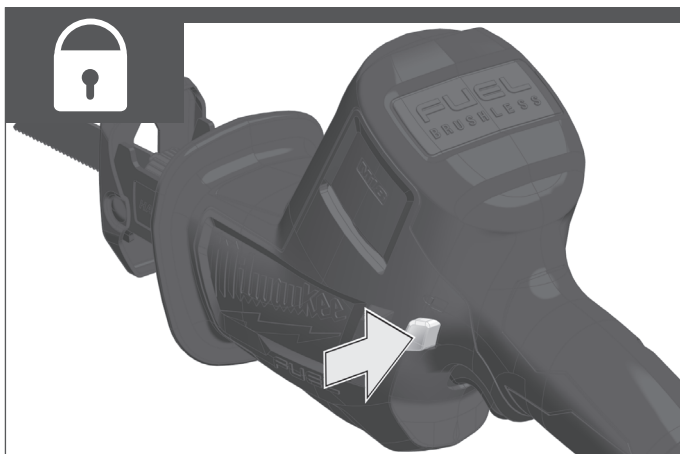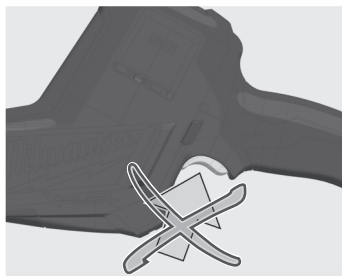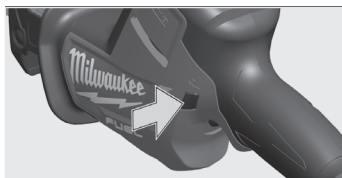



Start

開始

开始

시작

เริ่มต้น

Mulai

Khởi động

スタート

Stop

停止

停止

정지



หยุดตัด

Berhenti


Dừng



ストップ


START

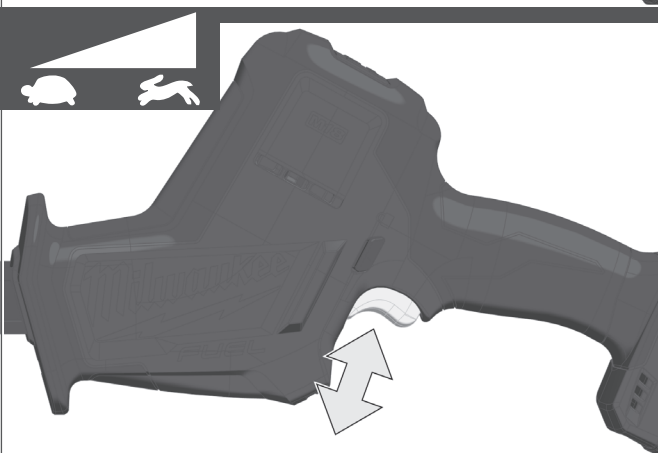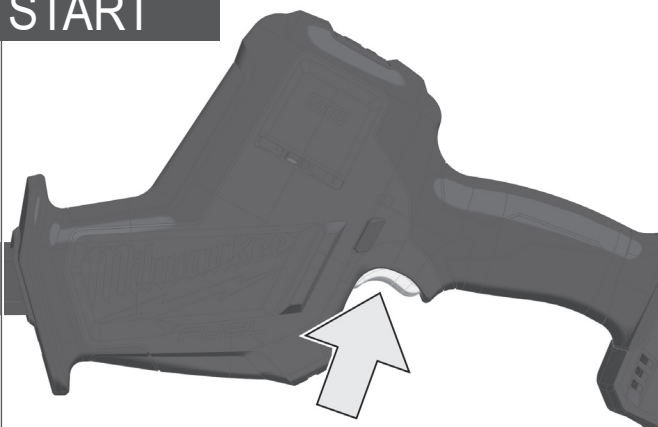


STOP

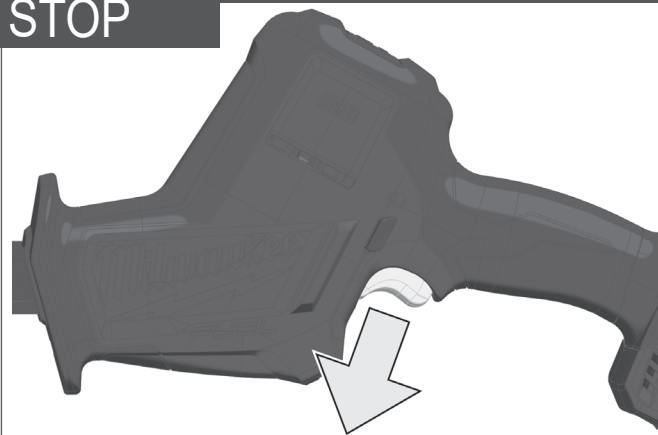

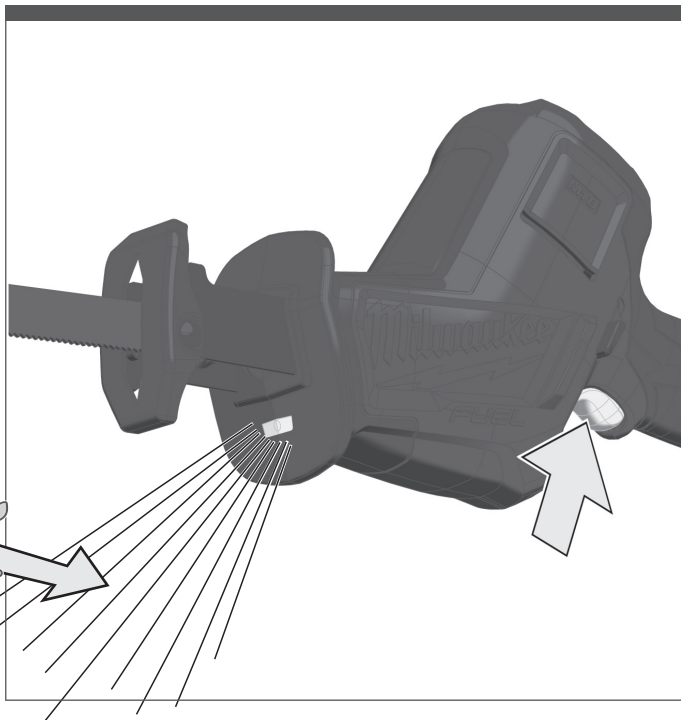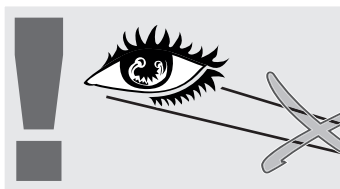


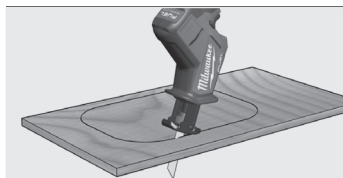


1

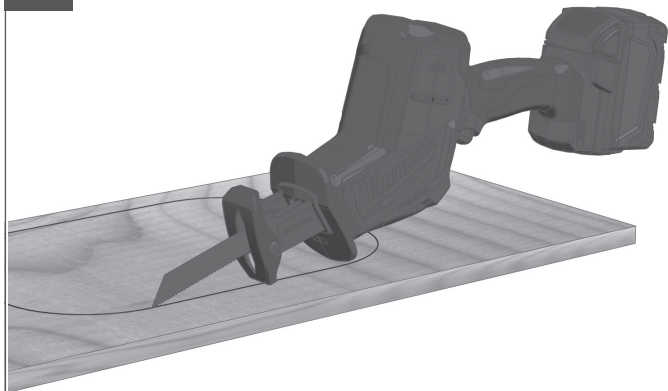

2

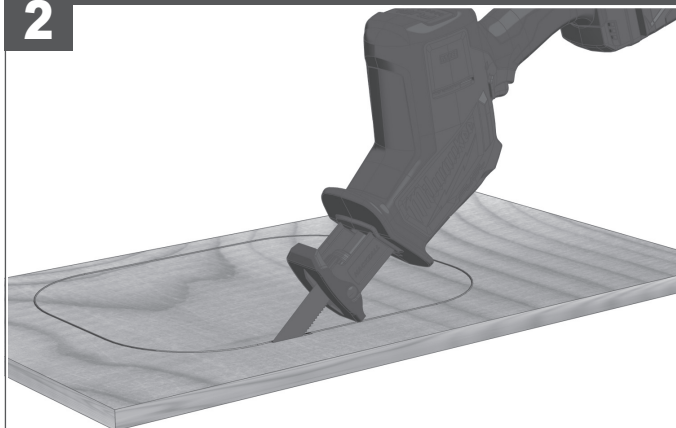

3

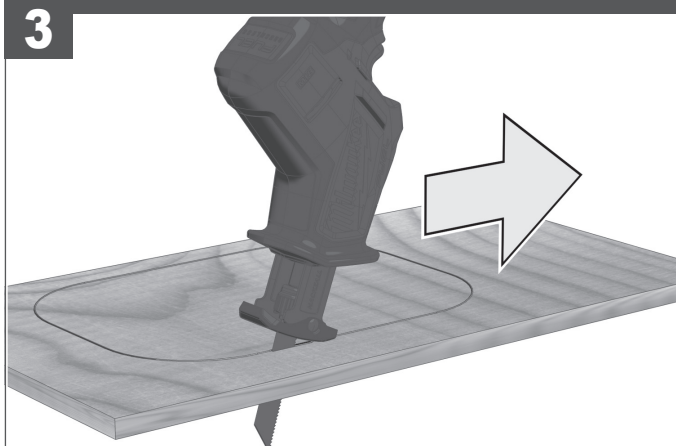



Accessory - Not included in standard equipment.

配件 - 不包在標配設備中，可作為配件供應。

附件 - 不包在标配设备中，可作为附件供应。

부속품 - 표준 장비에는 포함되어 있지 않습니다.


อุปกรณ์เสริม - ไม่รวมในอุปกรณ์มาตรฐาน

Aksesori - Tidak termasuk di dalam peralatan standar.


Phụ kiện - Không bao gồm trong thiết bị tiêu chuẩn.

アクセサリ：標準装置には含まれません

1

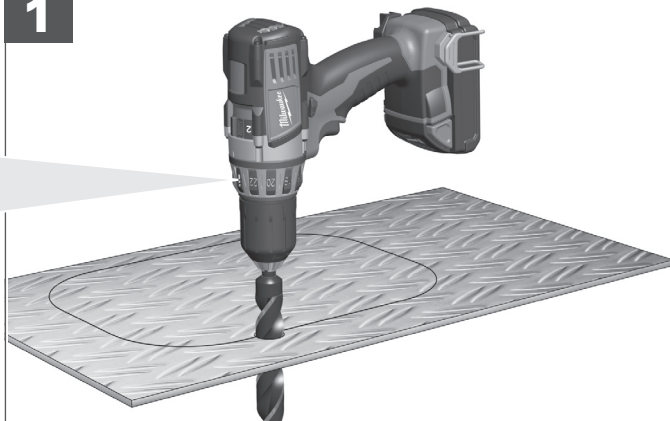

2

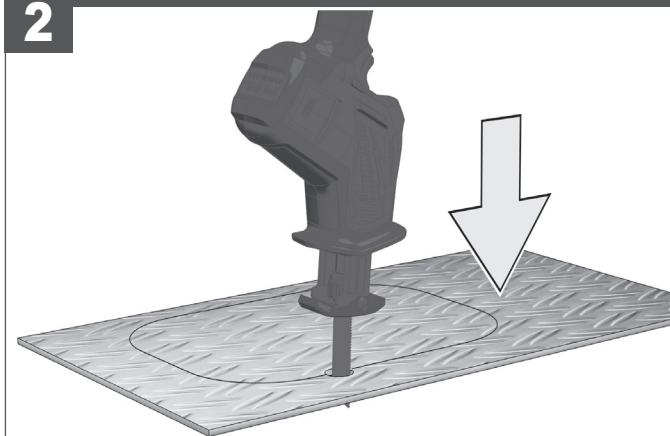

3

