


EXPLODED DIAGRAM : AMB-0307, AMBL-0307

WARNING

This diagram is for your reference only. Do not attempt to service or repair the Tool.
Do not take the Tool apart. Contact an authorized Nitto dealer for all service and repair of the Tool.
Improper service and repair can cause accidents and severe injuries.
Never attempt to modify the Tool.
Never attempt service or repair the Tool yourself.

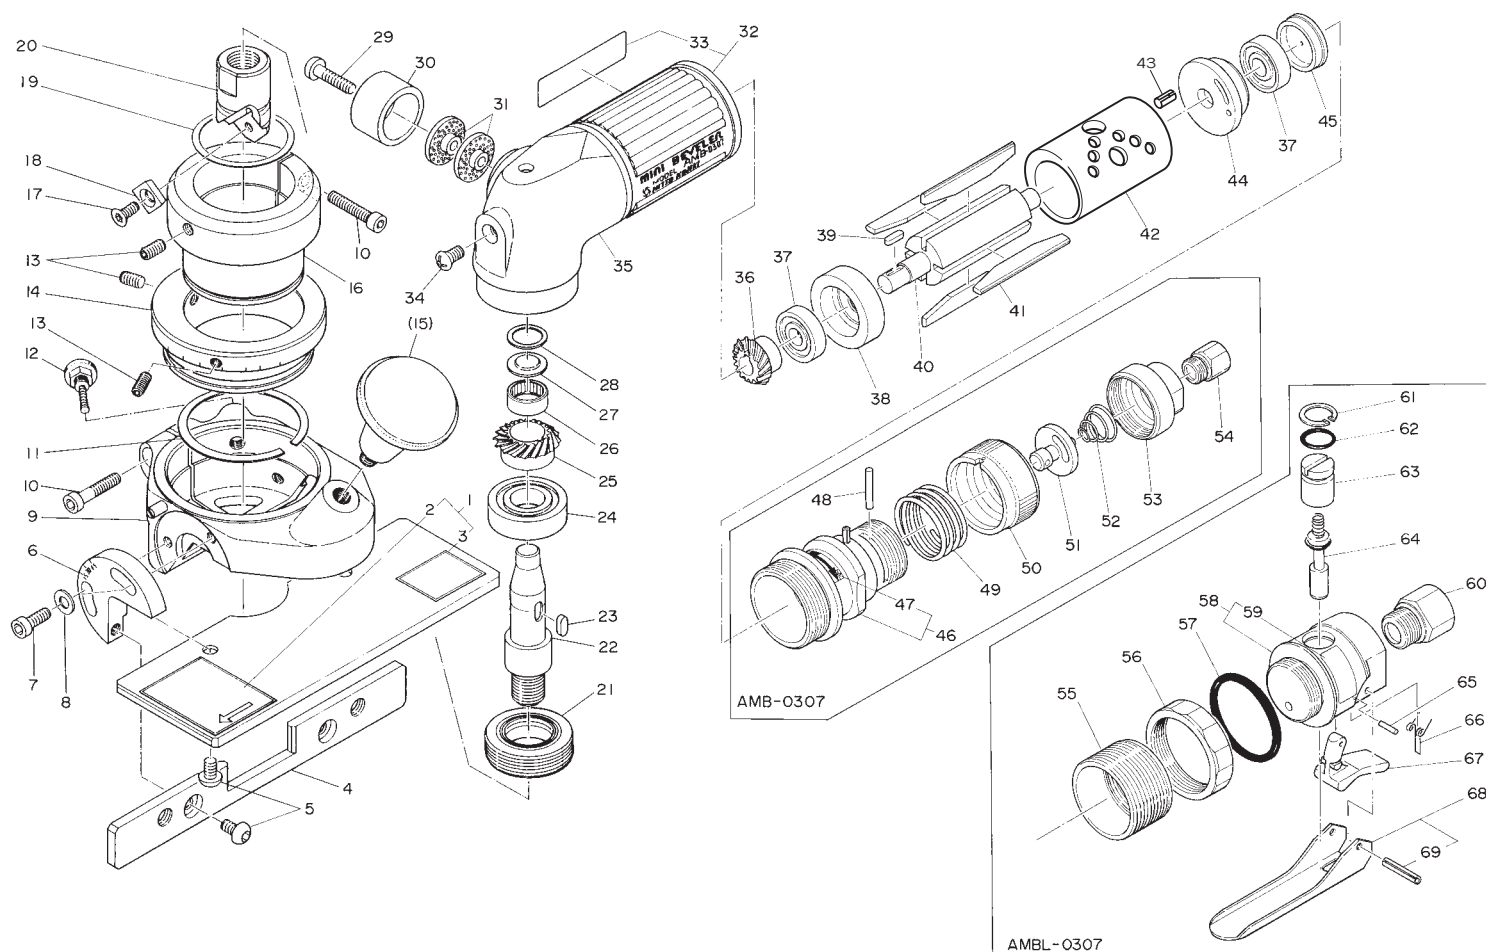

The part numbers with () are included in the Ass'y parts written above them.

AMB-0307 PARTS LIST

No.	Part No.	Description	Qty	Price
1	TB01274	Plate A Ass'y	1set	
2	(TP16975)	Label A(warning)	1	
3	(TQ01684)	Label B(chamfering level)	1	
4	TQ00210	Plate B	1	
5	TQ00211	Hex. Socket Head Screw 5×8	4	
6	TP18065	Plate Guide	2	
7	TP02862	Hex.Socket Head Cap Screw 5×15	4	
8	TP02152	Plain Washer	4	
9	TA9A895	Head Sub Ass'y A	1set	
10	TP08013	Hex. Socket Head Cap Screw 5×25	2	
11	TP18056	Concentric Snap Ring	1	
12	TA9A583	Stopper Ass'y	1set	
13	TP04827	Hex. Socket Set Screw with Flat Point 6×10	3	
14	TP18055	Eccentric Ring	1	
16	TQ00142	Aux. Ring	1	
17	TQ01629	Indexable Insert Set Screw 4×7	1	
18	TB01159	Indexable Insert 12.7 with Hole Ass'y (10pcs./Set)	1set	
19	TQ00139	Spacer 38.5×43.8×0.05 (for adjustment)		
	TQ00140	Spacer 38.5×43.8×0.1 (for adjustment)		
	TQ00141	Spacer 38.5×43.8×0.2 (for adjustment)		
	TQ00298	Spacer 38.5×43.8×0.3 (for adjustment)		
20	TQ01630	Holder	1	
21	TA98634	Bearing Set Screw Ass'y	1set	
22	TQ00954	Spindle	1	
23	TP00502	Sunk Key 4×4×9.5	1	
24	TP01609	Ball Bearing 6202ZZ	1	
25	TP14036	Gear	1	
26	TQ00955	Needle Roller Bearing TA1010Z	1	
27	TP10100	Bearing Cover	1	
28	TP10826	Packing	1	
29	LP08450	Pan Head Screw 5×25	1	
30	TP14041	Exhaust Cover	1	
31	TP14040	Silencer Plate	2	

No.	Part No.	Description	Qty	Price
32	TB01273	Grip Tube Ass'y	1set	
33	(TQ12843)	Label Warning	1	
34	TP06715	Countersunk Flat Head Screw 5×8	1	
35	TQ00144	Housing	1	
36	TP14030	Pinion	1	
37	TP10133	Ball Bearing 609ZZ	2	
38	TP14034	End Plate B	1	
39	TP10130	Sunk Key 3×3×10	1	
40	TP14033	Rotor	1	
41	TA9A294	Blade Ass'y(4 pcs.)	1set	
42	TP14031	Cylinder	1	
43	TP04061	Spring Pin 3×6	1	
44	TP10137	End Plate A	1	
45	TP15131	Cap	1	
46	TA98314	Valve Holder Sub Ass'y A	1set	
47	(TP13542)	Label Switch	1	
48	TP00547	Valve Pin 3×20	1	
49	TP13541	Spring 1.2×29.4×25	1	
50	TP13540	Valve Ring	1	
51	TA98988	Feed Valve Ass'y	1set	
52	TP00520	Valve Spring	1	
53	TP11797	Connection	1	
54	TP00857	Bushing M16×R1/4	1	

AMBL-0307 PARTS LIST

No.	Part No.	Description	Qty	Price
32	TB08740	Grip Tube Ass'y	1set	
33	(TQ12794)	Label Warning	1	
55	TP17446	Adapter	1	
56	TP17452	Lock Ring	1	
57	TP17445	O-ring S-35.5	1	
58	TB08741	Valve Body Ass'y	1set	
59	(TQ12611)	Label CE Mark	1	
60	TQ02349	Bushing M16×PT3/8	1	
61	TP03473	Retaining Ring C-14	1	
62	TP11992	O-ring KS-9	1	
63	TP04394	Adjust Valve	1	
64	TA96334	Throttle Valve Ass'y	1set	
65	TP09434	Spring Pin 2×12	1	
66	TP14340	Torsion Coil Spring	1	
67	TP14339	Lock Lever	1	
68	TA96253	Throttle Lever Ass'y	1set	
69	(TP01921)	Spring Pin 3×18	1	

Accessories

No.	Part No.	Description	Qty	Price
15	TA93017	Knob Ass'y	1set	
	TP01939	Hex.Socket Screw Key 4	1	
		Indexable Insert with Hole 12.7	2	
	TP04696	Hex.Socket Screw Key 3	1	
	TP08584	Hex.Nut M8	2	
	TP17133	Hex.Socket Set Screw 8×25 Special	2	
	TP18071	Spanner T-15F	1	
	TP02236	Bushing R1/4×NPT1/4 (AMB-0307)	1	
	TQ02350	Bushing R3/8×NPT3/8 (AMBL-0307)	1	
	TQ12795	Instruction Manual	1	
	TQ12796	Declaration of Conformity (AMBL-0307)	1	