

Exploded View/Parts List

BB-10B Exploded View/Parts List


⚠ CAUTION

- Users should never perform disassembly of the tool.

This illustration is for reference only.

For repair or replacement of the tool, request service from the retailer where you purchased the tool or the nearest NITTO service member store.

Exploded view/parts list are subject to change at any time without notice. (As of Oct. 2018)

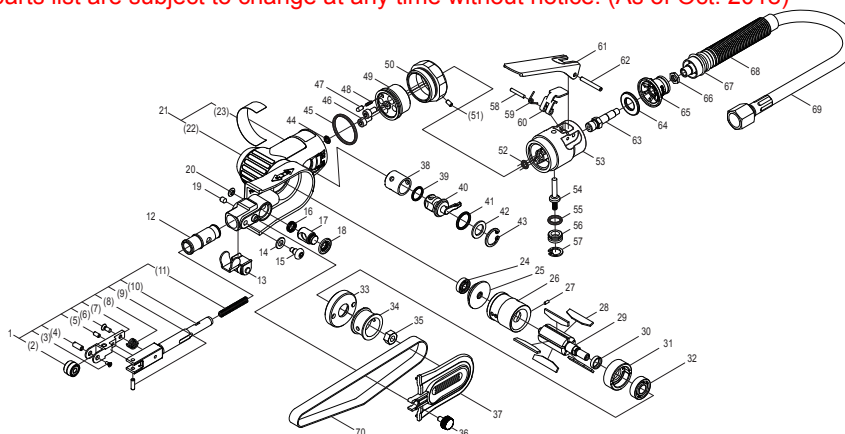

*1 indicates a consumable item, *2 indicates a commercial item. Parts inside () are components of the above assembly.

No.	Part No.	Part name	Qty
1	TB10548	Bracket Ass'y	1set
(2)	(TA99155)	Idle Pully 10 Sub Ass'y	1set
(3)	(TP14455)	Countersunk Head Screw 2X5	1
(4)	(TP12431)	Idle Pulley Shaft 10	1
(5)	(TP02154)	Hex. Socket Set Screw 3X6	1
(6)	(TP00155)	Countersunk Head Screw 3X8	1
(7)	(TP14761)	Bracket 10	1
(8)	(TP14763)	Spring 0.9X7.5X6.5	1
(9)	(TP14798)	Spring Pin 3X10 AW	1
(10)	(TQ14673)	Tension Bar 10	1
(11)	(TQ15433)	Spring 0.8X4.2X40	1
12	TQ15435	Guard Insert	1
13	TB10549	Offset Bracket Ass'y	1 set
14	TQ15464	Washer M5 5.3X10X1.0	1
15	TQ14669	Key Bolt 10	1
16	TQ14668	Spring 0.5X8.5X7	1
17	TQ14666	Push Button 10	1
18	TQ14667	Push Button Cap 10	1
19	TP02139	Hex. Socket Set Screw 4X6with Cone Point	1
20	TQ15437	Cover Cap	1
21	TB10555	Housing Ass'y	1 set
(22)	(TQ15424)	Housing	1
(23)	(TQ15455)	Label Model BB-10B	1
24	TQ07225	Ball Bearing 695ZZ	1
25	TQ07198	End Plate A	1
26	TQ15429	Cylinder	1
27	TP04225	Spring Pin 2X4 AW	1
28	TB10575	Blade Ass'y (5pcs/set)	1 set
29	TQ15428	Rotor	1
30	TP06322	Spacer 8X11X3	1
31	TQ15432	End Plate B	1
32	TQ15594	Ball Bearing 698ZZ NTN	1
33	TQ15438	Lock Screw	1
34	TQ15439	Drive Pulley	1
35	TQ15509	Hex. Nut M6	1
36	TQ10712	Decorative Screw	1
37	TQ15436	Belt Cover	1
38	TQ15444	Valve Bushing	1
39	TP14604	O-ring S-10	1

No.	Part No.	Part name	Qty	
40	TQ15440	FR Valve	1	
41	TQ15441	O-ring S-12.5	1	
42	TQ15442	Spacer 10X15.8X1.2	1	
43	TQ15443	Internal Retaining Ring C-16	1	
44	TP04067	O-ring S-4	1	
45	TP08812	O-ring S-25	1	
*2	46	TQ04715	Hex. Socket Head Cap Screw 4X8	2
47	TQ07339	Plunger Pin	1	
48	TQ07340	Spring 0.4X1.7X9	1	
49	TQ15458	Front Valve	1	
50	TB10657	Lock Ring Ass'y	1	
(51)	(TQ07618)	Hex. Socket Set Screw 3X3	1	
52	TP04690	O-ring S-5	1	
53	TQ15456	Valve Body	1	
54	TA93070	Valve Stem Ass'y	1	
55	TP11997	O-ring ks-7	1	
56	TP14601	Valv Cap	1set	
57	TP03695	Internal Retaining Ring C-12	1	
58	TQ10269	Parallel Pin 2.5X16	1	
59	TQ10255	Lock Lever Spring	1	
60	TQ10256	Lock Lever	1	
61	TQ10257	Throttle Lever	1	
62	TP15780	Spring Pin 3X24 AW	1	
63	TQ11497	Charge Nipple	1	
64	TQ15450	Muffler	1	
65	TQ15449	Hose Holder	1	
66	TQ15593	Nut for thin type M6×0.75	1	
67	CP28152	O-ring JASO-1012	1	
68	TQ04367	Exhaust Hose	1	
69	TB08135	Charge Hose J Ass'y	1set	
70	-	Abrasive Belt Z #100X10	1	

Standard Accessories

Canada 1-888-338-0103

No.	Part No.	Part name	Qty	
	TP14797	Hex. Socket Screw Key 1.5	1	
*1	70	-	Abrasive Belt Z #120X10	1
		-	Abrasive Belt Z #180X10	1
		-	Abrasive Belt Z #240X10	1
		TQ15460	Instruction Manual	1