

Exploded View/Parts List


CB-01 Exploded View/Parts List

⚠ CAUTION

- Users should never disassemble the tool.

This illustration is for reference only.

For repair or replacement of the tool, request service from the retailer where you purchased the tool or the nearest NITTO service member store.

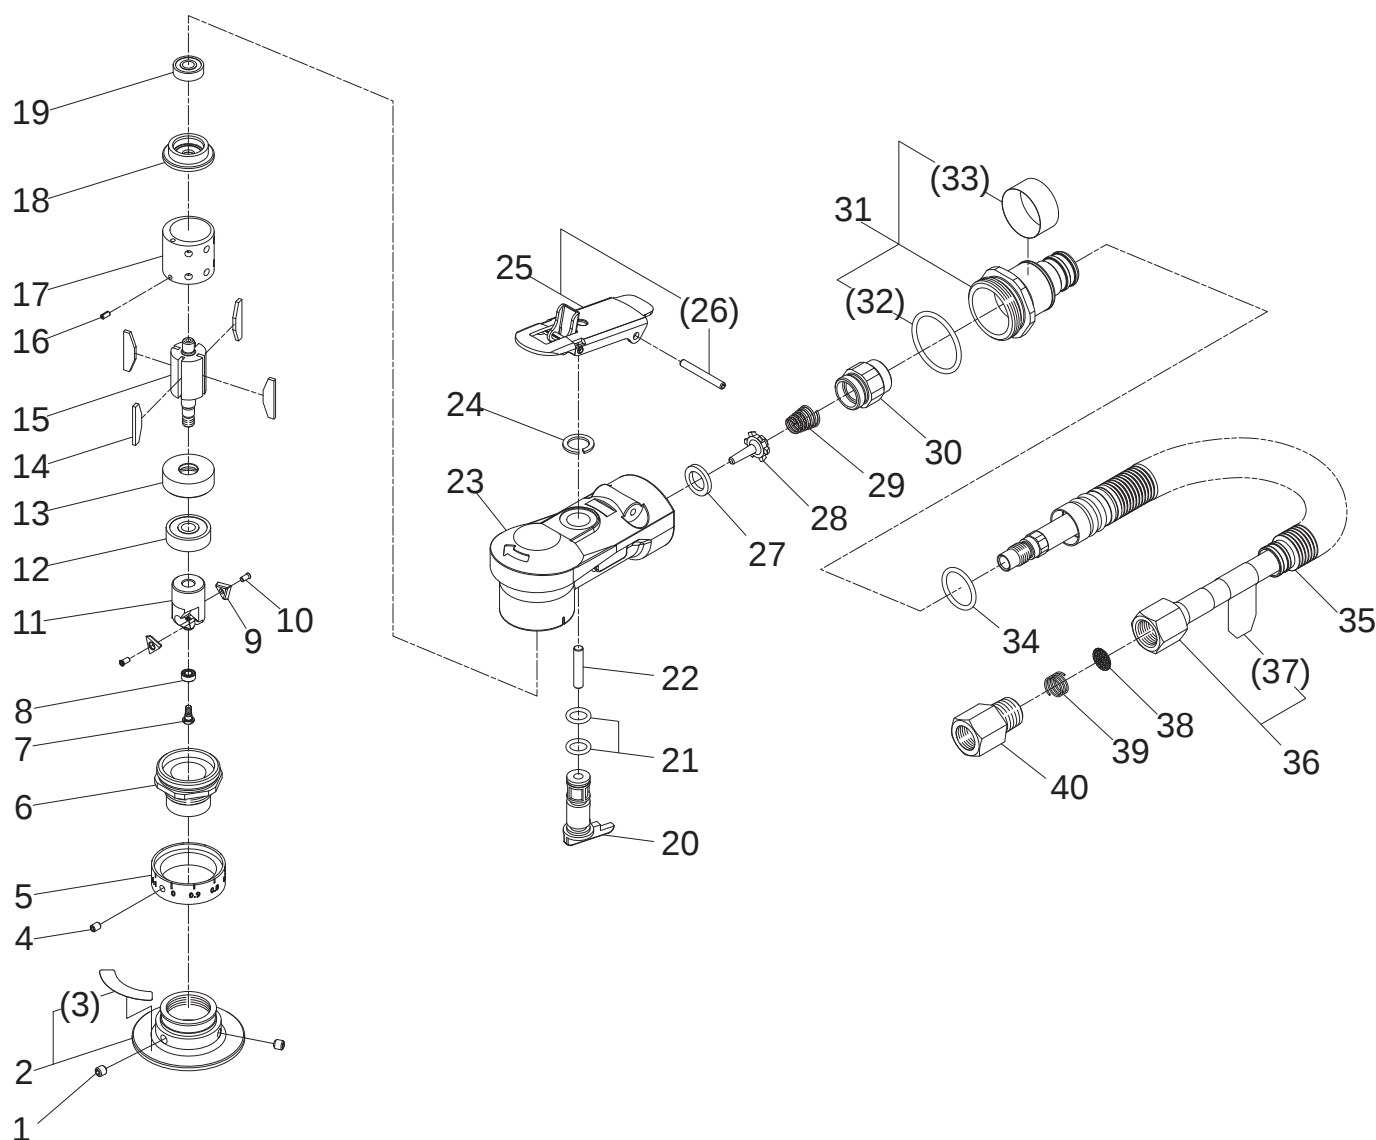

*1 indicates a consumable item, *2 indicates a commercial item. Parts in parentheses () are constituent parts of the assembly above.

No.	Part no.	Part name	Quantity
1	TP15643	Hex. Socket Set Screw 4×4	2
2	TB09245	Guide Plate Sub Ass'y	1 set
(3)	(TQ13684)	Label Caution	1
4	TQ11146	Hex. Socket Set Screw 3×4	1
5	TQ15534	Scale Ring	1
6	TQ13347	Lock Screw	1
7	TQ13354	Bearing Set Screw	1

No.	Part no.	Part name	Quantity
*1 *2	8	TQ13355 Ball Bearing 630ZZ	1
*1	9	TQ13368 Indexable Insert	2
	10	TQ13369 Indexable Insert Set Screw	2
	11	TQ13350 Holder	1
*1 *2	12	TP15408 Ball Bearing 626ZZ	1
	13	TQ13345 End Plate B	1
*1	14	TB09122 Blade Ass'y (4pcs.)	1 set
	15	TQ13342 Rotor	1
	16	TP04225 Spring Pin 2×4	1
	17	TQ13346 Cylinder	1
	18	TQ13344 End Plate A	1
*1 *2	19	TQ07225 Ball Bearing 695ZZ	1
	20	TQ13351 Adjust Valve	1
	21	TP12003 O-ring KS-5	2
	22	TQ13454 Parallel Pin B 4×20	1
	23	TQ13381 Housing	1
	24	TQ13374 Retaining Ring ISTW-10	1
	25	TB09088 Lever Ass'y	1 set
	(26)	(TQ13428) Spring Pin 3×25	1
	27	TQ04671 Seal Sheet 9×13.9×2	1
	28	TQ04664 Valve	1
	29	TQ04665 Conical Spring 0.8×6.4×11.6×21.8	1
	30	TQ13352 Connection	1
	31	TB09246 Hose Holder Ass'y	1 set
	(32)	(TP08812) O-ring S-25	1
	(33)	(TQ13683) Label Model	1
	34	CP28152 O-ring JASO-1012	1
	35	TQ04367 Exhaust Hose	1
	36	TB08130 Air Hose J Ass'y	1 set
	(37)	(TQ11519) Label Lubrication	1
	38	TQ13625 Filter	1
	39	TQ13621 Filter Spring	1
	40	TQ04709 Bushing R1/4×Rc1/4	1

Accessories

No.	Part no.	Part name	Quantity
	TQ13369	Indexable Insert Set Screw	2
	TQ13376	Spanner T-6F	1
	TP13892	Hex. Socket Screw Key 2	1
	TP02236	Bushing R1/4×NPT1/4	1
	TQ13632	Instruction Manual	1