


EXPLODED DIAGRAM : ECB-0203**⚠ WARNING**

This diagram is for your reference only. Do not attempt to service or repair the Tool. Do not take the Tool apart. Contact an authorized Nitto dealer for all service and repair of the Tool. Improper service and repair can cause accidents and service injuries. Never attempt to modify the Tool. Never attempt service or repair the Tool yourself.

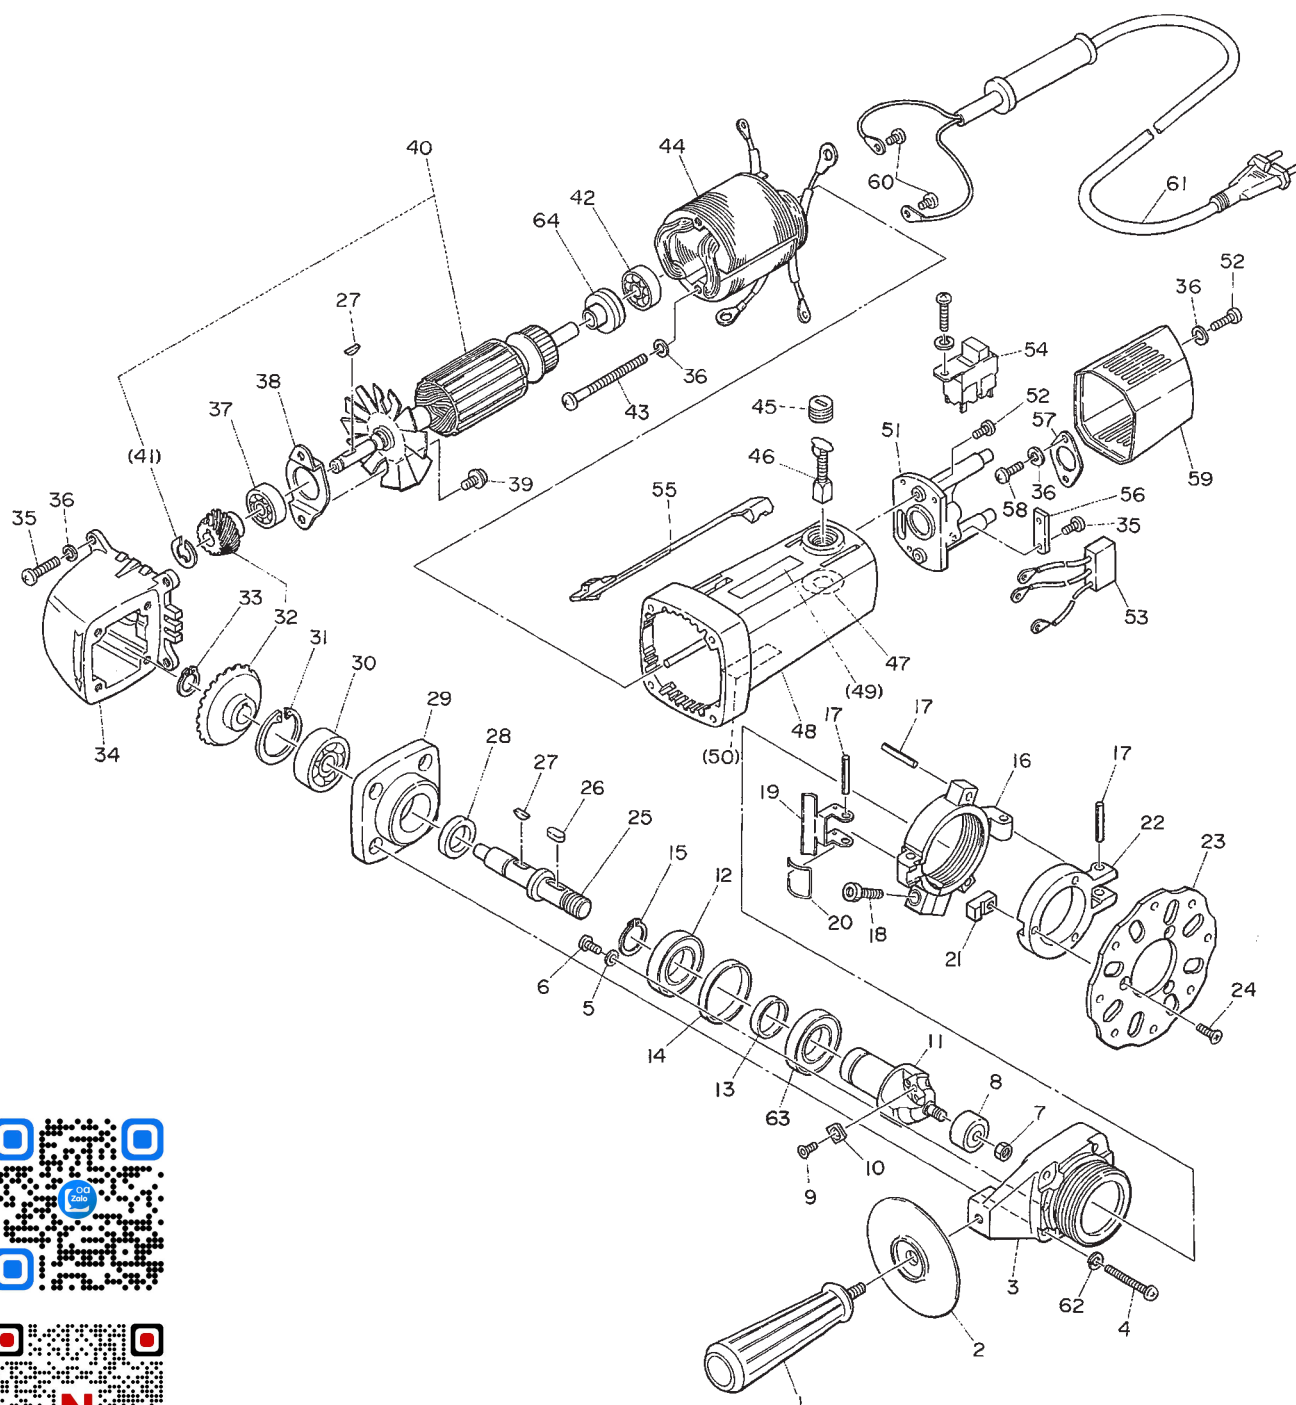

The part numbers with () are included in the Ass'y parts written above them.

No.	Part No.	Description	Qty	Price
1	TA91354	Sub Handle Ass'y	1 set	
2	TP16126	Grip Guard	1	
3	TQ03648	Bearing Case	1	
4	TP15163	Pan Head Screw 4 x 35	4	
5	TP00144	Washer M4	3	
6	TP02797	Pan Head Screw 4 x 6	3	
7	TP01924	Hex. Nut M6	1	
8	TB02856	Guide Sleeve O.D.22mm Ass'y	1 set	
9	TQ01629	Indexable Insert Set Screw 4 x 7	1	
10	TB01159	Indexable Insert with Hole 12.7 (10pcs. / set)	1 set	
11	TQ03649	Holder	1	
12	TP06385	Ball Bearing 6904ZZ	1	
13	TQ03650	Spacer 20.1 x 25 x 5	1	
14	TQ03651	Spacer 31.1 x 36.9 x 5	1	
15	CP03040	External Retaining Ring C-20	1	
16	TQ03655	Adjust Ring	1	
17	TP08389	Spring Pin 4 x 24	4	
18	TP07118	Hex. Socket Head Cap Screw 6 x 16	1	
19	TQ03658	Lever	1	
20	TQ03659	Lock Wire	1	
21	TQ03660	Stopper	1	
22	TQ03656	Swing Ring	1	
23	TQ03657	Circle Plate	1	
24	TP02750	Countersunk Head Screw 4 x 12	3	
25	TQ00827	Spindle	1	
26	TQ01370	Parallel Key both ends round 4 x 4 x 18	1	
27	TP03755	Woodruff Key 2.5 x 10	2	
28	TP16195	Dust Seal	1	
29	TP16119	Bearing Case	1	
30	TP03675	Ball Bearing 6200ZZ	1	
31	TP01173	Internal Retaining Ring C-30	1	
32	TB01097	Pinion Gear Ass'y	1 set	
33	TP04595	External Retaining Ring C-10	1	
34	TB00609	Gear Case Sub Ass'y	1 set	
35	TP16208	Pan Head Tapping Screw 4 x 16	6	
36	TP04234	Spring Washer M4	10	
37	TP11779	Ball Bearing 629DD	1	
38	TP16252	Bearing Supporter	1	

No.	Part No.	Description	Qty	Price
39	TP11245	Pan Head Screw 4 x 10	2	
40	TB08645	Rotor Sub Ass'y A	1 set	
41	(TQ00422)	Bowed Retaining Ring E BETW-6	1	
42	TP16251	Ball Bearing 627ZZ	1	
43	TP16254	Pan Head Screw 4 x 60	2	
44	TA9A444	Stator Ass'y	1 set	
45	TP16213	Brush Cap	2	
46	TA9A633	Carbon Brush Ass'y	1 set	
47	TP16266	Insulation Seat Metal	2	
48	TB08697	Motor Case Ass'y	1 set	
49	(TQ12767)	Label Warning CE Mark	1	
50	(TP16216)	Plate Nitto	1	
51	TP16256	Insulation Stand	1	
52	LP12832	Pan Head Tapping Screw 4 x 14	4	
53	TQ03965	Capacitor SKT	1	
54	TA99917	Switch Ass'y	1 set	
55	TA99916	Switch Lever Ass'y	1 set	
56	TP16261	Cord Clamp	1	
57	TP16262	Cord Stopper	1	
58	TP04235	Pan Head Screw 4 x 8	2	
59	TP16255	Motor Cover	1	
60	TP16292	Pan Head Screw 3.5 x 8	4	
61	TB02514	Electric Cord Ass'y	1 set	
62	TP04075	Spring Washer M4	4	
63	TQ11013	Ball Bearing 6904 LLB	1	
64	TQ12590	Insulation Board	1	

ACCESSORIES

No.	Part No.	Description	Qty	Price
	TP04004	Hex. Socket Screw Key 5	1	
	TQ03654	Ball Bearing 687ZZ	1	
	TP17014	Spanner 8 x 10	1	
	TQ01683	Spanner T-15D	1	
	TQ01629	Indexable Insert Set Screw 4 x 7	1	
		Indexable Insert with Hole 12.7 Ass'y	1	
	TQ03961	Gauge C3	1	
	TQ12768	Instruction Manual	1	
	TQ12769	Declaration of Conformity	1	