


EXPLODED DIAGRAM : HB-15B**⚠ WARNING**

This diagram is for your reference only. Do not attempt to service or repair the Tool. Do not take the Tool apart. Contact an authorized Nitto dealer for all service and repair of the Tool. Improper service and repair can cause accidents and service injuries. Never attempt to modify the Tool. Never attempt service or repair the Tool yourself.

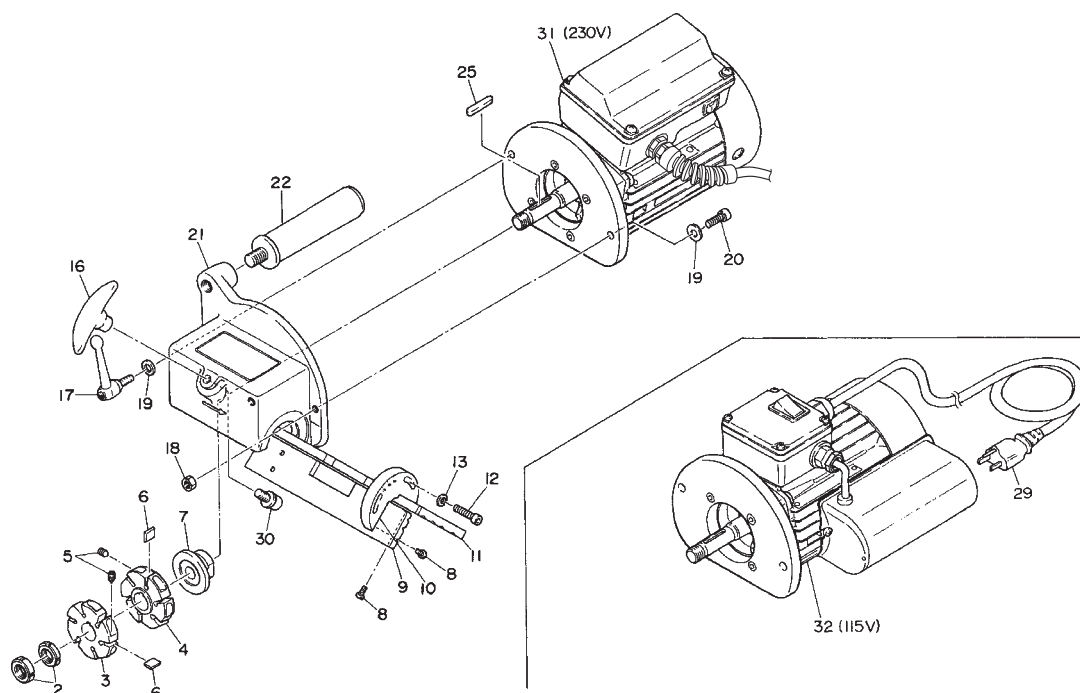

The parts numbers with () are included in the Ass'y parts written above them.

No.	Part No.	Description	Qty	Price
2	TP04157	Nut for Roller Bearing AN03	2	
3	TA9A066	Holder A Ass'y	1 set	
4	TA9A067	Holder B Ass'y	1 set	
5	(TP04689)	Hex. Socket Head set Screw 6 x 8	12	
6	TA9A093	Indexable Insert 12.7(12pcs. / Set)	1 set	
7	TQ11091	Adapter	1	
8	TQ00208	Hex. Socket Head Screw 6 x 12	8	
9	TQ00207	Plate C	1	
10	TP16124	Plate Guide	2	
11	TQ00205	Plate A	1	
12	TP06217	Hex. Socket Head Bolt 6 x 25	4	
13	TP00092	Plain Washer M6	4	
16	TA9A074	T Handle Ass'y	1 set	
17	TP16159	Clamp Lever	1	
18	TP08584	Hex. Nut M8	1	
19	TP10978	Plain Washer M8	2	
20	TP07353	Hex. Socket Head Bolt 8 x 30	1	
21	TA99911	Body Sub Ass'y	1 set	
22	TA92089	Sub Handle Ass'y	1 set	
25	TP16151	Sunk Key 5 x 5 x 36	1	
29	TA9A757	Cabtyre Cable Ass'y	1 set	

Accessories

No.	Part No.	Description	Qty	Price
30	TQ03353	Hex. Socket Head Cap Screw 10 x 30 with Spring Washer	1	
31	TB02203	Motor Ass'y (220 V- 240 V)	1 set	
32	TB02204	Motor Ass'y (110 V- 120 V)	1 set	
	TP16613	T Wrench Key	1	
	TP01939	Hex. Socket Screw Key 4	1	
	TP04004	Hex. Socket Screw Key 5	1	
	TP00170	Hex. Socket Screw Key 6	1	
	TP04309	Spanner 24 x 27	1	
	TP16410	Hook Spanner 25 - 28	1	
	TQ00206	Plate B	1	
	TA99834	Roller Bracket Ass'y	1 set	
	TP16600	Spacer A	1	
	TP16601	Spacer B	1	
	TA9A093	Indexable Insert 12.7(12pcs. / Set)	1 set	
	TQ13535	Instruction Manual	1	
	TQ13531	Declaration of Conformity	1	

www.npower.com.vn

Tài liệu được tổng hợp bởi đội ngũ kỹ thuật của **NPOWER**
Bản quyền nội dung thuộc về **NITTO KOHKI**



Powered by **NAVITECH** | www.navitech.co