


## EXPLODED DIAGRAM : LS-10

**⚠ WARNING**

This diagram is for your reference only. Do not attempt to service or repair the Tool. Do not take the Tool apart. Contact an authorized Nitto dealer for all service and repair of the Tool. Improper service and repair can cause accidents and service injuries. Never attempt to modify the Tool. Never attempt service or repair the Tool yourself.

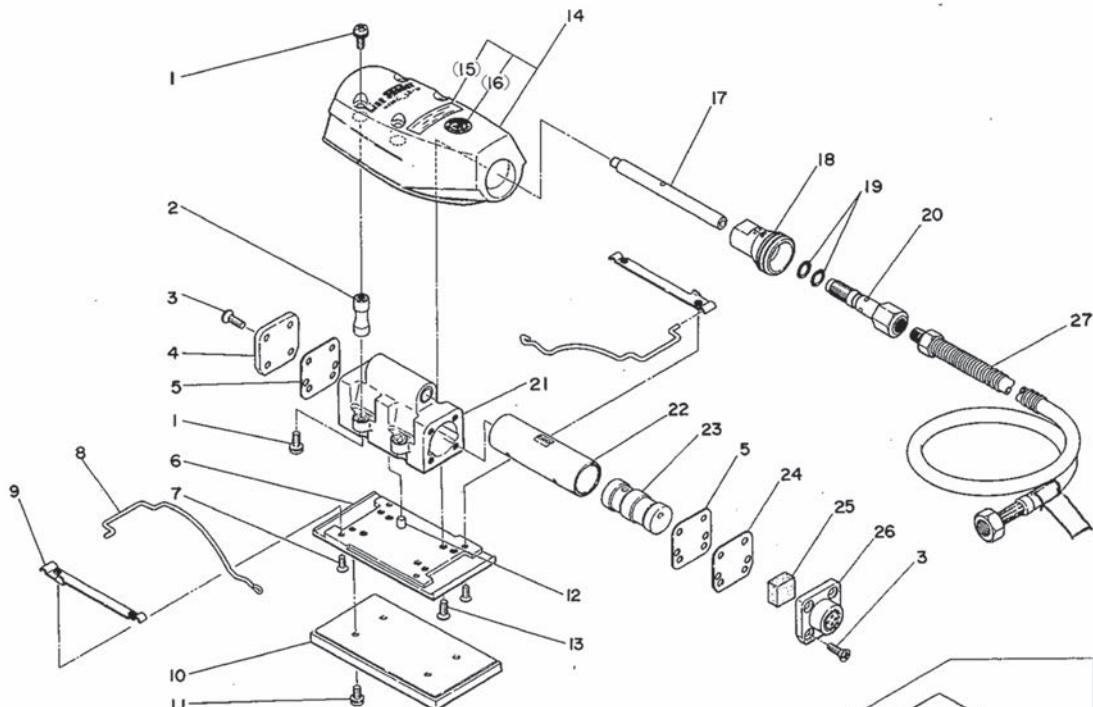

[www.npower.com.vn](http://www.npower.com.vn)

Tài liệu được tổng hợp bởi đội ngũ kỹ thuật của NPOWER  
Bản quyền nội dung thuộc về NITTO KOHKI



Powered by NAVITECH | [www.navitech.co](http://www.navitech.co)

The part numbers with ( ) are included in the Ass'y parts written above them.

No.	Part No.	Description	Qty	Price
1	TP11245	Pan Head Screw M4 x 10	8	
2	TA96664	Rubber Support Ass'y	4 sets	
3	TP04217	Raised Countersunk Head Screw M4 x 10	8	
4	TP11249	Cap A	1	
5	TP11251	Packing	2	
6	TP11259	Base Plate	1	
7	TQ10725	Hex. Socket Countersunk Head Screw M3 X 6	4	
8	TP11260	Clamp Spring	2	
9	TP11261	Clamp Stopper	2	
10	TA96665	Rubber Pad Ass'y	1 set	
11	TP06290	Pan Head Screw M4 x 8	12	
12	TP12208	Pin 4 x 6.5	1	
13	TP00123	Countersunk Head Screw M4 X 8	4	
14	TB08686	Housing Ass'y	1 set	
15	(TQ12752)	Label Warning CE Mark	1	
16	(TP04218)	Label NITTO	1	
17	TP11244	Guide Shaft	1	

No.	Part No.	Description	Qty	Price
18	TP05699	Trigger	1	
19	TP12004	O Ring P-10	2	
20	TP11258	Valve Nipple	1	
21	TA96660	Cylinder Case Sub Ass'y	1 set	
22	TP11247	Cylinder	1	
23	TP11248	Piston	1	
24	TP11254	Plate	1	
25	TP11253	Filter	1	
26	TP11250	Cap B	1	

## ACCESSORIES

No.	Part No.	Description	Qty	Price
27	TB07904	Hose E Ass'y	1	
	TP02236	Bushing R1/4 x NPT1/4	1	
28	TA96738	Base Plate A Ass'y	1	
29	TA96739	Block Rubber Pad Sub Ass'y	1	
		Abrasive Paper #240	5	
		Abrasive Paper #320	5	
	TQ12755	Instruction Manual	1	
	TQ12756	Declaration of Conformity	1	