

Exploded view/parts list are subject to change at any time without notice. (As of Aug. 2023)

Exploded View/Parts List


MYG-70 Exploded View/Parts List

⚠ CAUTION

- Users should never perform disassembly of the tool.

This illustration is for reference only.

For repair or replacement of the tool, request service from the retailer where you purchased the tool or the nearest NITTO service member store.

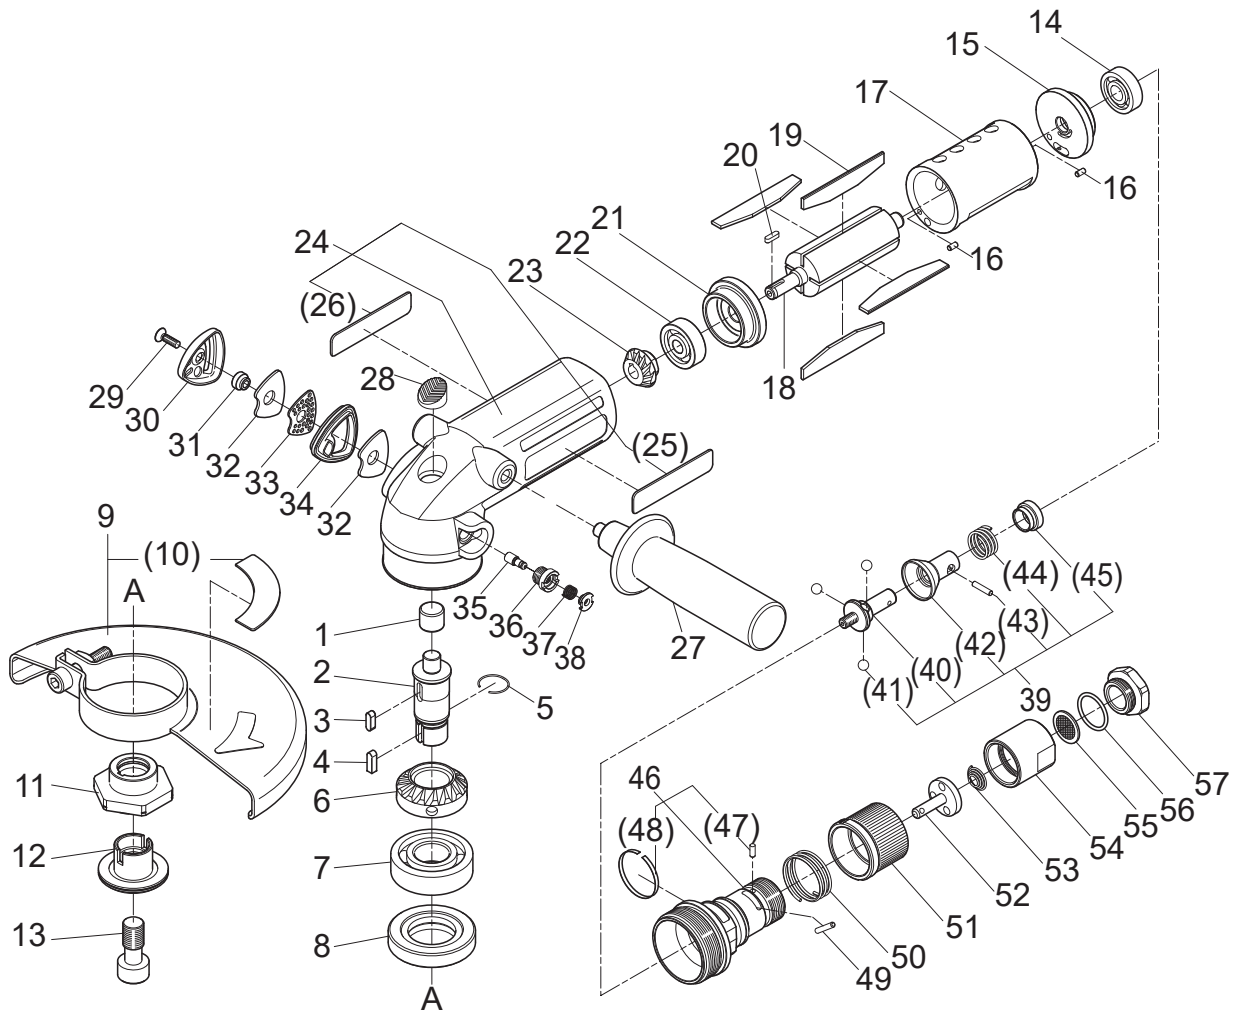

*1 indicates a consumable item, *2 indicates a commercial item. Parts inside () are components of the above assembly.

No.	Part no.	Part name	Quantity
*1 *2	1	TQ12088 Needle Bearing BK1012	1
	2	TQ15021 Spindle	1
	3	TP09933 Parallel Key 4×4×12 Both Ends Round	1
	4	TQ14906 Parallel Key 4×4×13.3 One End Round	1
	5	TQ15022 Stop Ring I-0.9×18.5×8.6	1
*1	6	TQ12547 Gear 1.5×27 Right	1
*1 *2	7	TP04138 Ball Bearing 6204ZZ	1
	8	TB08263 Bearing Set Screw Ass'y	1 set
	11	TQ15023 Driving Flange	1
	12	TQ15258 Outer Flange 7/8	1
	13	TP11688 Outer Flange Bolt 12×25	1

No.	Part no.	Part name	Quantity
*1 *2	14	TP06242	Ball Bearing 629ZZ
	15	TQ12063	End Plate A
	16	TP04061	Spring Pin 3×6 AW
	17	TQ16324	Cylinder
	18	TQ14928	Rotor
*1	19	TB11383	Blade Ass'y (4 pcs.)
	20	TP10130	Parallel Key Both Ends Round 3×3×10
	21	TQ12064	End Plate B
*1 *2	22	TQ12087	Ball Bearing 638ZZ
*1	23	TQ12070	Pinion 1.5×14 Left
	24	TB10370	Housing Sub Ass'y
	(25)	(TQ14942)	Label Model
	(26)	(TQ15255)	Label Warning
	28	TQ14980	Plug 70
	29	TQ14946	+ Countersunk Head Screw 4×14
	30	TQ15090	Exhaust Cover 70
	31	TQ15140	Spacer
*1	32	TQ16688	Muffler 40R
	33	TQ15142	Exhaust Plate 70
	34	TQ15141	Packing Cover 70
	35	TQ14863	Lock Pin
	36	TQ14865	Pin Guide
	37	TQ14864	Spring 0.6×6.9×8
	38	TQ14866	Lock Button
	39	TB10092	Governor Ass'y
	(40)	(TQ12813)	Base
	(41)	(TP01566)	Steel Ball Ø6
	(42)	(TQ12067)	Sleeve
	(43)	(TQ12090)	Needle Roller 2.5×13.8
	(44)	(TQ12069)	Spring 1.4×15.5×14.5
	(45)	(TQ12068)	Stopper
	46	TB08254	Valve Holder Sub Ass'y A
	(47)	(TQ15156)	Dowel Pin A Type 3×8
	(48)	(TQ13076)	Label Off
	49	TQ12495	Valve Pin 3×17.5
	50	TQ12085	Spring 1.6×28×16
	51	TQ14932	Valve Ring
	52	TB08255	Feed Valve Ass'y
	53	TQ12086	Conical Spring 1×6.2×21.5×8
	54	TQ12492	Connection A
	55	TP01658	Filter
	56	CP25821	O-Ring JASO-1020
	57	TQ12493	Connection B

Accessories

No.	Part no.	Part name	Quantity
9	TB10371	Wheel Guard Ass'y	1 set
(10)	(TQ15256)	Label Warning Wheel Guard	1
27	TB08265	Handle Ass'y	1 set
	TQ02350	Bushing R 3/8 × NPT 3/8	1
	TP00170	6 mm Hex. Socket Screw Key	1
	TP11723	10 mm Hex. Socket Screw Key	1
	TQ15259	Instruction Manual	1