

Exploded diagram/parts list are subject to change at any time without notice. (As of Sep. 2017)

Exploded View/Parts List


MYS-40 Exploded View/Parts List

⚠ CAUTION

- Users should never perform disassembly of the tool.

This illustration is for reference only.

For repair or replacement of the tool, request service from the retailer where you purchased the tool or the nearest NITTO service member store.

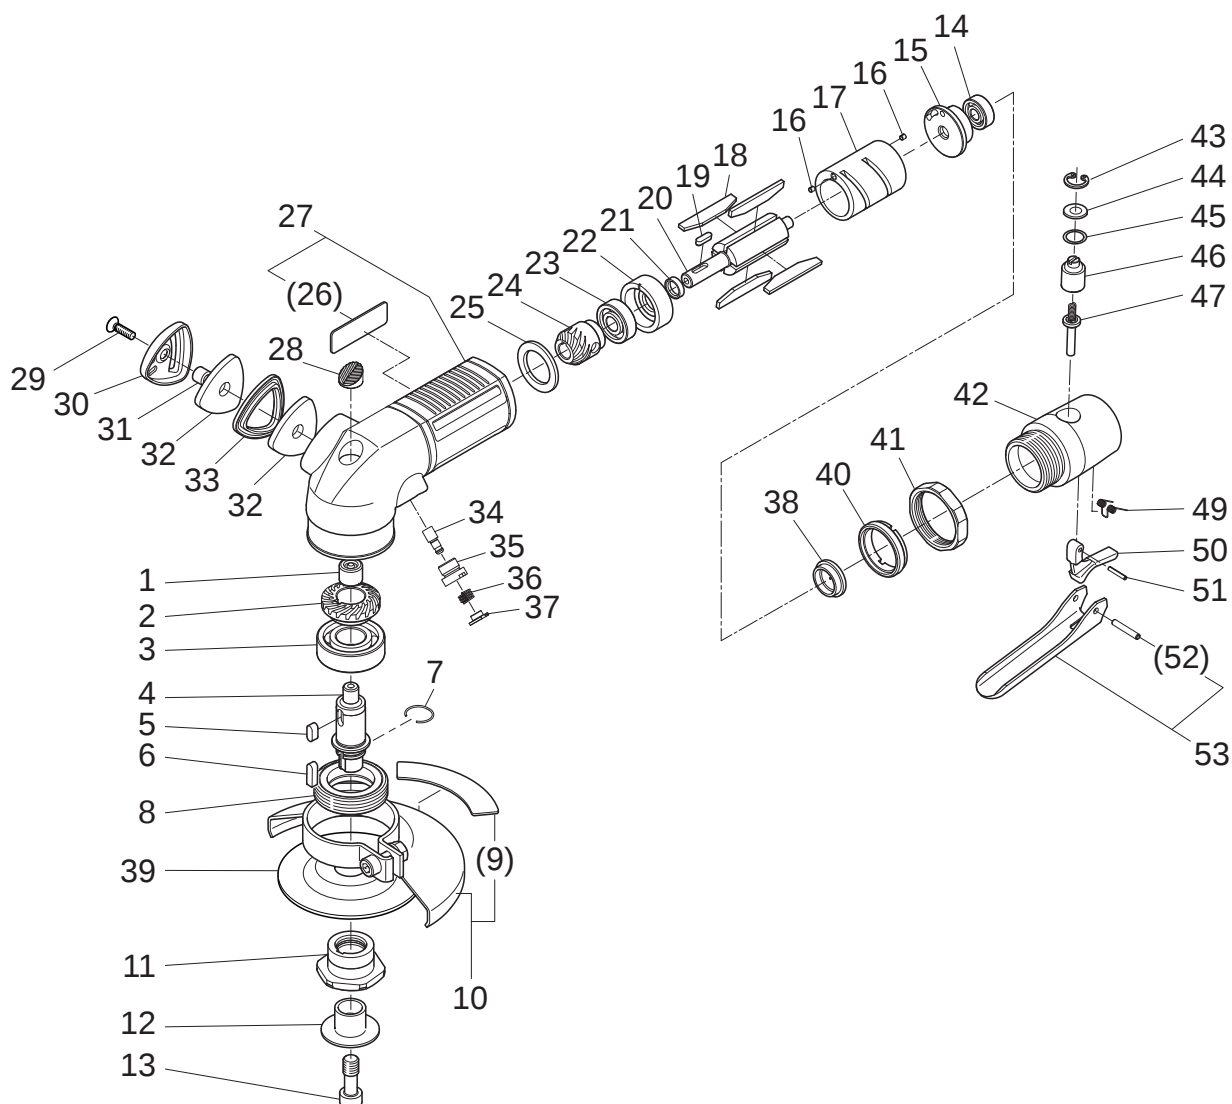

*1 indicates a consumable item, *2 indicates a commercial item. Parts inside () are components of the above assembly.

	No.	Part no.	Part name	Quantity
*2	1	TQ00893	Needle Bearing BK0810	1
*1	2	TQ14867	Spiral Bevel Gear 1.25×25	1
*1 *2	3	TP01609	Ball Bearing 6202ZZ	1
	4	TQ14868	Spindle	1
	5	TP00502	Parallel Key 4×4×9.5 Both Ends Round	1
	6	TQ14906	Parallel Key 4×4×13.3 One End Round	1
	7	TQ14977	Stop Ring I-0.8×15.4	1

	No.	Part no.	Part name	Quantity
*1 *2	8	TB08883	Bearing Set Screw Ass'y	1 set
	10	TB10499	Wheel Guard Ass'y	1 set
	(9)	(TQ15325)	Label Warning Wheel Guard	1
	11	TQ14885	Driving Flange	1
	12	TQ14991	Outer Flange Ø16	1
	13	TP09932	Outer Flange Bolt	1
	14	TP03933	Ball Bearing 606ZZ	1
	15	TQ14869	End Plate A	1
	16	TP00496	Spring Pin 2.5×6 AW	2
	17	TQ15014	Cylinder	1
*1	18	TB10330	Blade Ass'y	1 set
*1 *2	19	TP10130	Parallel Key 3×3×10 Both Ends Round	1
	20	TQ14940	Rotor	1
	21	TP06322	Spacer 8×11×3	1
	22	TP14931	End Plate B	1
	23	TP00468	Ball Bearing 608ZZ	1
	24	TQ14873	Spiral Bevel Gear L1.25×13	1
	25	TP10101	Spacer 19×28×2	1
	27	TB10425	Housing Sub Ass'y	1 set
	(26)	(TQ15291)	Label Warning	1
	28	TQ15005	Plug 40S	1
*1	29	TQ14946	+ Countersunk Head Screw 4×14	1
	30	TQ14878	Exhaust Cover	1
	31	TQ14880	Spacer	1
	32	TQ14881	Muffler	1
	33	TQ14879	Packing Cover	1
	34	TQ14863	Lock Pin	1
	35	TQ14865	Pin Guide	1
	36	TQ14864	Spring 0.6×6.9×8	1
	37	TQ14866	Lock Button	1
	38	TP10110	Cap	1
*1	39	TP14948	Back-up Pad	1
	40	TP10098	Lock Nut	1
	41	TP03468	Lock Ring	1
	42	TP15211	Valve Main Unit	1
	43	TP03695	Internal Retaining Ring C-12	1
	44	TP06326	Spacer 6×12×1.2	1
	45	TP11997	O-Ring KS-7	1
	46	TP06325	Adjust Valve	1
	47	TA99300	Valve Stem Ass'y	1 set
	49	TP14340	Torsion Spring	1
*1	50	TP14339	Lock Lever	1
	51	TP09434	Spring Pin 2×12	1
	53	TA96253	Throttle Lever Ass'y	1 set
	(52)	(TP01921)	Spring Pin 3×18	1

Accessories

No.	Part no.	Part name	Quantity
	TP04004	5 mm Hex. Socket Screw Key	1
	TP00170	6 mm Hex. Socket Screw Key	1
	TP02236	Bushing R 1/4×NPT 1/4	1
	TQ15292	Instruction Manual (this document)	1