

Blade Exchange 95 32 060 / 100



1. Remove the conical pin from the handle. Use a hammer and a parallel pin punch.

Be careful! It is a conical pin. Check at first from which side you hammer!



Blade Exchange 95 32 060 / 100



Conical pin Form A 4 x 18 DIN 1



2. Remove the handle



3. Remove the conical bushing



3. Now you can remove the blade





Lubricate the tool with oil and grease

4. Assembling in reverse sequence



Tongue and groove principle



Blade Exchange 95 32 060 / 100




Blade Exchange 95 32 060 / 100




Check the position of the two holes



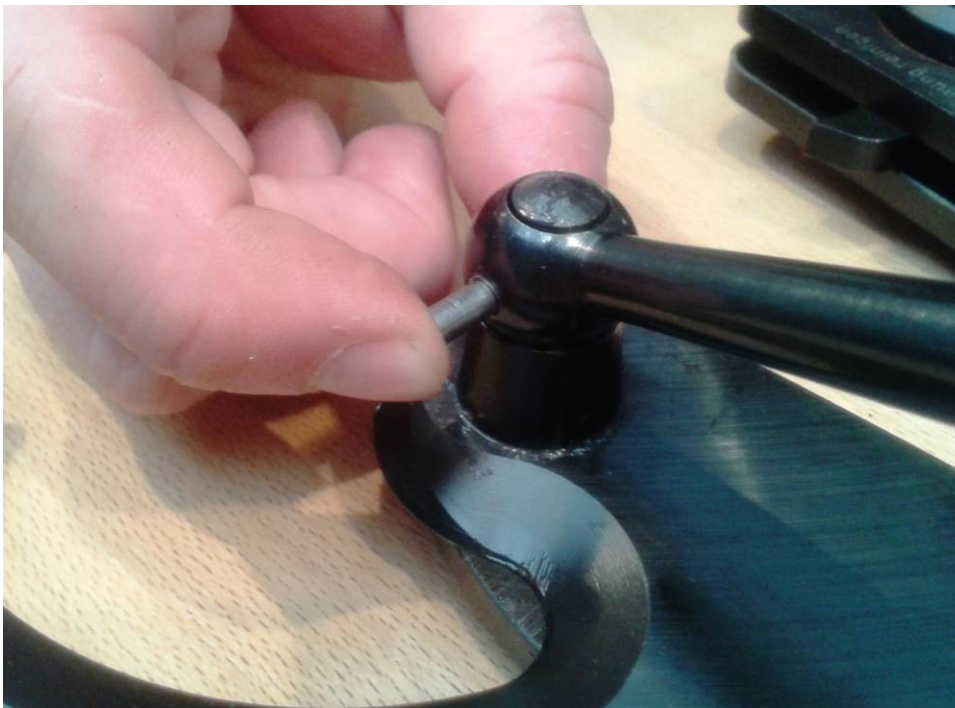

Blade Exchange 95 32 060 / 100

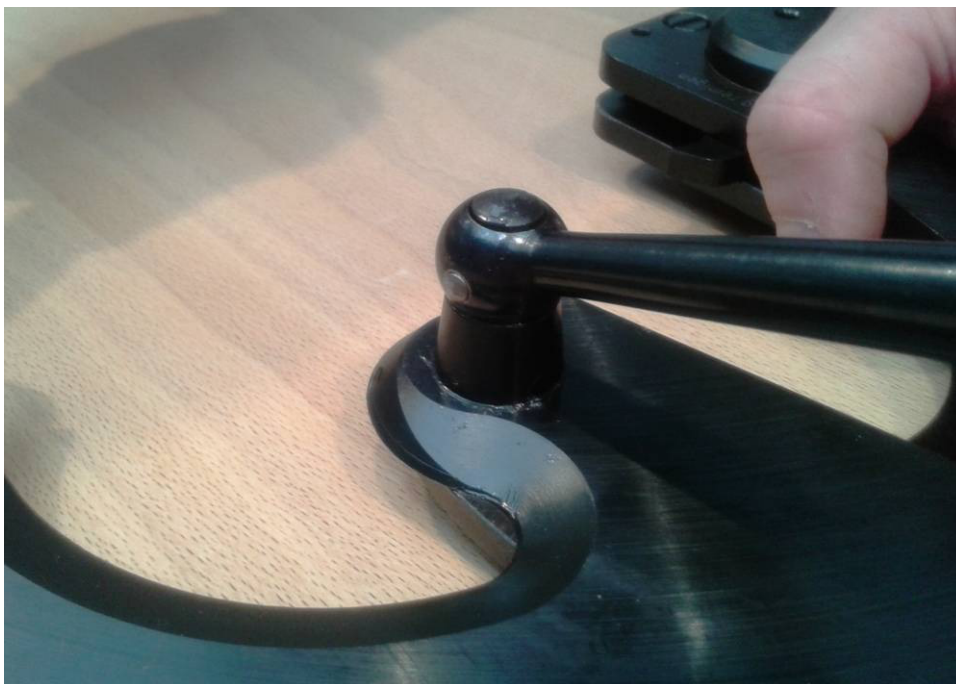

Ready!