

Exploded View/Parts List


MYG-40L Exploded View/Parts List

⚠ CAUTION

- Users should never perform disassembly of the tool.

This illustration is for reference only.

For repair or replacement of the tool, request service from the retailer where you purchased the tool or the nearest NITTO service member store.

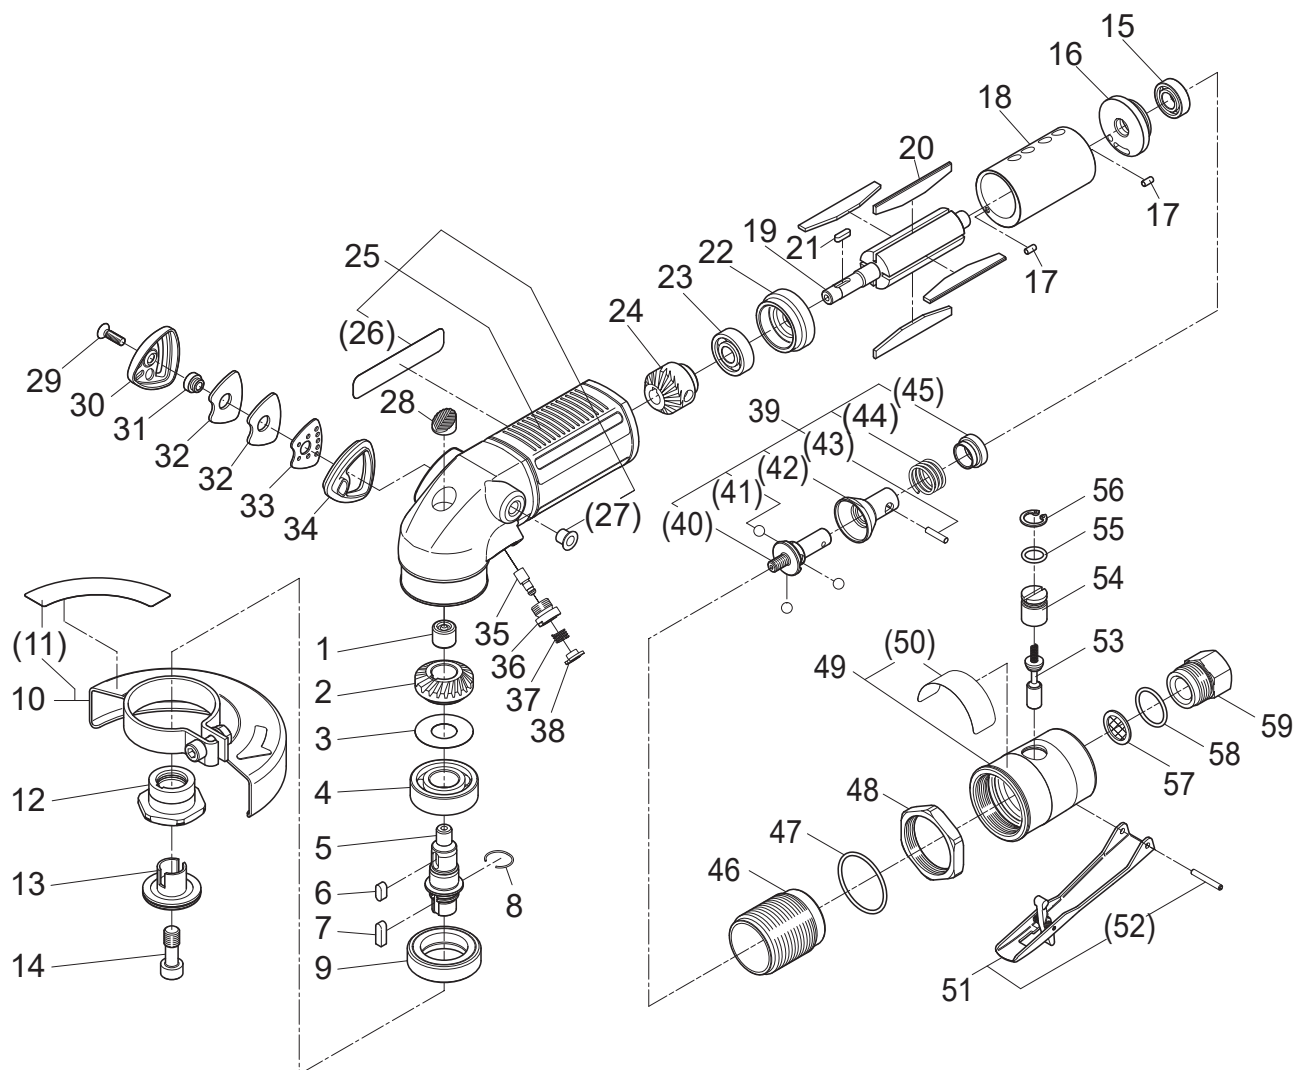

*1 indicates a consumable item, *2 indicates a commercial item. Parts inside () are components of the above assembly.

	No.	Part no.	Part name	Quantity
*1 *2	1	TQ00893	Needle Bearing BK0810	1
*1	2	TQ12725	Gear 1.5×19 Right	1
	3	TQ12887	Plate 13.1×30×0.2	1
*1 *2	4	TP01609	Ball Bearing 6202ZZ	1
	5	TQ14922	Spindle	1
	6	TP00502	Parallel key 4×4×9.5 Both Ends Round	1
	7	TQ14906	Parallel key 4×4×13.3 One End Round	1
	8	TQ14977	Stop Ring I-0.8×15.4×7.0	1
	9	TB08883	Bearing Set Screw Ass'y	1 set
	10	TB10335	Wheel Guard Ass'y	1 set
	(11)	(TQ15217)	Label Warning Wheel Guard	1

TQ16314-1 08/2022

	No.	Part no.	Part name	Quantity
*1 *2	12	TQ14885	Driving Flange	1
	13	TQ15218	Outer Flange 16	1
	14	TP09932	Socket Cap Screw 8×8.5 For Outer Flange	1
	15	TQ12782	Ball Bearing 699ZZ	1
	16	TQ13029	End Plate A	1
	17	TQ15529	Spring Pin 3×6 AW	2
	18	TQ13033	Cylinder	1
	19	TQ13032	Rotor	1
	20	TB11385	Blade Ass'y (4 pcs.)	1 set
	21	TP10130	Parallel key 3×3×10 Both Ends Round	1
*1 *2	22	TQ13030	End Plate B	1
	23	TP10133	Ball Bearing 609ZZ	1
	24	TQ12726	Pinion 1.5×14 Left	1
*1	25	TB11342	Housing Sub Ass'y	1 set
	(26)	(TQ15216)	Label Warning	1
	(27)	(TQ13074)	Cap 7.2	1
*1	28	TQ14979	Plug 40	1
	29	TQ14950	+ Countersunk Head Screw 4×16	1
	30	TQ15090	Exhaust Cover 70	1
	31	TQ15140	Spacer	1
	32	TQ16688	Muffler 40R	2
	33	TQ16641	Exhaust Plate 40R	1
	34	TQ15402	Packing Cover	1
	35	TQ14863	Lock Pin	1
	36	TQ14865	Pin Guide	1
	37	TQ14864	Spring 0.6×6.9×8	1
	38	TQ14866	Lock Button	1
	39	TB08676	Governor Ass'y	1 set
	(40)	(TQ12813)	Base	1
	(41)	(CP03282)	Steel Ball 7/32	3
	(42)	(TQ12067)	Sleeve	1
	(43)	(TQ12090)	Needle Roller 2.5×13.8 Type-F	1
	(44)	(TQ13035)	Spring 1.4×15.5×16.3	1
	(45)	(TQ12068)	Stopper	1
	46	TQ12777	Adapter	1
	47	TQ12780	O-ring JASO-1033	1
	48	TQ12778	Lock Ring	1
	49	TB11334	Valve Body Ass'y	1 set
	(50)	(TQ16313)	Label Specification	1
	51	TB08669	Lever Ass'y	1 set
	(52)	(TP13893)	Spring Pin 3×22 AW	1
	53	TB05591	Throttle Valve Ass'y	1 set
	54	TP04394	Adjust Valve	1
	55	TP11992	O-ring KS-9	1
	56	TP03473	Internal Retaining Ring C-14	1
	57	TP01658	Filter	1
58	CP25821	O-ring JASO-1020	1	
59	TQ12671	Bushing M23×Rc 3/8	1	

Accessories

No.	Part no.	Part name	Quantity
	TP04004	5 mm Hex. Socket Screw Key	1
	TP00170	6 mm Hex. Socket Screw Key	1
	TQ02350	Bushing R 3/8×NPT 3/8	1
	TQ16314	Instruction Manual	1