

# ST-1101/ST-1202/ST-1101D/ST-1202D

## Fume Extractor

### Features



- Primary, medium, and high-efficiency filters that can be quickly replaced.
- Brushless vortex fan with strong suction power.
- Reduce operational noise.

### Specification

Model	ST-1101	ST-1101D	ST-1202	ST-1202D
Voltage	AC 230V±10% 50Hz (110V±10% 60Hz)			
Power	160W		180W	
Work position	1		2	
System flow	240m³/H(±10%)		150m³/H*2(±10%)	
Filter Efficiency (0.3 micron)	99.97%			
IoT Function	No	RS485	No	RS485
Remote control	No	Yes	No	Yes
Flexi tube	1.3m Customizable length			
Dimensions (Main Unit)	465(L)x250(W)x480(H)mm			
Weight	≈17kg		≈18.2kg	

### Package List

Model	Package list			
ST-1101	Extractor host x1	Flexi tube x1	Silicone funnel nozzle x1	Primary filter x4 Machine foot pads x4 Power cord x1 User manual x1 PVC duct pipe x1 Certificate x1
ST-1202	Extractor host x1	Flexi tube x2	Silicone funnel nozzle x2	Primary filter x4 Machine foot pads x4 Power cord x1 User manual x1 PVC duct pipe x1 Certificate x1
ST-1101D	Extractor host x1	Flexi tube x1	Silicone funnel nozzle x1	Primary filter x4 Machine foot pads x4 Power cord x1 User manual x1 PVC duct pipe x1 Roller x4 Remote control x1 Certificate x1
ST-1202D	Extractor host x1	Flexi tube x2	Silicone funnel nozzle x2	Primary filter x4 Machine foot pads x4 Power cord x1 User manual x1 PVC duct pipe x1 Roller x4 Remote control x1 Certificate x1

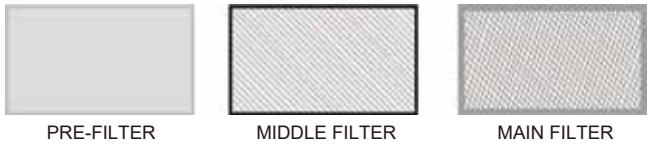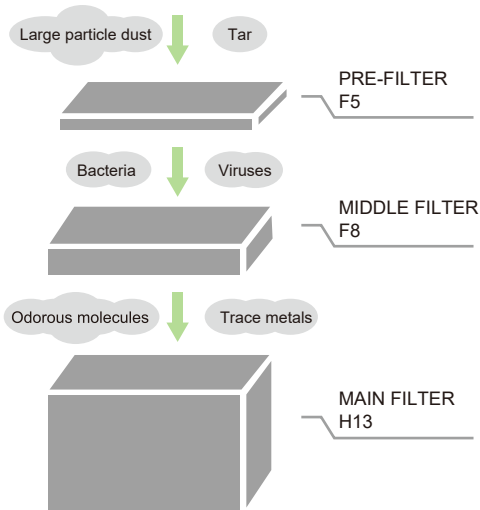


- 1.The relatively dense side of the pre-filterfaces down.
- 2.The sequence of filters shall be subject to left diagram.  
Disorganization is strictly forbidden.
- 3.Suggestions on replacement cycle of filters:  
a.PRE-FILTER 10-15 days  
b.MIDDLE FILTER 3-6 months  
c.MAIN FILTER 6-9 months  
(Remark: The actual replacement cycles of filtersshall be subject to thepollution levels of differentsites.)

## Fume Extractor Accessories

<p>Square transparent exhaust hood</p>  <p>470x370mm</p> <p>D-1375B(for moxibustion)</p>	<p>Square transparent exhaust hood</p>  <p>650x420mm</p> <p>D-1375C(for moxibustion)</p>	<p>Round transparent exhaust hood</p>  <p>φ420mm</p> <p>D-1375D(for moxibustion)</p>	<p>Square Funnel Nozzle</p>  <p>210x130mm</p> <p>D-1375</p>	<p>Round Funnel Nozzle</p>  <p>φ150mm</p> <p>D-1375A</p>	<p>Round Funnel Nozzle</p>  <p>φ150mm</p> <p>D-1375E</p>
<p>Tube connector</p>  <p>φ75mm</p> <p>B-1175</p>	<p>Tube connector</p>  <p>φ75mm</p> <p>B-1175A</p>	<p>Flexible tube</p>  <p>φ75mm</p> <p>A-1075</p>	<p>Flexible tube</p>  <p>φ75mm</p> <p>A-1075A(with valve)</p>	<p>Flexible tube</p>  <p>φ55mm</p> <p>A-1055</p>	<p>Flexible tube</p>  <p>φ55mm</p> <p>A-1055A(with valve)</p>
<p>Extraction arm</p>  <p>450+350+350+200mm</p> <p>A-1063</p>	<p>Extraction arm</p>  <p>450+350+350+200mm</p> <p>A-1063A(with valve)</p>	<p>Main filter</p>  <p>388x202x270mm</p> <p>C-1200A1 (for lampblack)</p>	<p>Washed filter</p>  <p>367x182x18mm</p> <p>C-1200D1 (for lampblack)</p>	<p>Pre-filter</p>  <p>367x182x5mm</p> <p>C-1200D(for lampblack)</p>	<p>Pre-filter</p>  <p>367x182x10mm</p> <p>C-1200C</p>
<p>Medium efficiency filter</p>  <p>367x182x55mm</p> <p>C-1200B</p>	<p>Main filter</p>  <p>388x202x270mm</p> <p>C-1200A</p>	<p>Nylon suction tube</p>  <p>φ80mmx2500mm</p> <p>A-1250</p>	<p>Nylon suction tube</p>  <p>φ80mmx1000mm</p> <p>A-1100</p>	<p>Table clamp</p>  <p>B-1175-2</p>	<p>PVC duct pipe</p>  <p>E-1060</p>



Wanxiang bamboo joint tube can bend freely and be easily placed in smoking areas

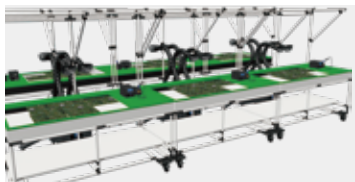

Factory assembly line



Laboratory / Personal Studio